



— est. 1964 —

Installation Instructions

Atlanta Fitted Next Generation

Complete Collection

Contents

	Page
<u>Bathroom Furniture Assembly Instructions Introduction</u>	2
<u>Preparing for Installation</u>	3-6
<u>Pull Out Base Units</u>	7- 13
<u>Base/Wall Units</u>	14-19
<u>Basin Units</u>	20-26
<u>Bath Panels & Corner Posts & Door Infill</u>	27-29
<u>Drawer Base Units</u>	30-37
<u>Drawer Basin Units</u>	38-44
<u>Tall Units</u>	45-53
<u>WC Unit with Legs</u>	54-59
<u>WC Unit Pre 2026</u>	59-61
<u>300 Slimline WC Tall Wall Unit</u>	62-71
<u>200 Toilet Roll Base Unit</u>	72-78
<u>Lomond Basin Configurations</u>	79-91
<u>Plinth Fitting</u>	92-93
<u>White High Gloss Cabinet End Panel</u>	94-95
<u>Guarantee</u>	96

Bathroom Furniture Assembly Instructions Introduction

Product Identification

All units can be easily identified from the labels on the packaging. These labels include a description and product batch numbers. In the unlikely event of any missing items, these numbers should be quoted when contacting your supplier.

Please inspect all products carefully before installation.

The guarantee does not cover any subsequent installation costs incurred if faults which would have been evident at the time of delivery are discovered after installation.

Installation Guide and Assembly Manual

It is recommended that this guide should be read before any installation of units begins. Always unpack units carefully and check the contents before discarding the packaging as small items may still be in the packaging. To protect units from scratches only lay them on a clean flat surface.

Electrical

Carrying out work in a bathroom that requires any addition or alteration to existing circuits could be notifiable to your local building control department to ensure it meets the correct safety standards. Generally, any work carried out to the circuit within a specific zone close to the bath or shower unit is considered notifiable. A straightforward way of meeting the requirements is to use a contractor who is registered with a Competent Person Scheme such as NICEIC or ELECSA. They can self-certify the work and notify the local building control department on your behalf.

Sanitaryware

Basins

Any unit edges around wash basins must be sealed with a waterproof agent or sealer.
Basins should be levelled on a bead of silicon onto the base unit if possible before the final water and waste connections are made.

W/C Units

You will need to make cut-outs for pipes and cistern controls as directed by the Manufacturer's instructions or templates, remembering to seal any raw edges. The cistern will require fixing to the cross rail. (These fixings are not supplied)

Please note: These units are designed for back-to-wall pans as well as suspended "wall hung" pans when used with a suitable suspension frame.

Guidelines for Care and Maintenance

To maintain the appearance and prolong the life of your new bathroom products we recommend the following,

Furniture

Wipe spills up immediately with a clean soft damp cloth as excessive amounts of spillage or condensation can cause deterioration of the woodwork. We recommend that furniture be cleaned with a soft damp cloth and warm soapy water. Avoid using cleaners or polishes that contain abrasives, solvents, acid or ammonia.

Mirrors

Wipe off excessive moisture or condensation, clean with a soft cloth. Avoid using cleaners that contain abrasives, solvents, acid or ammonia.

Ceramic Sanitaryware

Clean with a soft damp cloth and warm soapy water; rinse with clean water and polish with a soft cloth. Avoid using cleaners that contain abrasives, solvents, acid or ammonia.

Gel-coated Cast Mineral Washbasins



Gel-cast basins are designed and guaranteed to be used with hot water up to a maximum temperature of 65°C, this temperature must not be exceeded.

Clean with a soft damp cloth, water and soap or very mild detergent, rinse and polish with a soft cloth. Avoid using cleaners that contain abrasives, solvents, acid or ammonia. Do not use caustic soda or bleaches. For a good shine use a fine polish around twice a year and then finish with a wax e.g. car wax. Care instructions are included with the washbasin.

Brassware

Clean with a damp cloth, water and soap, rinse clean and polish with a cloth.
Avoid using cleaners that contain abrasives, solvents, acid or ammonia.

Preparing for Installation- Adjustable Legs

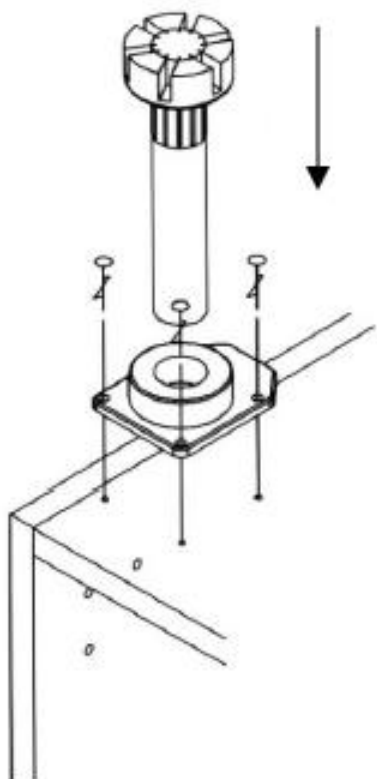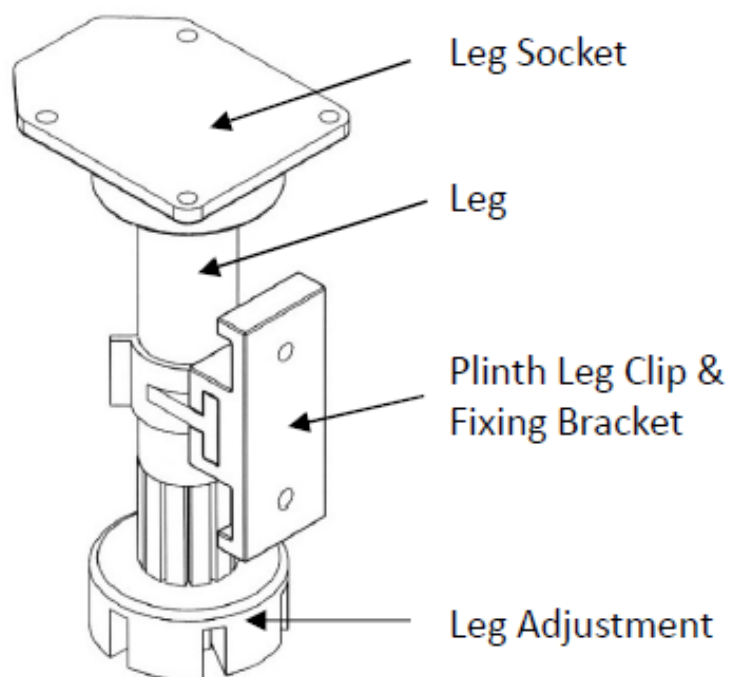


Insert the legs into sockets, making sure they are pushed all the way in.

Wind the Leg to approximately 180mm (Plinth Height).

Adjustment may be required to level off.

Preparing for Installation- Base/Basin Units

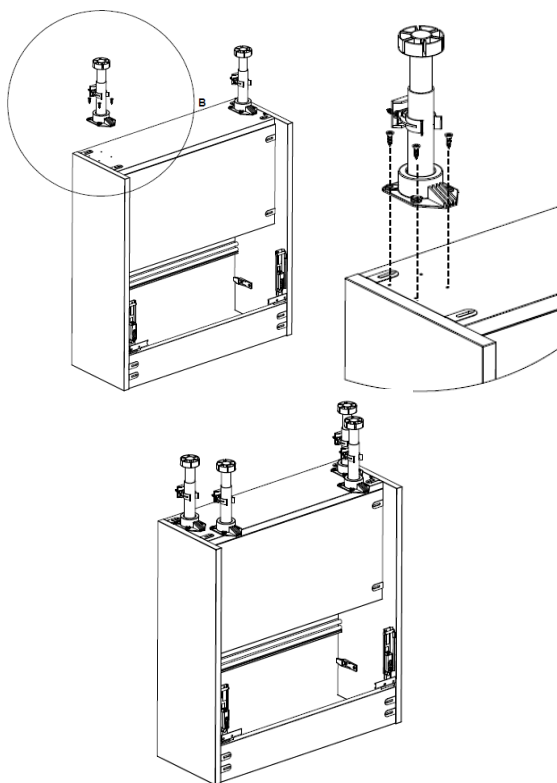

Note: Place the unit upside down on a clean flat surface that will not scratch the product.


Basin Units

The Basin Units are pre- drilled for fixing the legs- fix all **four legs** in the pre-determined positions using the **6x5/8 screws** supplied.

The Slimline Basin Units (**shown**) are only pre- drilled for fixing the **front** legs- fix the two front legs in the pre-determined position, using the **6x5/8 screws** supplied.

If required, the rear legs can installed in position at the installers discretion.

37mm

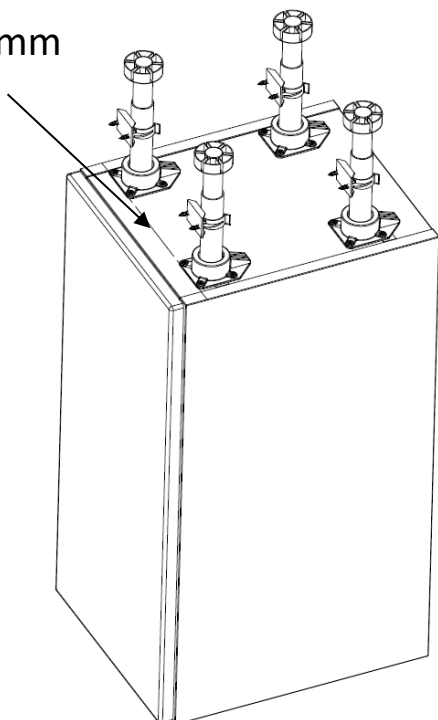

Note: Place the unit on a clean flat surface that will not scratch the product.

Base/Wall Units

Note: The base/Wall units **are not** pre- drilled for fixing the legs.


If fitting as a base unit, the front legs need to be positioned 37mm from the front edge of unit, so the plinth can be installed at the same position as the basin units.

Fix using the **6x5/8 screws** supplied.

The rear legs can be installed in position at the installers discretion.

For plinth fitting guidance see P92-93

Preparing for Installation- WC Unit

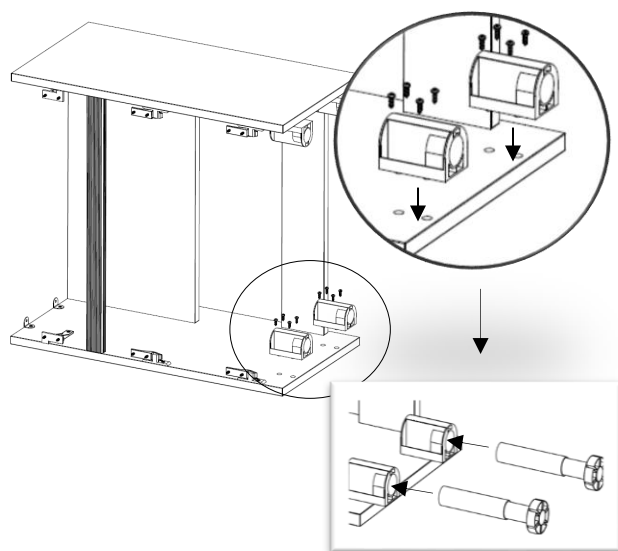

Note: Place the unit on a clean flat surface that will not scratch the product.


To begin, lay the unit on its side and knock in the leg sockets as indicated in the Diagram to the right.

Then screw the sockets to the cabinet side using the 3.5 x 12mm Round head screws provided.

Push the leg/feet into the socket the stand the unit upright onto the feet.

Leg Height Adjustment

Turn the foot part of the leg to adjust the height of the leg so they measure 180mm from the bottom of the cabinet to the floor.

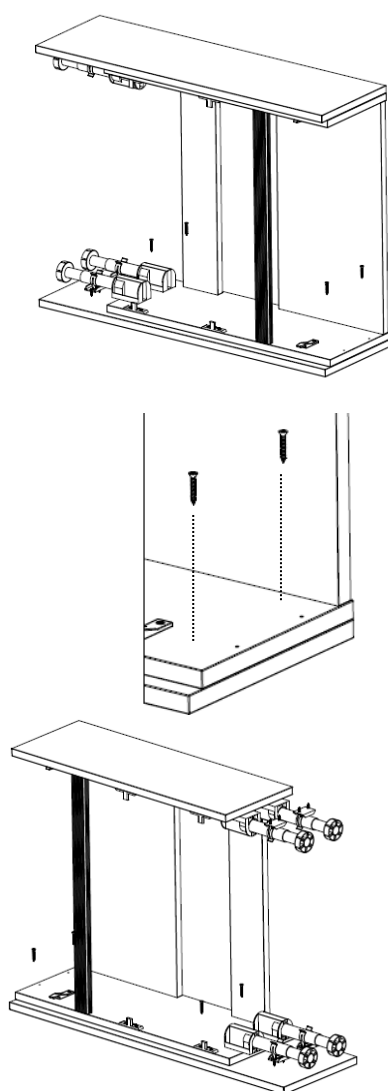

WC Unit & Cabinet End Panels (CEP)




Tip: Whilst the units are uninstalled and without frontage we recommend to fit the cabinet end Panels (CEP) to the units, before installing the units in their final position.

We recommend fitting a CEP to either side of the WC Unit as any fixings will be hidden.

Note: Fixings are not supplied.

Note: No pre-drilled fixing points are provided, this up to the discretion of the installer.

Preparing for Installation-Base/Basin Units

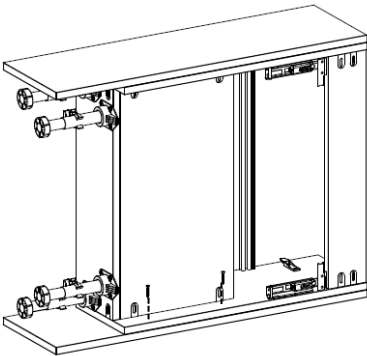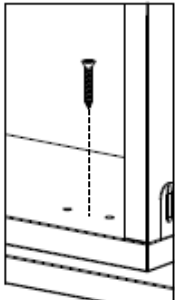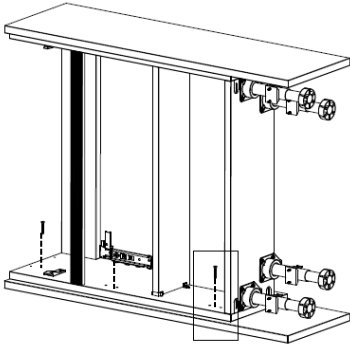

Base/Bain Units & Cabinet End Panels (CEP)

Tip: Whilst the units are uninstalled and without frontage, we recommend to fit the cabinet end Panels (CEP) to the units, before installing the units in their final position.


Consider placing the fixings in places where they can not be seen, once the doors are opened.

1. Behind the hinge plates (shown)
2. Behind the back panel (shown)

Note: Fixings are not supplied.

Note: No pre-drilled fixing points are provided, this up to the discretion of the installer.

Installation Instruction Pull Out Base Units

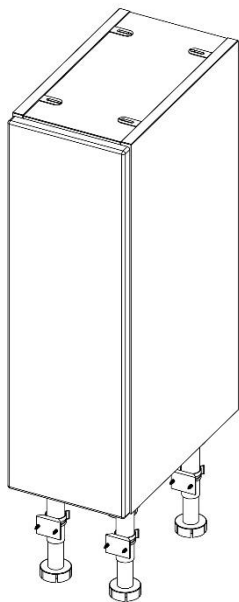

**Pull Out Base Unit
Standard Door**



**Pull Out Base Unit
Long Door**

Installation

Note: All cabinets should be fastened to the wall before fixing the basin, after alignment we recommend additional wall fixings are made, then the final installation of the basin can be carried out.

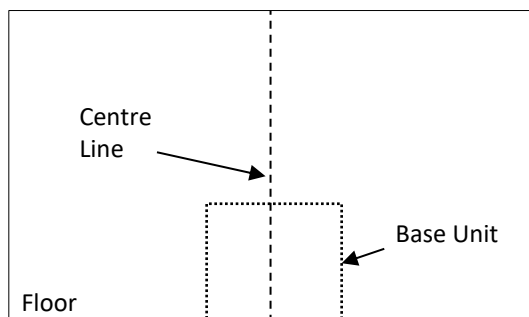


Diagram 1

Note: Consider where the pipes are located before beginning the installation.

To begin, place the Unit into the desired installation position in the room.

Mark a centre line on the wall.

See Diagram 1.

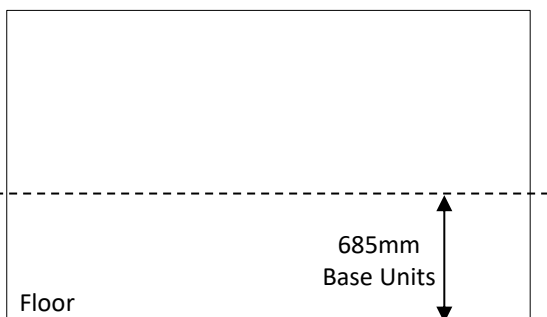


Diagram 2

Note: We recommend an installation height of 820mm. (Height of the unit plus 180mm plinth, this is also to match the height of the WC Unit.)

Draw a horizontal line **685mm** from the floor, this is the height the **bottom edge** of the wall plates will be fitted at, so the unit has a finished height of 820mm. For other installation heights, adjust accordingly.

See Diagram 2.

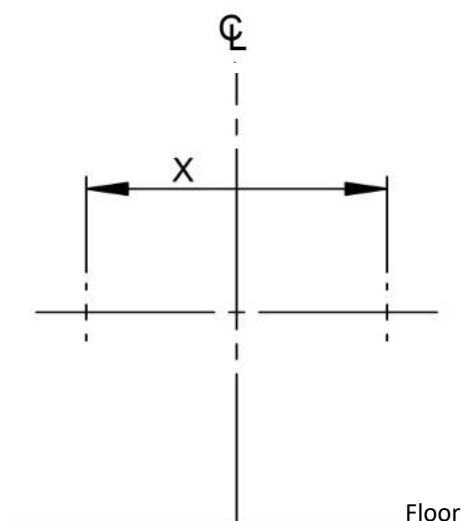



Diagram 3

Next mark the position of the outer edges of the Units = **X**, working from the centre line.

See Diagram 3.

Installation

Diagram 4

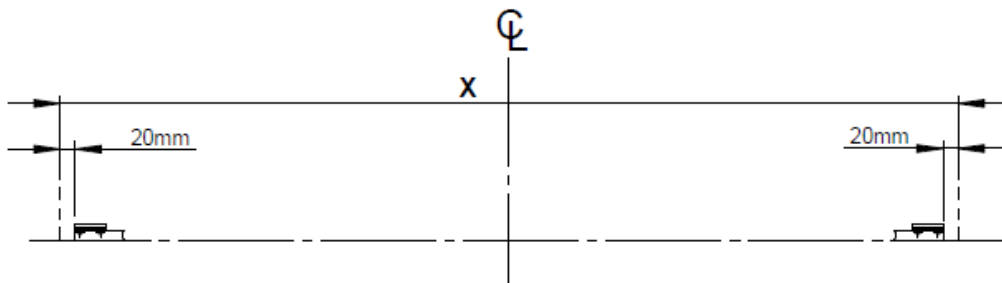

For all units mark out the position of the wall plates (supplied as pairs) using the dimensions provided above.

Once marked, drill the fixing positions. Depending on the wall medium, it may be necessary to plug the drilled holes. See **'Important Note'** below.


Next screw and secure the wall plates to the wall using suitable screws. See **'Important Note'** below.

See **Diagram 4**.

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the surround is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used according to the model to be installed as well as individual fitting situations and environments. All mechanical fixings, for holding the product in position, must be secured to a solid wall or structure.

Diagram 5

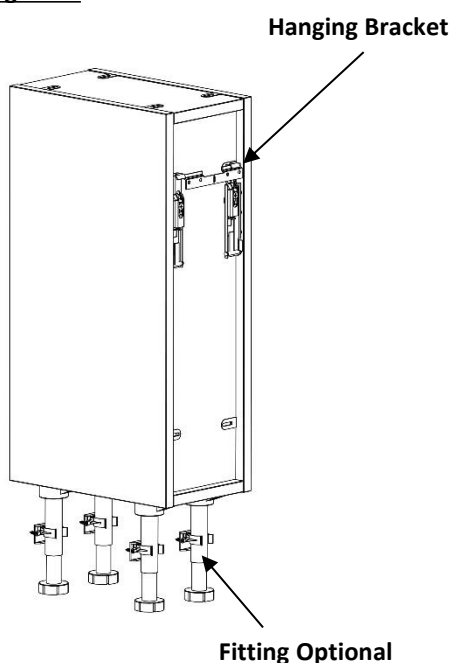

Hanging the Unit

Note: If floor standing the unit (i.e. using a plinth) you will be required to fit the legs to the cabinet prior to hanging. **Please see guidance on P3-6 & P92-93**

Hang the units, making sure the hanging brackets on the rear of the units, engage with the wall plates on the wall.

See **Diagram 5**.

Installation

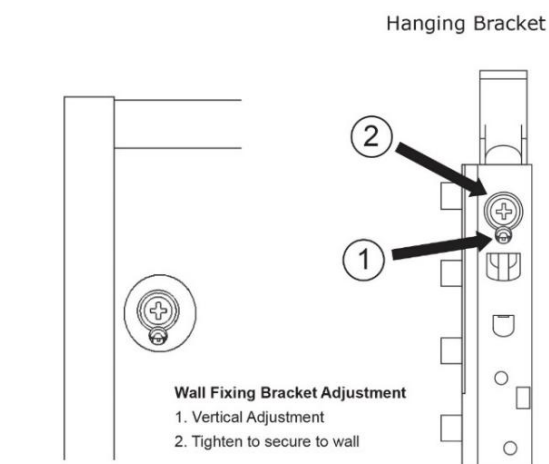


Diagram 6

Hanging Bracket Adjustment

Adjust the units so they sit level, using a Pozi screw driver. **(1)**

Finally fix the units in position by tightening the screws, using a Pozi screw driver. **(2)**

See Diagram 6.

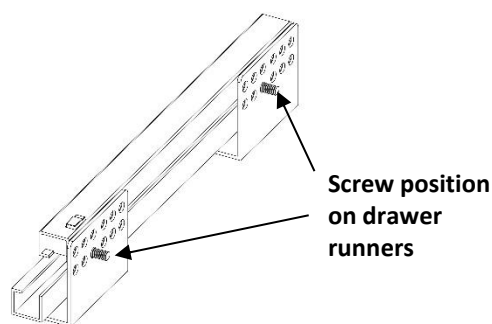


Diagram 7

Drawer Runner Preparation

When fitting runners to the unit use the bottom holes on the runner, as indicated in **Diagram 7**.

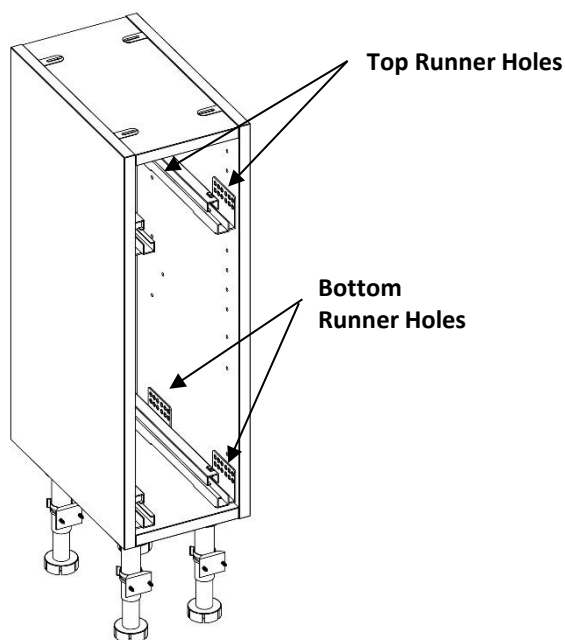


Diagram 8

Drawer Runner Fitting

Attach the runners to the unit using the hole positions indicated in **Diagram 8**.

Once the drawer runners are fitted proceed with assembling and installing the drawer box.

Installation

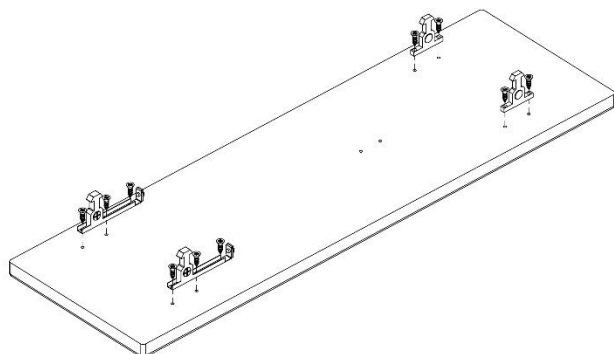


Diagram 9

Drawer Front Preparation

Fit the drawer front clips onto the back of the drawer front, fixing the **6x5/8 screws** provided through the holes in the clips and into the pre-drilled holes on the back of the drawer front.

See Diagram 9.

Note: For the taller drawer box you may be required to add an additional screw. Please pilot hole before fitting additional screws.

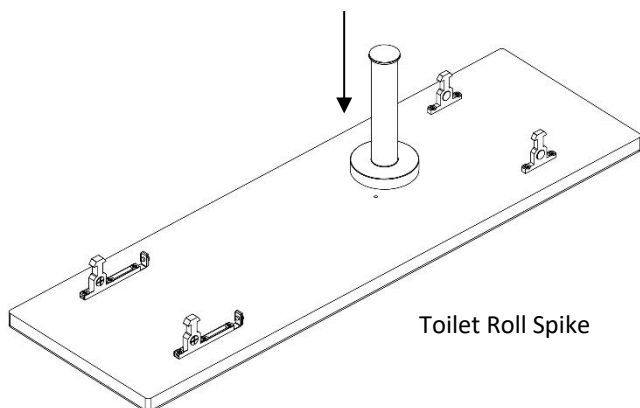


Diagram 10

Toilet Roll Spike Fitting

To fit the toilet roll spike, use the **6x5/8 screws** provided through the holes in the base of the toilet roll spike and into the pre-drilled holes on the back of the drawer front.

See Diagram 10.

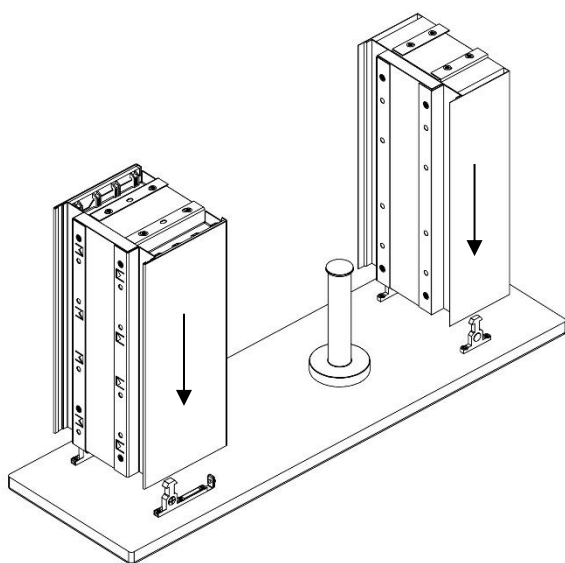


Diagram 11


Drawer Front Fitting

Align all the clips on the drawer front with the opening in the sides on the pre-assembled drawer box.

Push the drawer front into the sides until they **click** into position.

See Diagram 11.

Installation

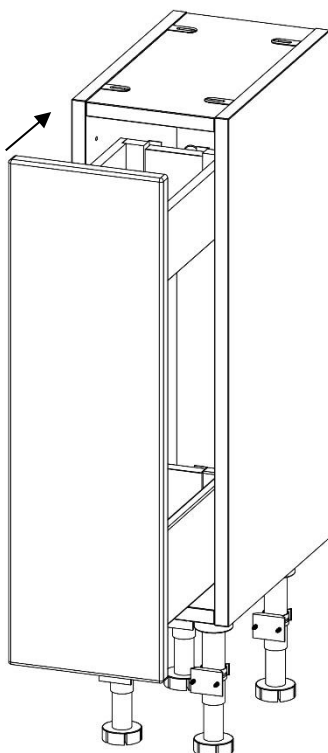

Fitting the Assembled Drawer

To fit the assembled drawers in the unit, position the drawer boxes over the runners and push to close, you will hear a **click**, this indicates the drawer had engaged onto the runners and installation is complete.

See Diagram 12.

Diagram 12

Drawer Left/Right Adjustment

Turn screw Clockwise to adjust drawer to the right.

Turn screw Anti-Clockwise to adjust drawer to the left.

See Diagram 13.

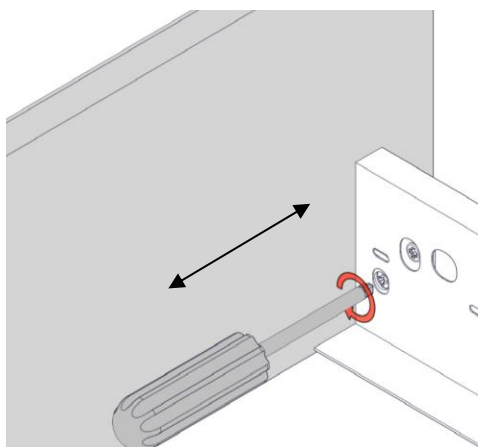


Diagram 13

Drawer Up/Down Adjustment

Turn screw Clockwise to adjust drawer upwards.

Turn screw Anti-Clockwise to adjust downwards

See Diagram 14.

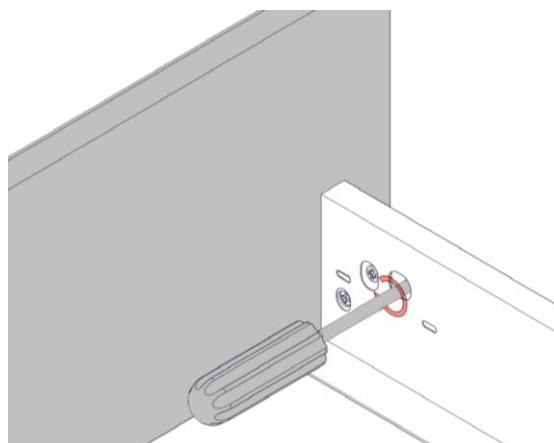


Diagram 14

Installation

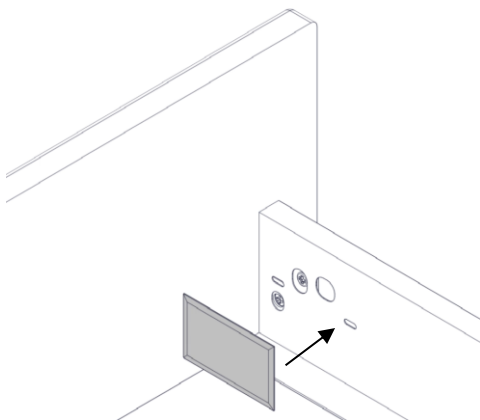


Diagram 15

Cover Cap Fitting

Fit the cover caps onto drawer side. Push fitting into slotted grooves in drawer side.

See Diagram 15.

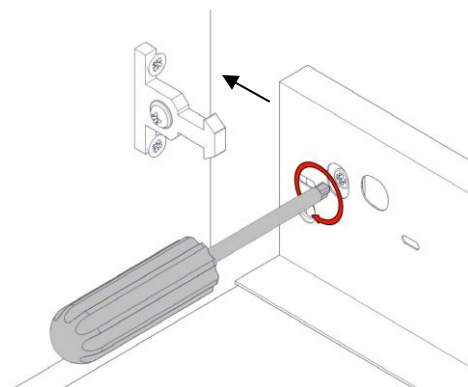


Diagram 16

Drawer Front Removal

Remove the cover caps **Diagram 15**.

Turn the screw anticlockwise indicated in **Diagram 16**.

This will remove the drawer front from the drawer box.

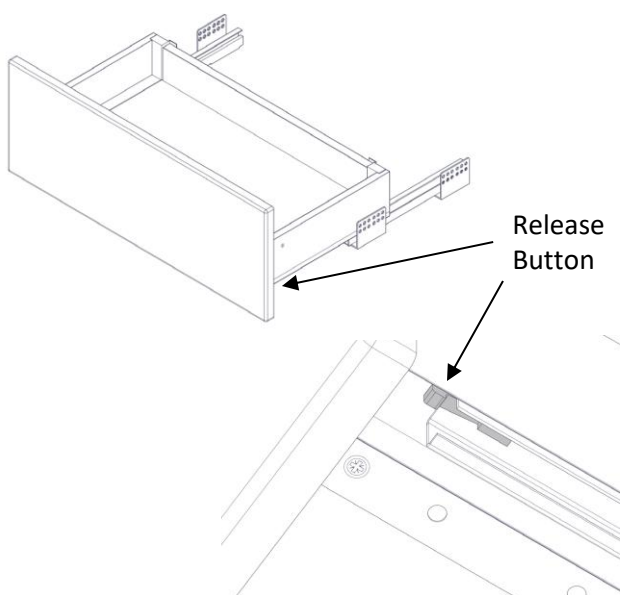



Diagram 17

Assembled Drawer Box Removal


To remove the drawer box including the drawer front, open fully and push button on the underside of the drawer as indicated (**Diagram 17**).

While keeping the button pressed in lift the drawer box upward to remove.


Installation Instruction Base/Wall Units

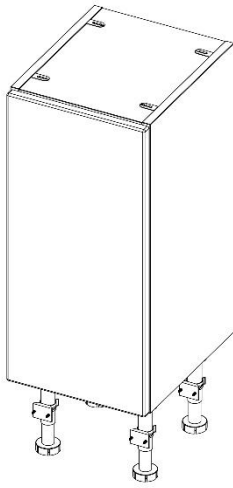


Base Units – Standard Door

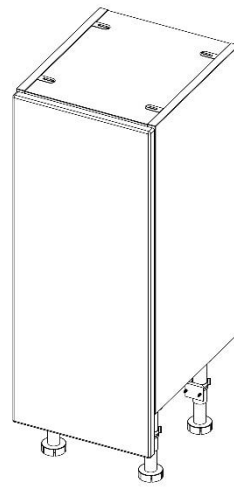

Base Units – Long Door

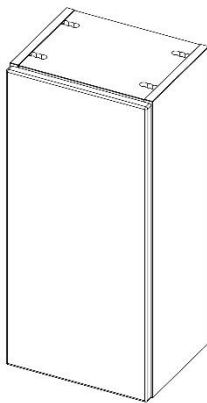

**Slimline Base/Wall Units –
Standard Door**

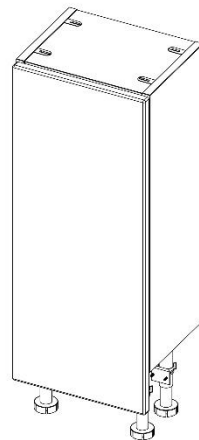

Slimline Base Units – Long Door

Installation

Note: All cabinets should be fastened to the wall before fixing the basin, after alignment we recommend additional wall fixings are made, then the final installation of the basin can be carried out.

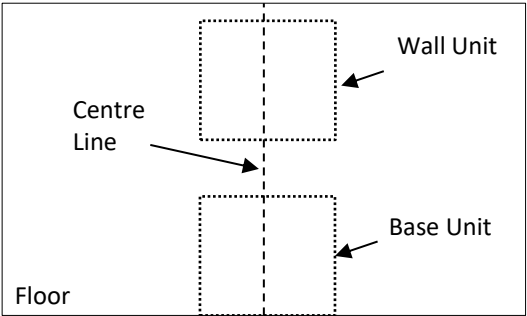


Diagram 1

Note: Consider where the pipes are located before beginning the installation.

To begin, place the Base and Wall Unit into the desired installation position in the room.

Mark a centre line on the wall.

See Diagram 1.

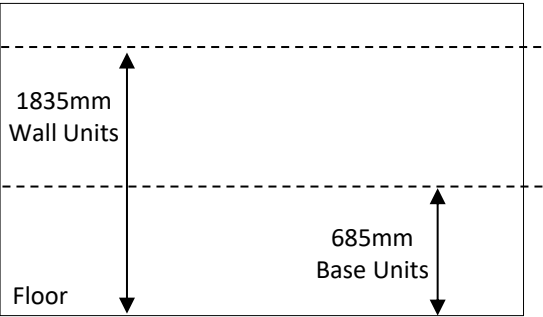


Diagram 2

Note: We recommend an installation height of 820mm (base unit) and (wall units)1972mm. (Base Unit- Height of the unit plus 180mm plinth, this also matches the height of the WC Unit

Draw a horizontal line **685mm** from the floor for Base Units & **1835mm** for Wall Units. This is the height the **bottom edge** of the wall plates will be fitted to hang the units.

See Diagram 2

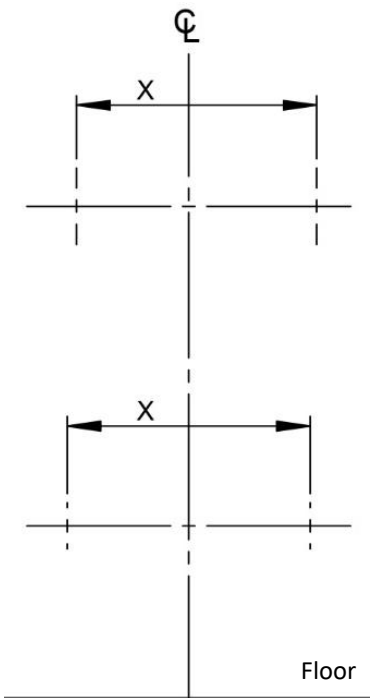



Diagram 3

Next mark the position of the outer edges of the Units = **X**, working out from the centre line.

See Diagram 3.

Installation

Diagram 4

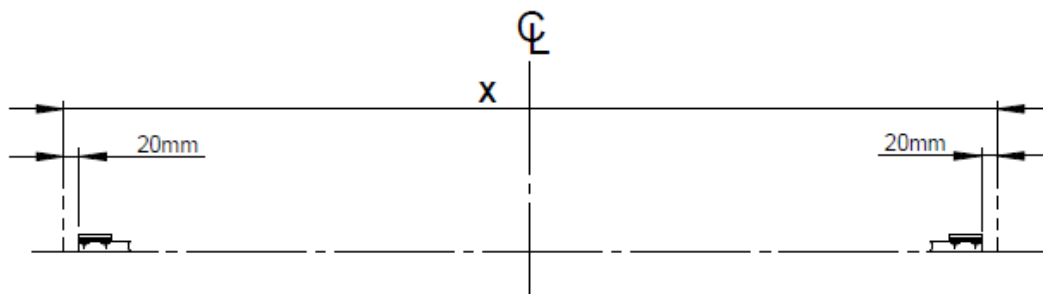

For all units mark out the position of the wall plates (supplied as pairs) using the dimensions provided above.

Once marked, drill the fixing positions. Depending on the wall medium, it may be necessary to plug the drilled holes. See '**Important Note**' below.


Next screw and secure the wall plates to the wall using suitable screws. See '**Important Note**' below.

See **Diagram 4**.

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the surround is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used according to the model to be installed as well as individual fitting situations and environments. All mechanical fixings, for holding the product in position, must be secured to a solid wall or structure.

Diagram 5

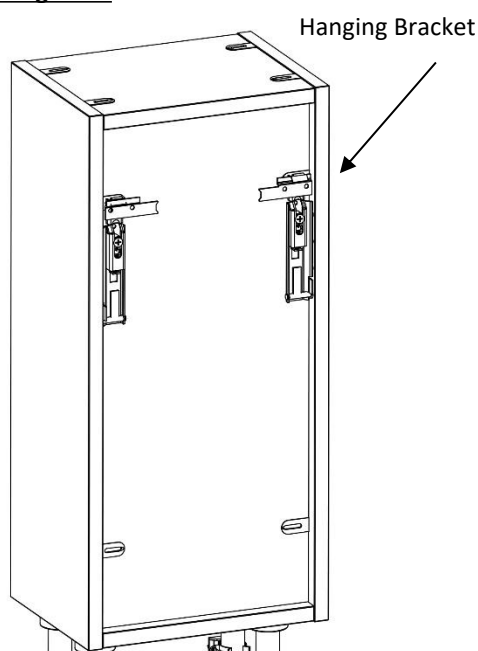

Hanging the Unit

Note: If floor standing the unit (i.e. using a plinth) you will be required to fit the legs to the cabinet prior to hanging. **Please see guidance on P3-6 & P92-93**

Hang the units, making sure the hanging brackets on the rear of the units, engage with the wall plates on the wall.

See **Diagram 5**.

Installation

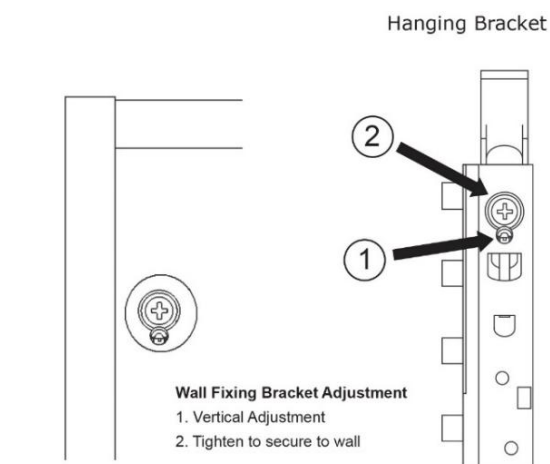


Diagram 6

Hanging Bracket Adjustment

Adjust the units so they sit level, using a Pozi screw driver. **(1)**

Finally fix the units in position by tightening screws, using a Pozi screw driver. **(2)**

See Diagram 6.

Note: For all **wall** units, once fully adjusted & tightened fit the supplied cover caps into holes on back panel.

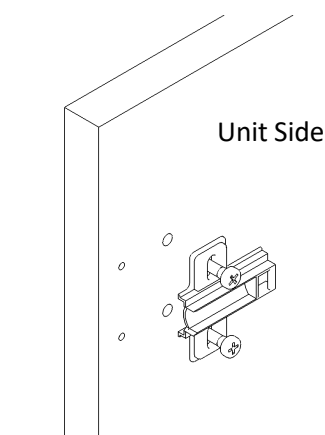


Diagram 7

Hanging the Doors

Firstly screw the hinge plate into unit side, using the predrilled 5mm holes as indicated in **Diagram 7**.

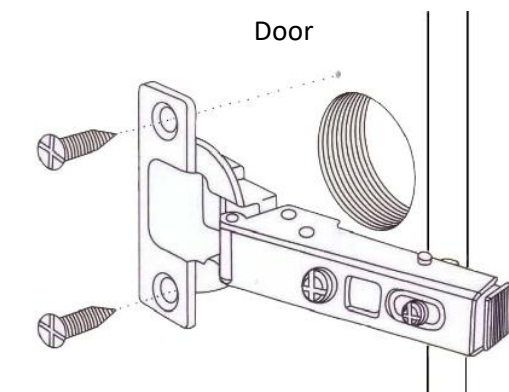


Diagram 8

Hanging the Doors Continued.....

Tip: Lay the doors on a clean flat surface that will not damage or scratch the product.

Locate the hinge arm into predrilled 35mm hole on back of door and secure with **2No.6x5/8" countersunk screws** provided.

See Diagram 8.

Installation

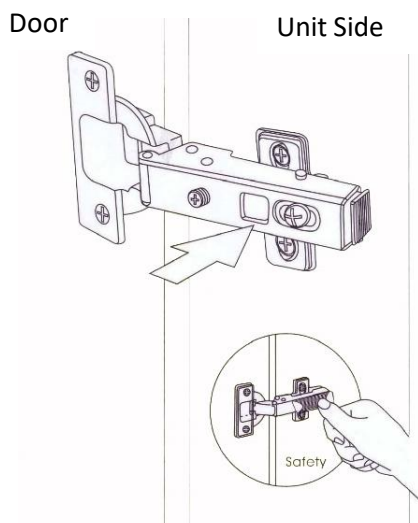


Diagram 9

Hanging the Doors Continued.....

To hang the door, locate the hinge arm over the hinge plate and **click** into position.

See Diagram 9.

Tip: Adjust the alignment of the door before final tightening.


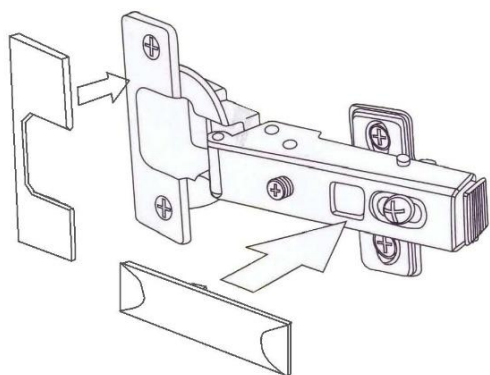


Diagram 10

Hanging the Doors Continued.....

Click the cover plates into position on the hinges.

See Diagram 10.

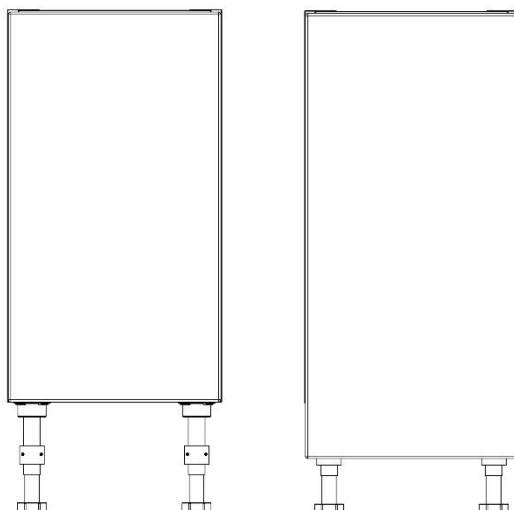

Adjustments

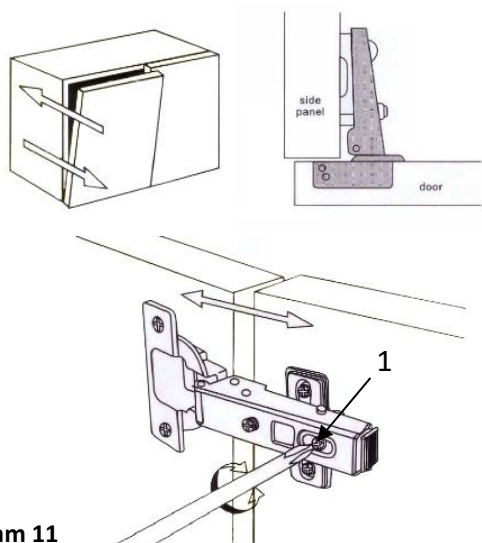


Diagram 11

Door Front adjustment

Set the distance between the back face of the door and the edge of the unit side panel.

Tip: Leave an approx. 2mm gap to help avoid binding.

To fix the hinge arm to the hinge plate, tighten screws **(1)** securely.

See **Diagram 11**.

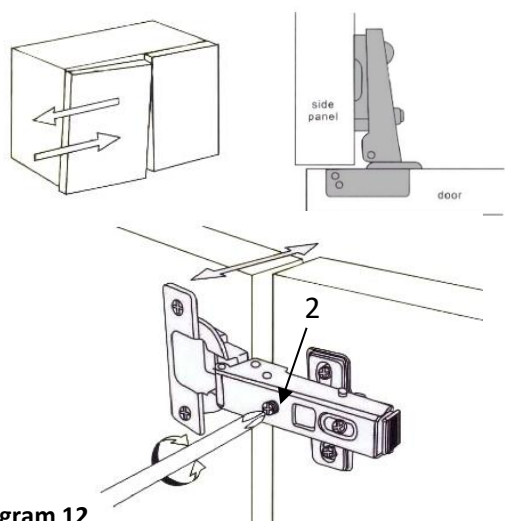


Diagram 12

Door Lateral overlay adjustment

Adjust screws **(2)** to adjust the edge of the door so it runs parallel with the outside face of the unit side panel.

Note: The edge of the door should be set back approx. 1.5mm from the edge of the unit.

Note: For the protection of the damper, it only allows a lateral adjustment. (left to right)

See **Diagram 12**.

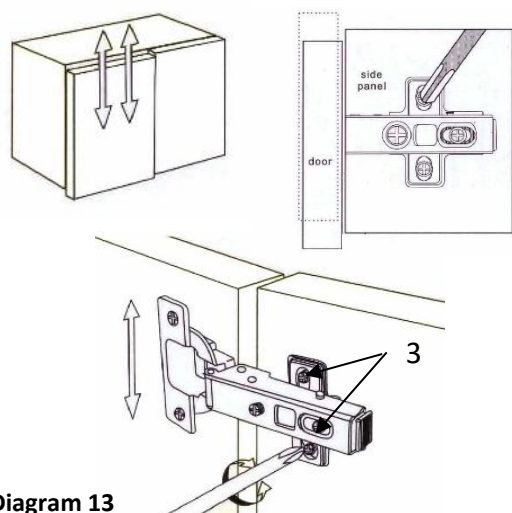


Diagram 13

Door Vertical adjustment


The door can be vertically adjusted by turning the plate screws up and down. **(3)**

The door can be vertically adjusted by loosening the screws **(3)** on all of the hinge plates on the door and carefully moving the door up or down as required.


Once in position re-tighten all the screws **(3)** to secure in place.

See **Diagram 13**.


Installation Instruction Basin Units

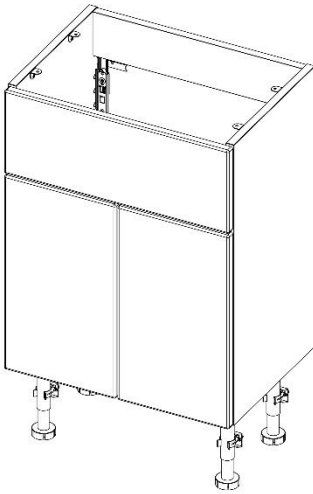


Basin Units – Standard Door

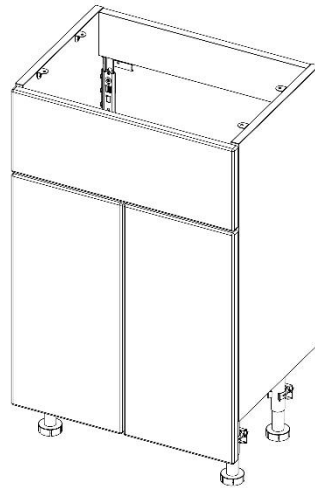

Basin Units – Long Door

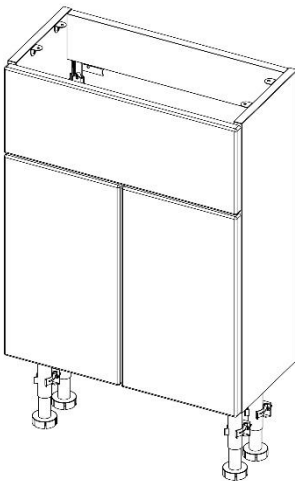

**Slimline Basin Units –
Standard Door**

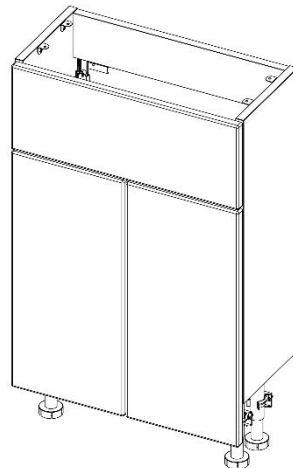

Slimline Basin Units – Long Door

Installation

Note: All cabinets should be fastened to the wall before fixing the basin, after alignment we recommend additional wall fixings are made, then the final installation of the basin can be carried out.

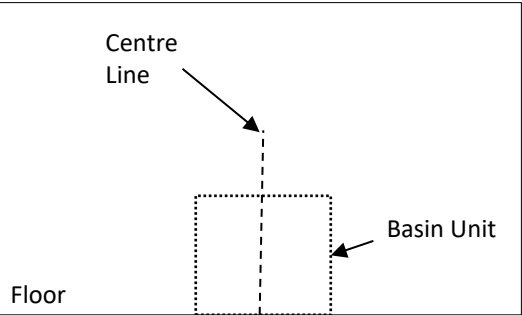


Diagram 1

Note: Consider where the pipes are located before beginning the installation.

To begin, place the Basin Unit into the desired installation position in the room.

Mark a centre line on the wall.

See Diagram 1.



Diagram 2

Note: We recommend an installation height of 820mm. (Height of the unit plus 180mm plinth, this is also to match the height of the WC Unit.)

Draw a horizontal line **685mm** from the floor, this is the height the **bottom edge** of the wall plates will be fitted at, so the unit has a finished height of 820mm. For other installation heights, adjust accordingly.

See Diagram 2.

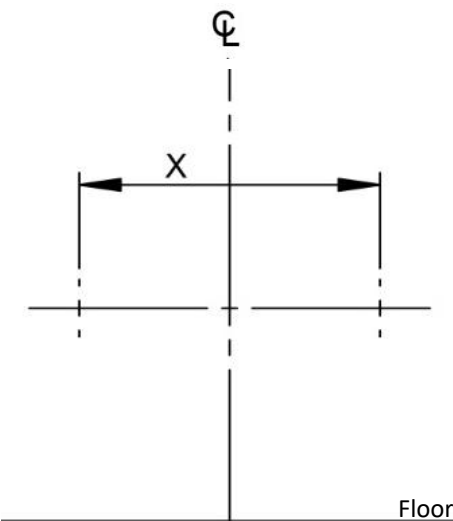



Diagram 3

Next mark the position of the outer edges of the Units = **X**, working out from the centre line.

See Diagram 3.

Installation

Diagram 4

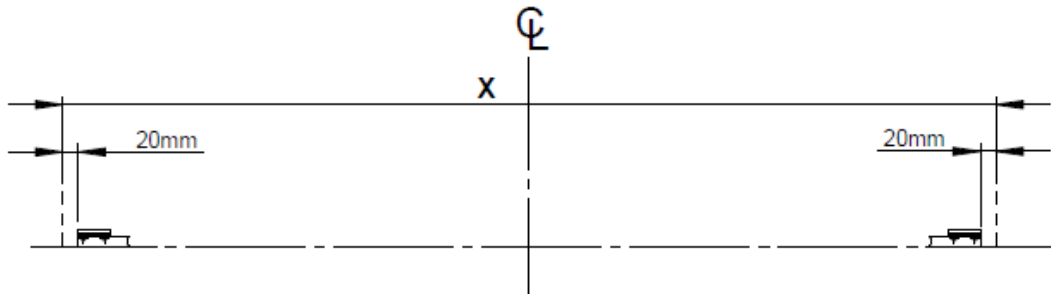

For all units mark out the position of the wall plates (supplied as pairs) using the dimensions provided above.

Once marked, drill the fixing positions. Depending on the wall medium, it may be necessary to plug the drilled holes. See **'Important Note'** below.


Next screw and secure the wall plates to the wall using suitable screws. See **'Important Note'** below.

See **Diagram 4**.

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the surround is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used according to the model to be installed as well as individual fitting situations and environments. All mechanical fixings, for holding the product in position, must be secured to a solid wall or structure.

Diagram 5

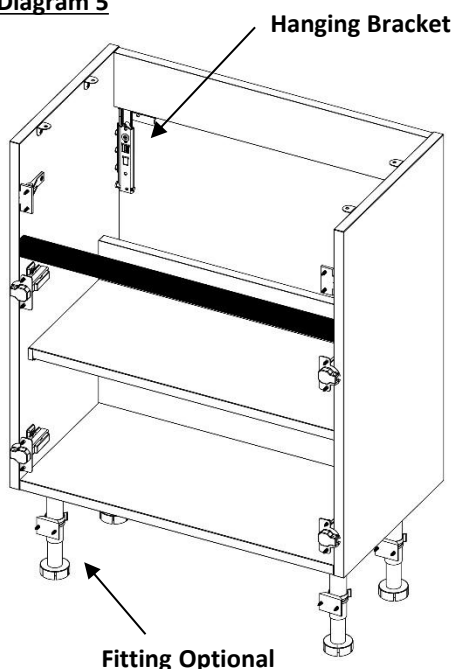

Hanging the Unit

Note: If floor standing the unit (i.e. using a plinth) you will be required to fit the legs to the cabinet prior to hanging. **Please see guidance on P3-6 & P92-93**

Hang the units, making sure the hanging brackets on the rear of the units, engage with the wall plates on the wall.

See **Diagram 5**.

Installation

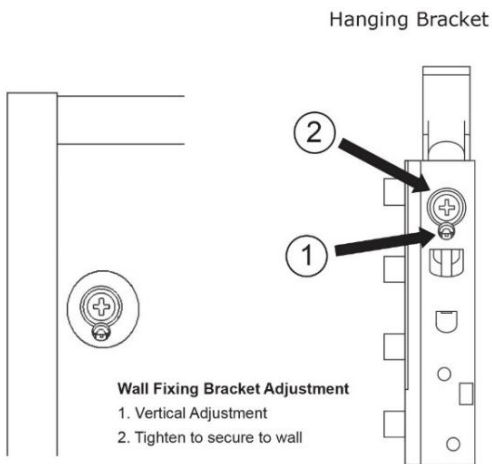


Diagram 6

Hanging Bracket Adjustment

Adjust the units so they sit level, using a Pozi screw driver. **(1)**

Finally fix the units in position by tightening screws, using a Pozi screw driver. **(2)**

See Diagram 6.

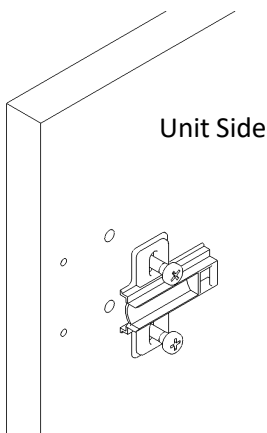


Diagram 7

Hanging the Doors

Tip: Lay the doors on a clean flat surface that will not damage or scratch the product.

Firstly screw the hinge plate into unit side, using the predrilled 5mm holes as indicated in **Diagram 7**.

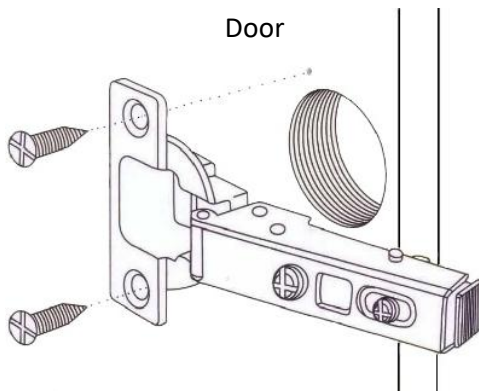


Diagram 8

Hanging the Doors Continued.....

Locate the hinge arm into predrilled 35mm hole on back of door and secure with **2No.6x5/8" countersunk screws** provided.

See Diagram 8.

Installation

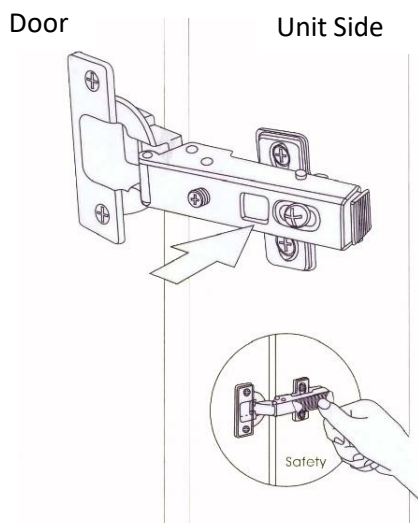


Diagram 9

Hanging the Doors Continued.....

To hang the door, locate the hinge arm over the hinge plate and **click** into position.

See Diagram 9.

Tip: Adjust the alignment of the door before final tightening.



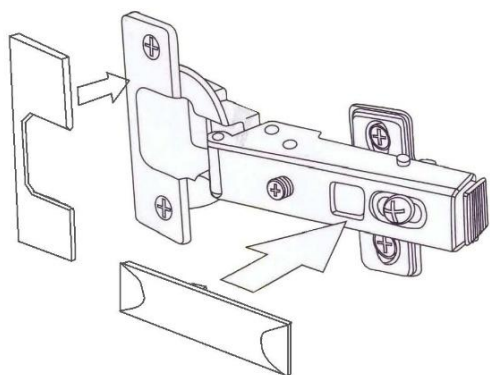


Diagram 10

Hanging the Doors Continued.....

Click the cover plates into position on the hinges.

See Diagram 10.

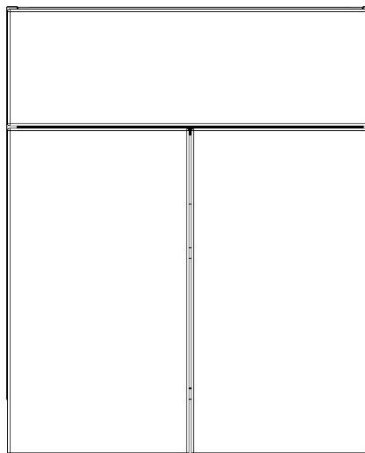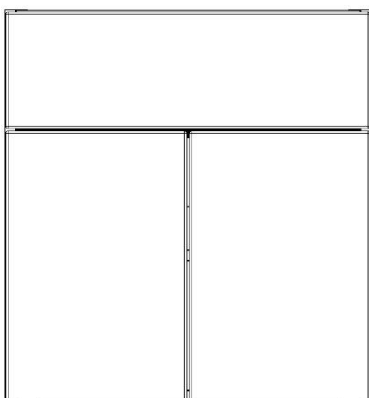

Adjustments

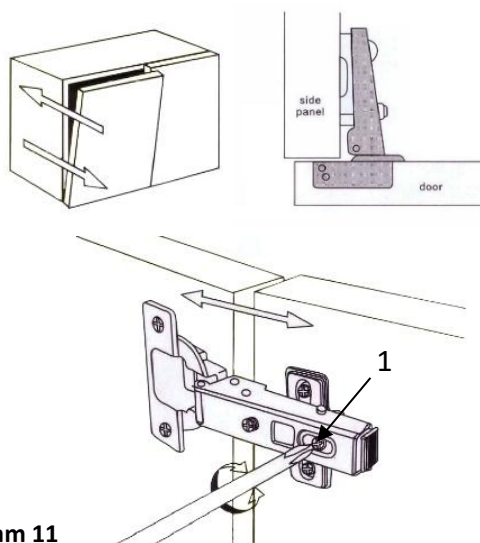


Diagram 11

Door Front adjustment

Set the distance between the back face of the door and the edge of the unit side panel.

Tip: Leave an approx. 2mm gap to help avoid binding.

To fix the hinge arm to the hinge plate, tighten screws **(1)** securely.

See **Diagram 11**.

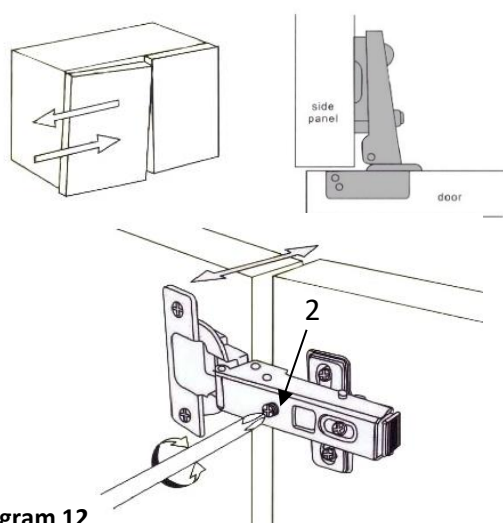


Diagram 12

Door Lateral overlay adjustment

Adjust screws **(2)** to adjust the edge of the door so it runs parallel with the outside face of the unit side panel.

Note: The edge of the door should be set back approx. 1.5mm from the edge of the unit.

Note: For the protection of the damper, it only allows a lateral adjustment. (left to right)

See **Diagram 12**.

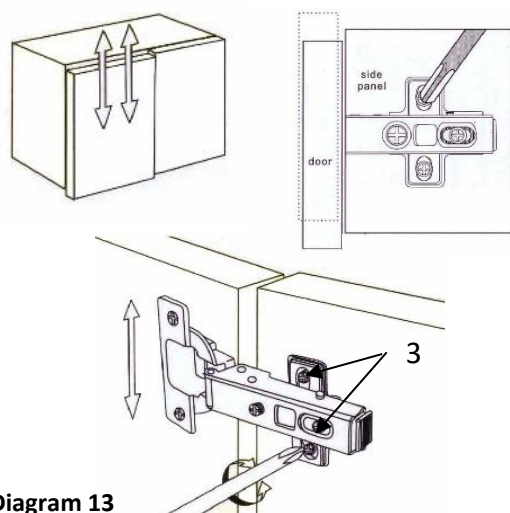


Diagram 13

Door Vertical adjustment

The door can be vertically adjusted by turning the plate screws up and down. **(3)**

The door can be vertically adjusted by loosening the screws **(3)** on all of the hinge plates on the door and carefully moving the door up or down as required.

Once in position re-tighten all the screws **(3)** to secure in place.

See **Diagram 13**.

Installation

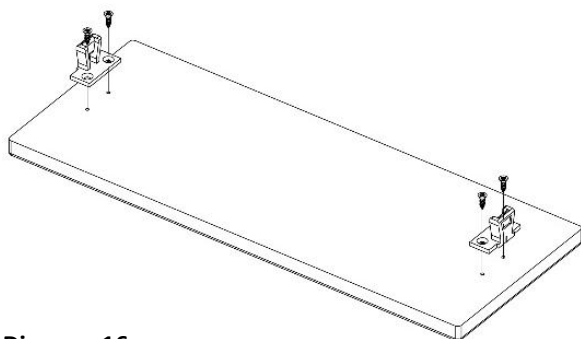


Diagram 16

Top Panel Fitting

Fit the Keku fittings onto the top panel, fixing the **6x5/8 screws** provided through the holes in the fittings and into the pre-drilled holes on the top panel.

Diagram 16.

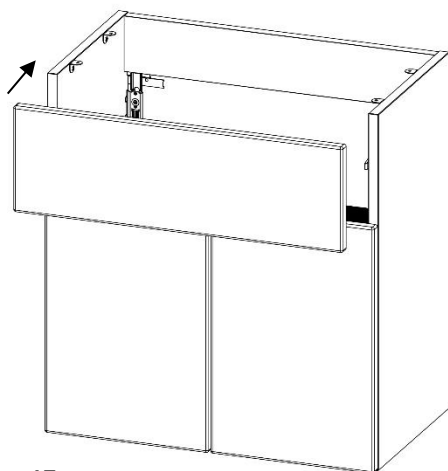


Diagram 17


Top Panel Fitting *Continued*.....

Once the Keku fittings are fitted to the front panel, push the panel onto pre-installed fixings on unit.


The top panel is now installed.

Diagram 17.


Installation Instruction Bath Panels & Corner Posts & Door Infill

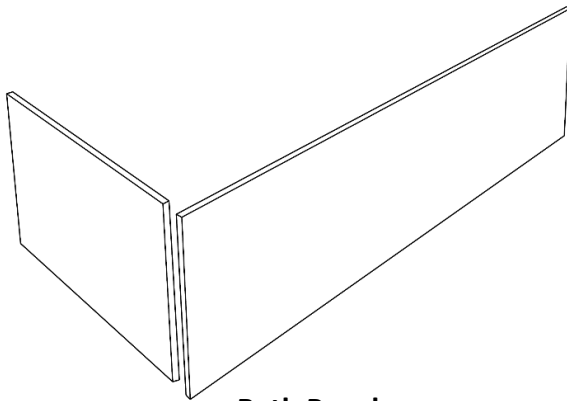

Bath Panels

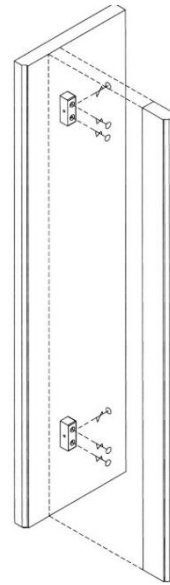

Corner Post

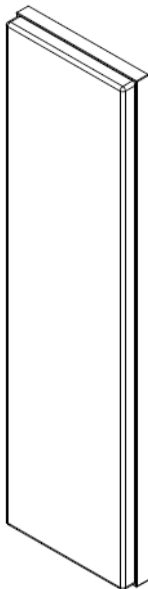

Door Infill

Installation

Note: Baths will have their own installation instructions supplied by the manufacturer. Before attempting to fit your panels, please read these installation instructions in full and ensure that you fully understand them.

ALL PANELS ARE SUPPLIED 450mm IN HEIGHT.

Diagram 1


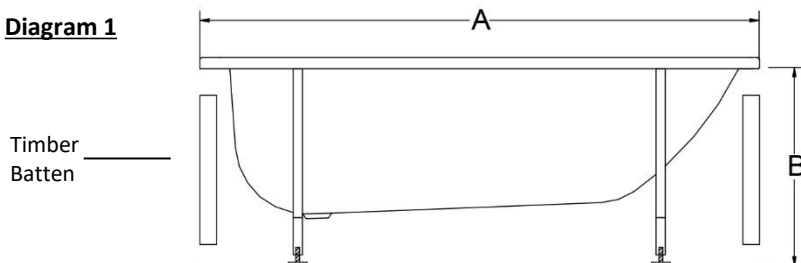


Diagram 2

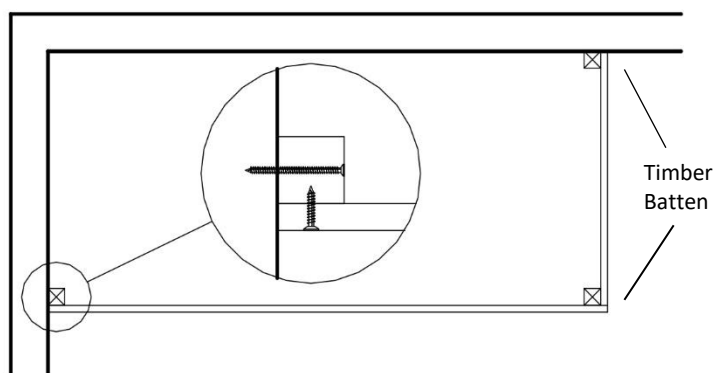

1. To install the bath panels, measure the length and height of the bath to determine the size for the bath panels. Secure a square timber batten to the walls at both ends underneath the rim of the bath.

See Diagram 1.

2. The bath panel is then fixed to the square timber batten. This can be achieved in many ways, i.e. strong adhesives, silicone, liquid nails, panel pins, screws and screw cups or mirror screws, depending on the installers preference.

3. Whichever method of fixing is used, please note it may be necessary at a later date or due to unforeseen circumstances that you may need to remove the panels.


4. If a return panel is required you will need to assemble panels into an (L) Shape, use a square timber batten to join panels in the corner. **See Diagram 2**

Note: Some designs are supplied at 700mm & 750mm, however some are supplied at 750mm only and will require reducing in length. It is important that all edges, gaps and joints must be sealed with a waterproof agent.

Installation


Corner Posts

The Corner post is used for creating a corner installation. The minimum is 50mm x 55mm with a variable distance in one direction to a maximum size of 140mm.

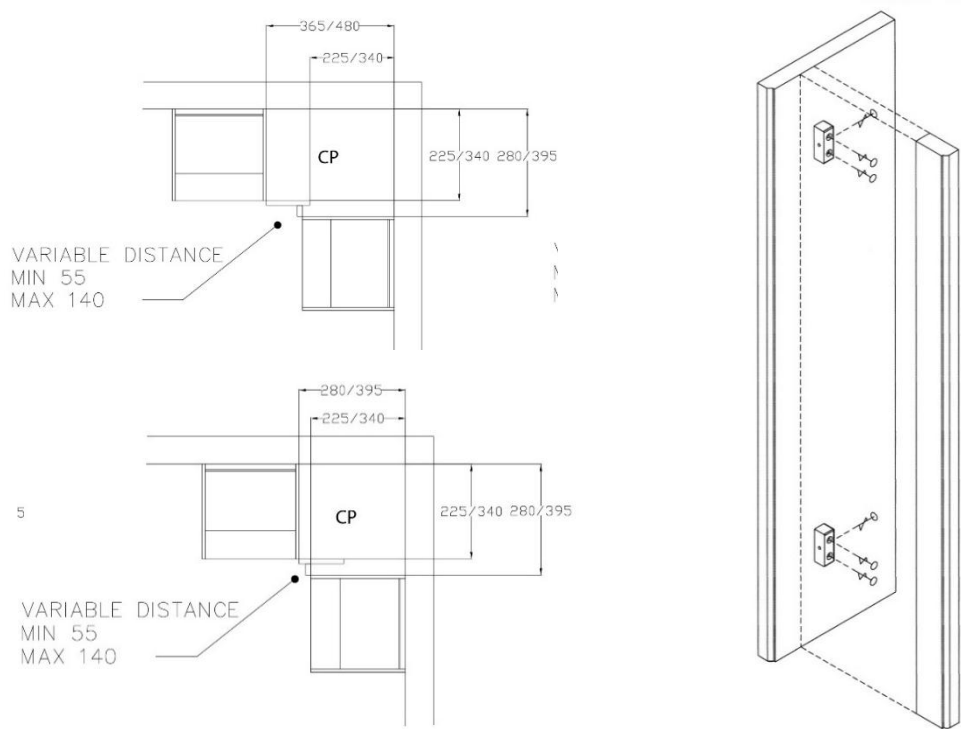

Note: Supplied as 1 piece for installer to cut to size on site- no fixings supplied.


Door Infill

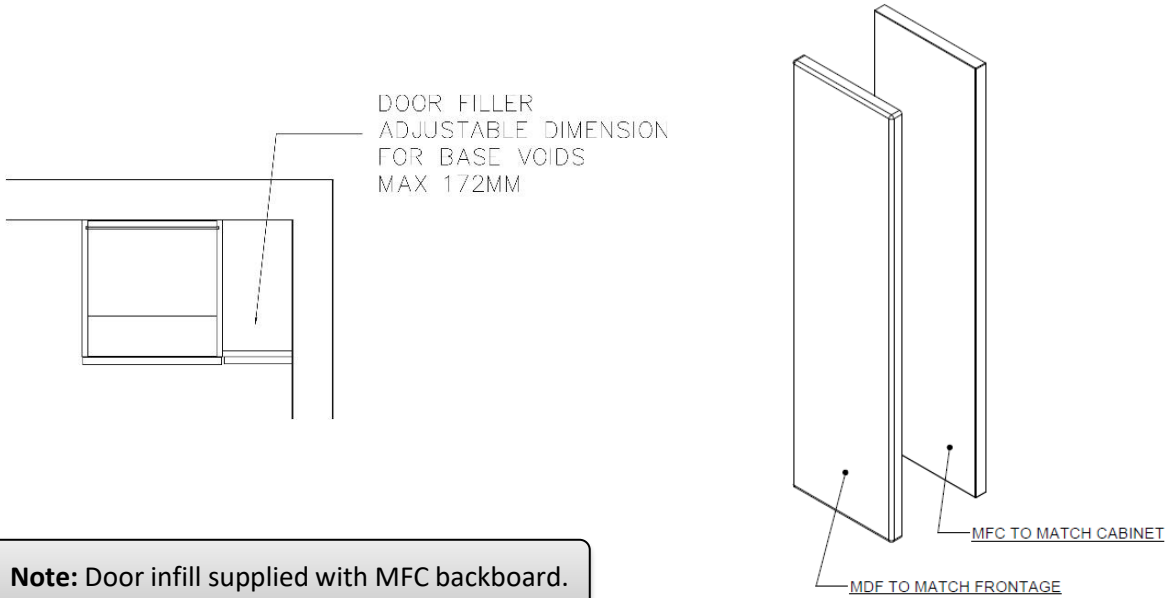


Note: Door infill supplied with MFC backboard. No fixings supplied .

Installation Instruction


Drawer Base Units

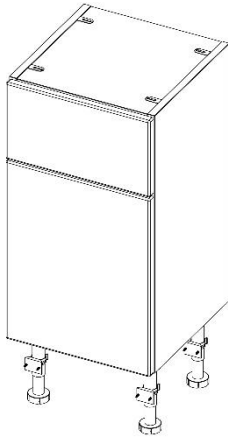


**Drawerline Base Unit
Standard Door**

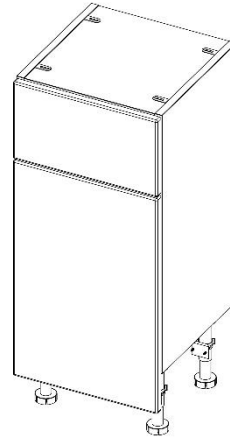

**Drawerline Base Unit
Long Door**

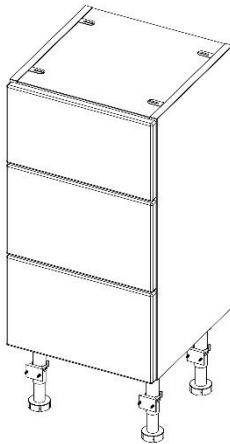


**3 Drawer Base Unit—
Standard Door**

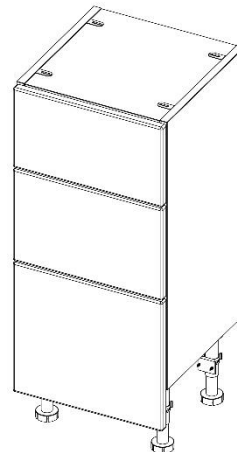

3 Drawer Base Unit— Long Door

Installation

Diagram 4

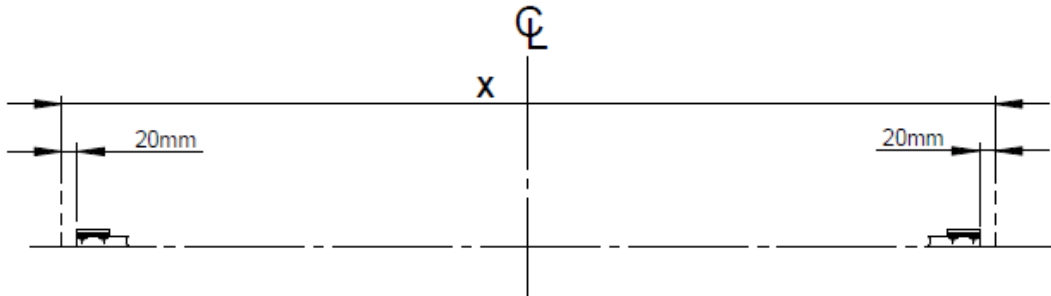

For all units mark out the position of the wall plates (supplied as pairs) using the dimensions provided above.

Once marked, drill the fixing positions. Depending on the wall medium, it may be necessary to plug the drilled holes. See '**Important Note**' below.

Next screw and secure the wall plates to the wall using suitable screws. See '**Important Note**' below.

See **Diagram 4**.

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the surround is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used according to the particular model to be installed as well as individual fitting situations and environments. All mechanical fixings, for holding the product in position, must be secured to a solid wall or structure.

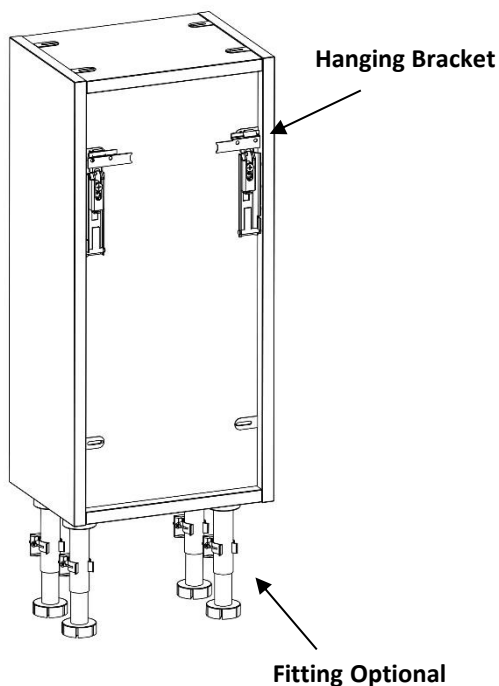


Diagram 5

Hanging the Unit

Note: If floor standing the unit (i.e. using a plinth) you will be required to fit the legs to the cabinet prior to hanging. **Please see guidance on P3-6 & P92-93**

Hang the units, making sure the hanging brackets on the rear of the units, engage with the wall plates on the wall.

See **Diagram 5**.

Installation

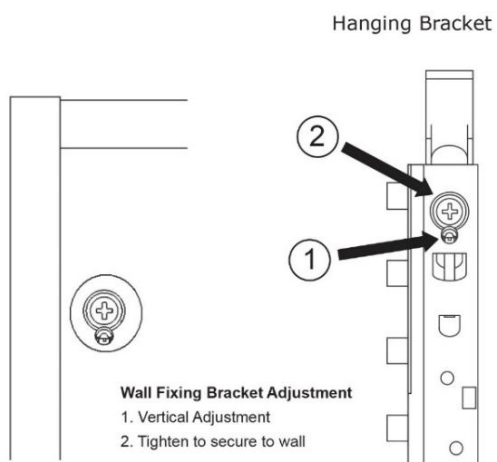


Diagram 6

Hanging Bracket Adjustment

Adjust the units so they sit level, using a Pozi screw driver. **(1)**

Finally fix the units in position by tightening screws, using a Pozi screw driver. **(2)**

See Diagram 6.

Note: For all tall units, once fully adjusted & tightened fit the supplied cover caps into holes on back panel.

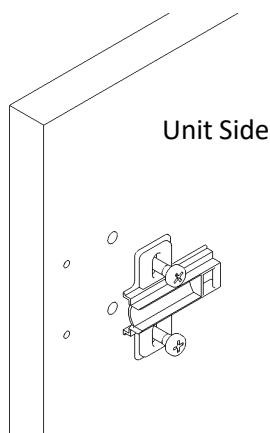


Diagram 7

Hanging the Doors

Tip: Lay the doors on a clean flat surface that will not damage or scratch the product.

Firstly screw the hinge plate into unit side, using the predrilled 5mm holes as indicated in **Diagram 7**.

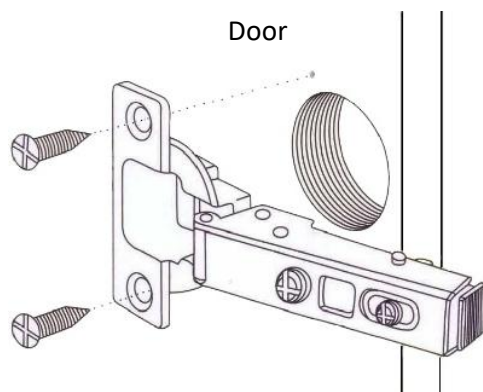


Diagram 8

Hanging the Doors Continued.....

Locate the hinge arm into predrilled 35mm hole on back of door and secure with **2No.6x5/8" countersunk screws** provided.

See Diagram 8.

Installation

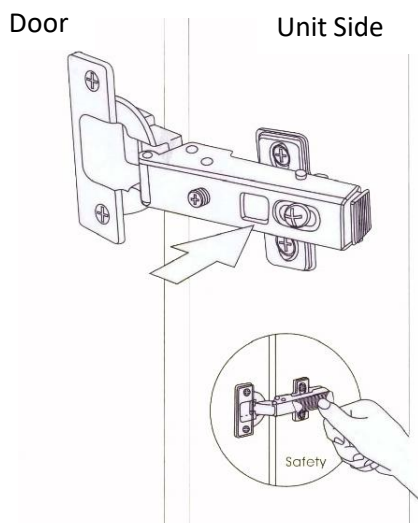


Diagram 9

Hanging the Doors Continued.....

To hang the door, locate the hinge arm over the hinge plate and **click** into position.

See Diagram 9.

Tip: Adjust the alignment of the door before final tightening.



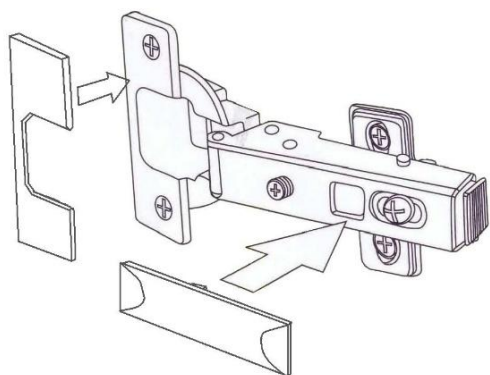


Diagram 10

Hanging the Doors Continued.....

Click the cover plates into position on the hinges.

See Diagram 10.

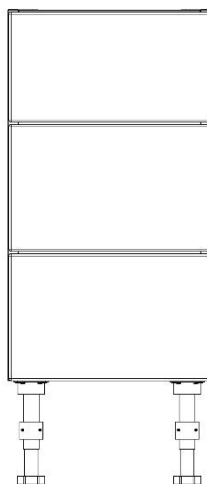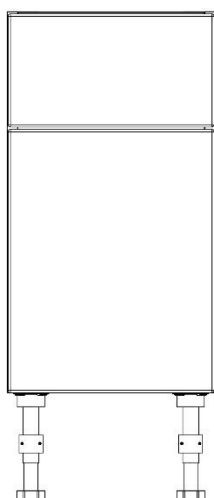

Adjustments

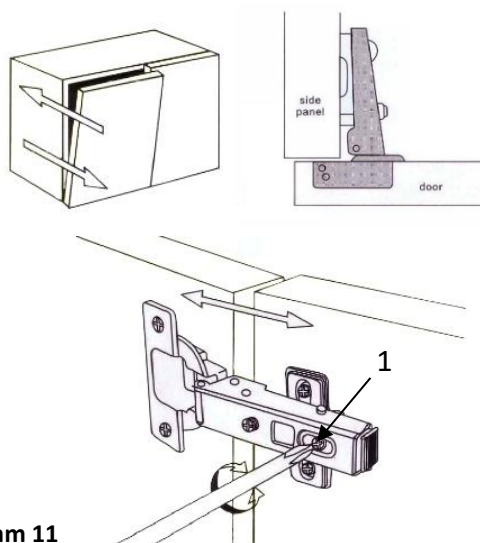


Diagram 11

Door Front adjustment

Set the distance between the back face of the door and the edge of the unit side panel.

Tip: Leave an approx. 2mm gap to help avoid binding.

To fix the hinge arm to the hinge plate, tighten screws **(1)** securely.

See **Diagram 11**.

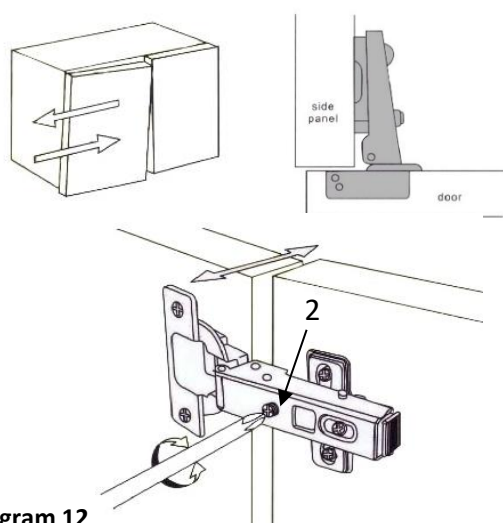


Diagram 12

Door Lateral overlay adjustment

Adjust screws **(2)** to adjust the edge of the door so it runs parallel with the outside face of the unit side panel.

Note: The edge of the door should be set back approx. 1.5mm from the edge of the unit.

Note: For the protection of the damper, it only allows a lateral adjustment. (left to right)

See **Diagram 12**.

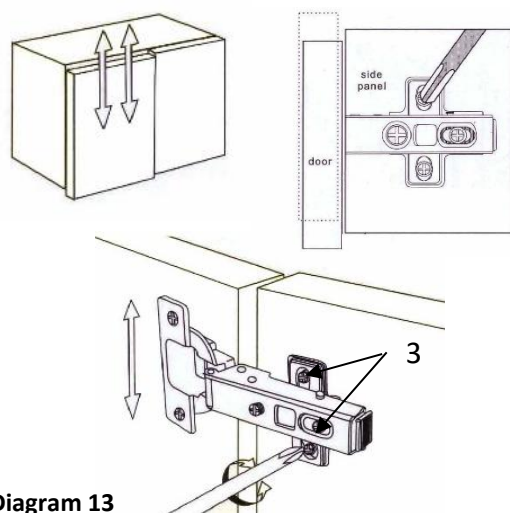


Diagram 13

Door Vertical adjustment

The door can be vertically adjusted by turning the plate screws up and down. **(3)**

The door can be vertically adjusted by loosening the screws **(3)** on all of the hinge plates on the door and carefully moving the door up or down as required.

Once in position re-tighten all the screws **(3)** to secure in place.

See **Diagram 13**.

Installation

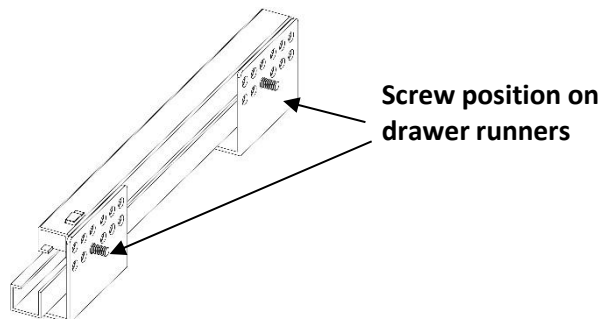


Diagram 14

Drawer Runner Preparation

When fitting runners to the unit use the bottom holes on the runner, as indicated in **Diagram 14**.

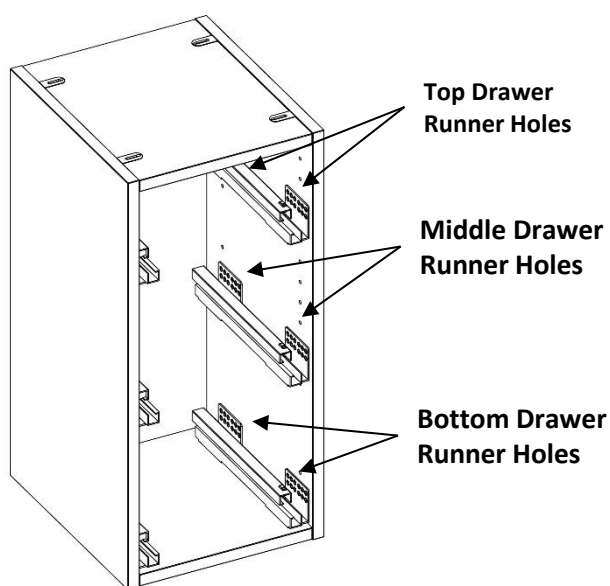


Diagram 15

Drawer Runner Fitting

Attach the runners to the unit using the hole positions indicated in **Diagram 15**.

Once the drawer runners are fitted proceed with assembling and installing the drawer box.

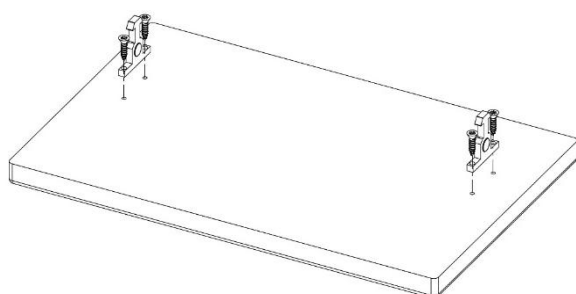


Diagram 16

Drawer Front Preparation

Fit the drawer front clip onto the back of the drawer front, fixing the **6x5/8 screws** provided through the holes in the clips and into the pre-drilled holes on the drawer front.

See Diagram 16.

Installation

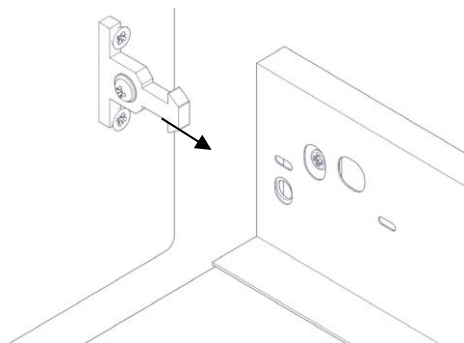


Diagram 17

Drawer Front Fitting

Align the clips on the drawer front with the opening in the sides on the pre- assembled drawer box.

Push the drawer front into the sides until they **click** into position.

See Diagram 17.

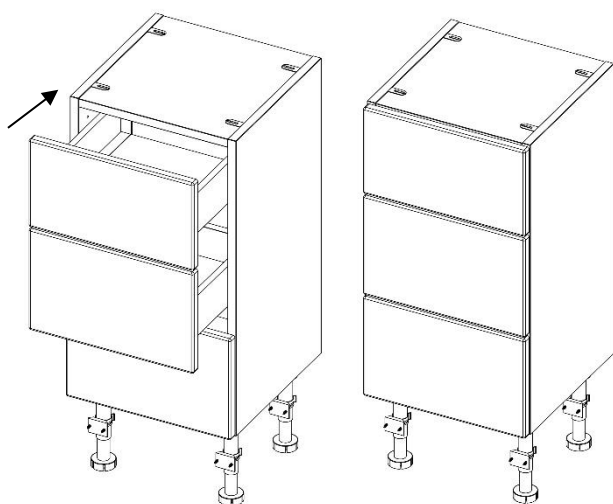


Diagram 18

Fitting the Assembled Drawer

To fit the assembled drawer in the unit, position the drawer box over the runners and push to close, you will hear a **click**, this indicates the drawer had engaged onto the runners and installation is complete.

See Diagram 18.

Drawer Left/Right Adjustment

Turn screw Clockwise to adjust drawer to the right.
Turn screw Anti-Clockwise to adjust drawer to the left.

See Diagram 19.

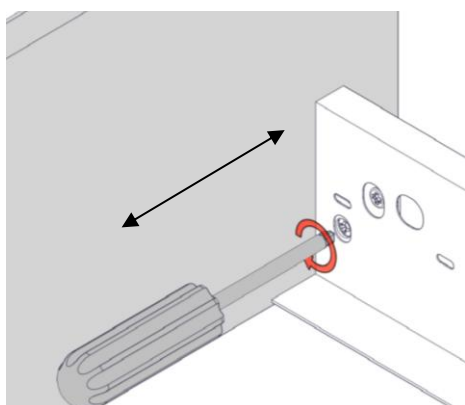


Diagram 20

Drawer Up/Down Adjustment

Turn screw Clockwise to adjust drawer upwards.
Turn screw Anti-Clockwise to adjust downwards.

See Diagram 20.

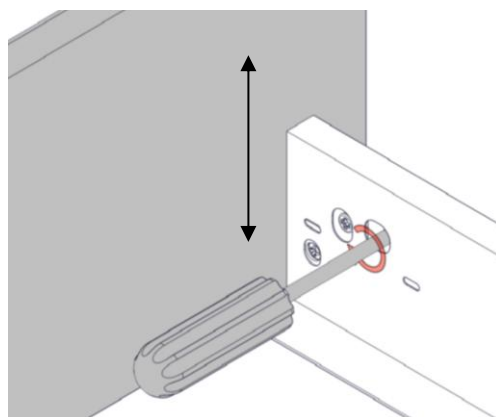


Diagram 21

Installation

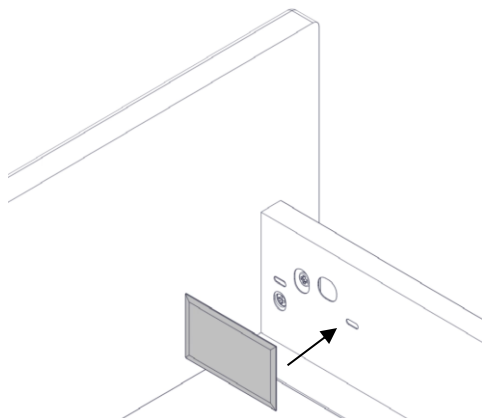


Diagram 21

Cover Cap Fitting

Fit the cover caps onto drawer side. Push fitting into slotted grooves in drawer side.

See Diagram 21.

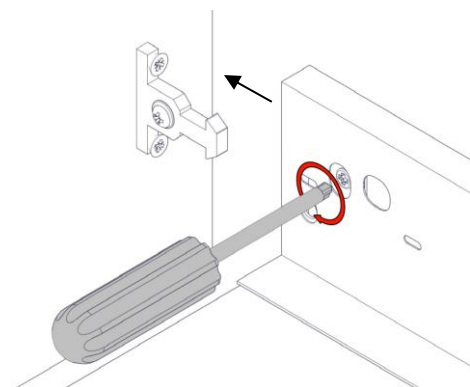


Diagram 22

Drawer Front Removal

Remove the cover caps **Diagram 21**.

Turn the screw anticlockwise indicated in **Diagram 22**.

This will remove the drawer front from the drawer box.

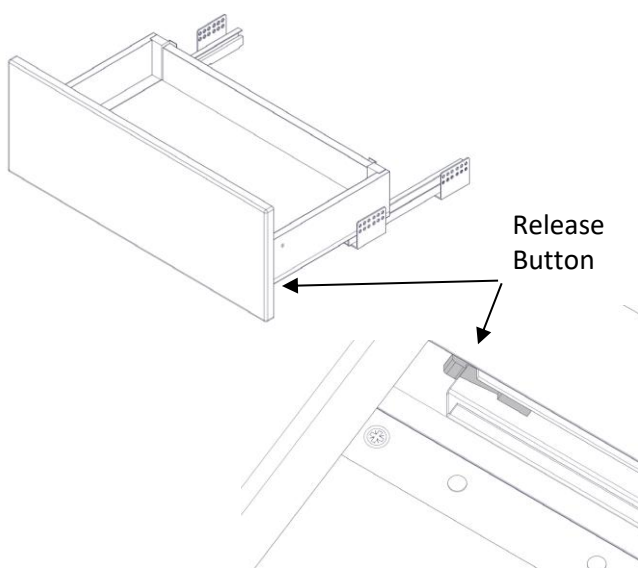



Diagram 23

Assembled Drawer Box Removal


To remove the drawer box including the drawer front, open fully and push button on underside of the drawer as indicated (**Diagram 23**). While keeping the button pressed in lift the drawer box upward to remove.

Installation Instruction

Drawer Basin Units

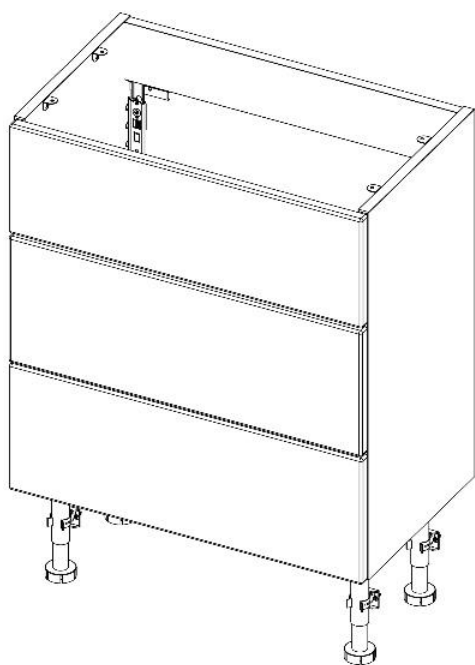

**Drawer Basin Unit
Standard Door**

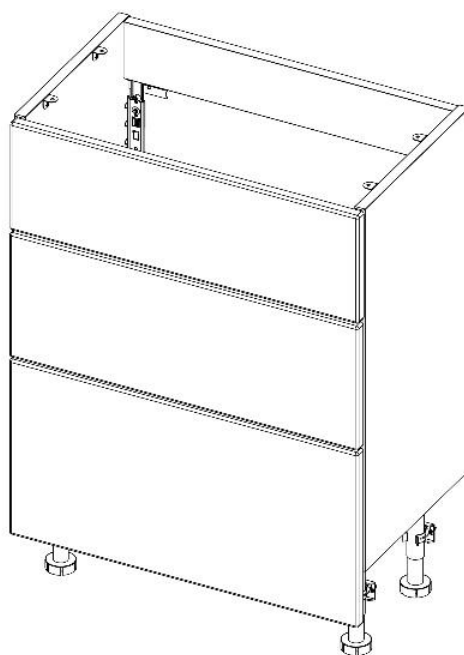

**Drawer Basin Unit
Long Door**

Installation

Note: All cabinets should be fastened to the wall before fixing the basin, after alignment we recommend additional wall fixings are made, then the final installation of the basin can be carried out.

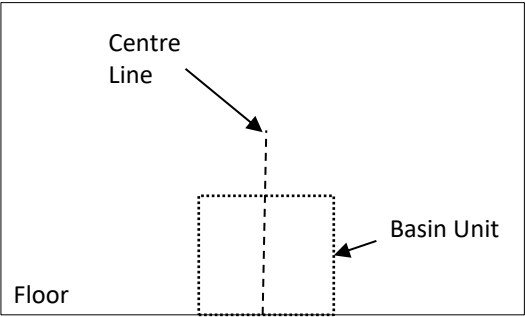


Diagram 1

Note: Consider where the pipes are located before beginning the installation.

To begin, place the Basin Unit into the desired installation position in the room.

Mark a centre line on the wall.

See Diagram 1.

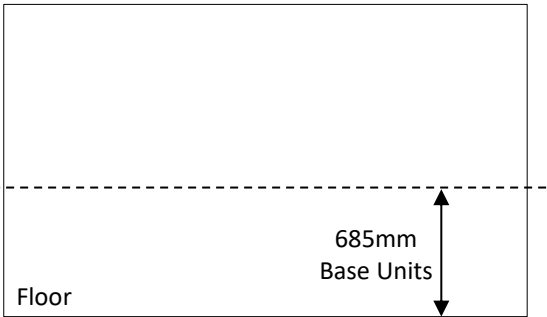


Diagram 2

Note: We recommend an installation height of 820mm. (Height of the unit plus 180mm plinth, this is also to match the height of the WC Unit.)

Draw a horizontal line **685mm** from the floor, this is the height the **bottom edge** of the wall plates will be fitted at, so the unit has a finished height of **820mm**. For other installation heights, adjust accordingly.

See Diagram 2.

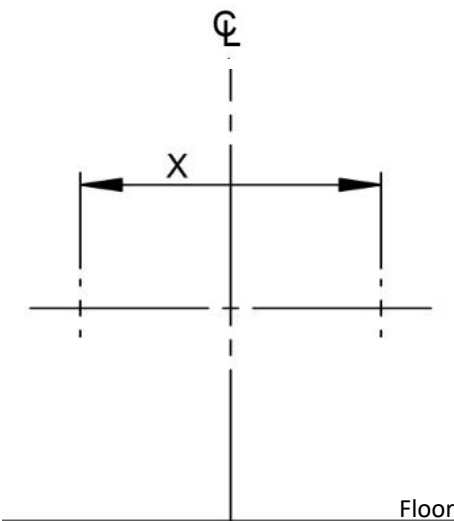


Diagram 3

Next mark the position of the outer edges of the Units = **X**, working out from the centre line.

See Diagram 3.

Installation

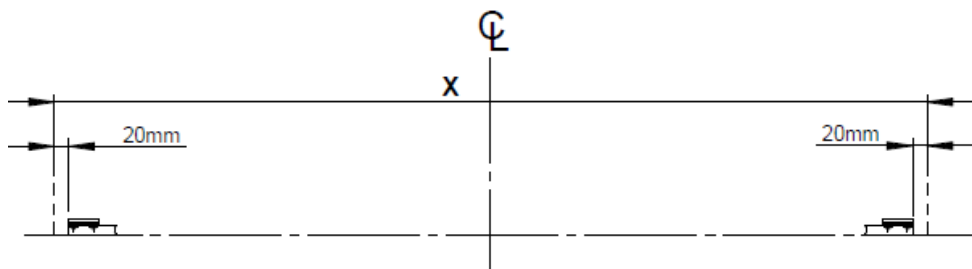


Diagram 4

For all units, mark out the position of the wall plates (supplied as pairs) using the dimensions provided above.

Once marked, drill the fixing positions. Depending on the wall medium, it may be necessary to plug the drilled holes. See **'Important Note'** below.

Next screw and secure the wall plates to the wall using suitable screws. See **'Important Note'** below.

See **Diagram 4**.

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the surround is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used according to the particular model to be installed as well as individual fitting situations and environments. All mechanical fixings, for holding the product in position, must be secured to a solid wall or structure.

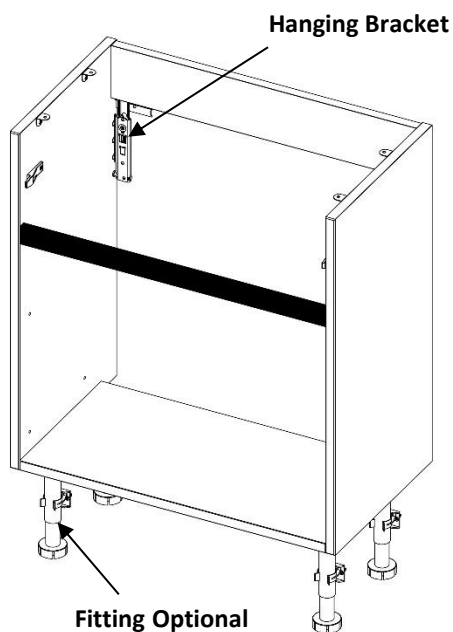


Diagram 5

Hanging the Unit

Note: If floor standing the unit (i.e. using a plinth) you will be required to fit the legs to the cabinet prior to hanging. **Please see guidance on P3-6 & P92-93**

Hang the units, making sure the hanging brackets on the rear of the units, engage with the wall plates on the wall.

See **Diagram 5**.

Installation

Hanging Bracket

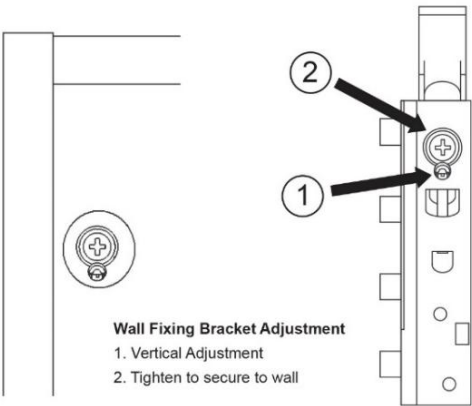


Diagram 6

Hanging Bracket Adjustment

Adjust the units so they sit level, using a Pozi screw driver. **(1)**

Finally fix the units in position by tightening the screws, using a Pozi screw driver. **(2)**

See Diagram 6.

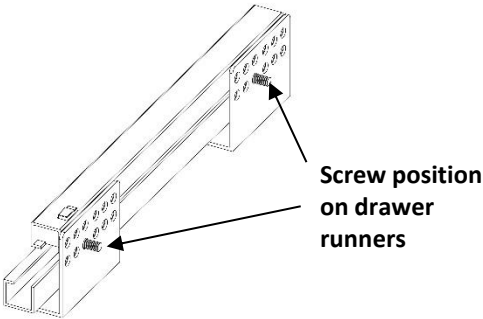


Diagram 7

Drawer Runner Preparation

When fitting runners to the unit use the bottom holes on the runner, as indicated in **Diagram 7**.

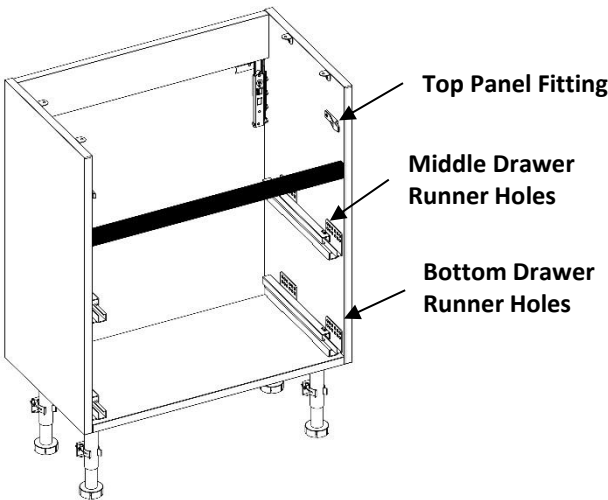


Diagram 8

Drawer Runner Fitting

Attach the runners to the unit using the hole positions indicated in **Diagram 8**.

Once the drawer runners are fitted proceed with assembling and installing the drawer box.

Installation

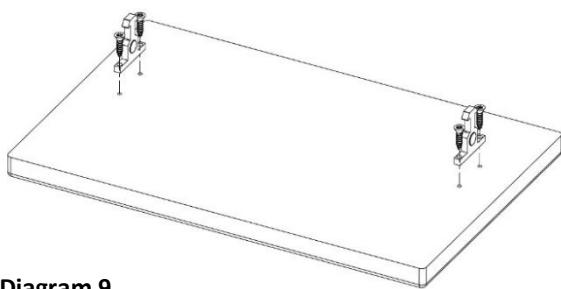


Diagram 9

Drawer Front Preparation

Fit the drawer front clip onto the back of the drawer front, fixing the **6x5/8 screws** provided through the holes in the clips and into the pre-drilled holes on the back of the drawer front.

See Diagram 9.

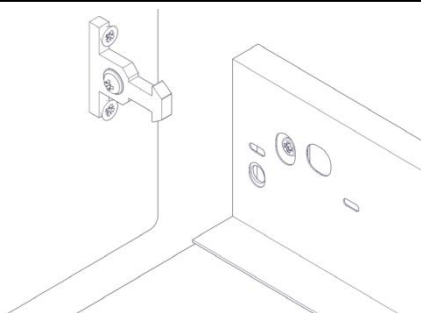



Diagram 10

Drawer Front Fitting

Align the clips on the drawer front with the opening in the sides on the pre- assembled drawer box.

Push the drawer front into the sides until they **click** into position.

See Diagram 10.

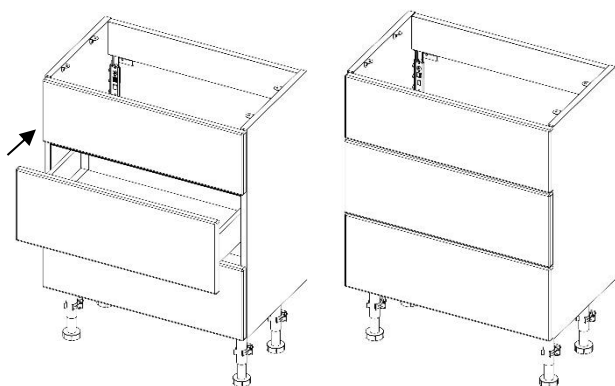

Fitting the Assembled Drawer

To fit the assembled drawers in the unit, position the drawer boxes over the runners and push to close, you will hear a **click**, this indicates the drawer had engaged onto the runners and installation is complete.

See Diagram 11.

Drawer Left/Right Adjustment

Turn screw Clockwise to adjust drawer to the right
Turn screw Anti-Clockwise to adjust drawer to the left.

See Diagram 12.

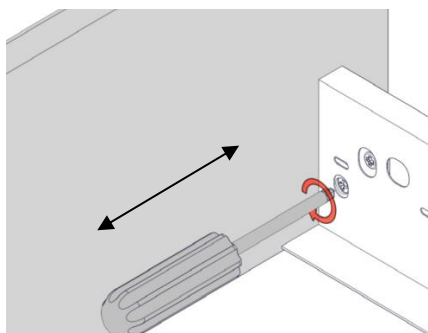


Diagram 12

Drawer Up/Down Adjustment

Turn screw Clockwise to adjust drawer upwards
Turn screw Anti-Clockwise to adjust downwards

See Diagram 13.

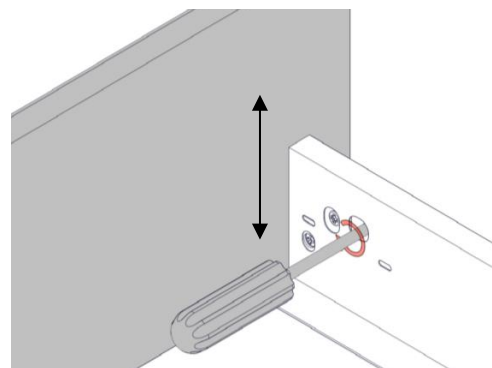


Diagram 13

Installation

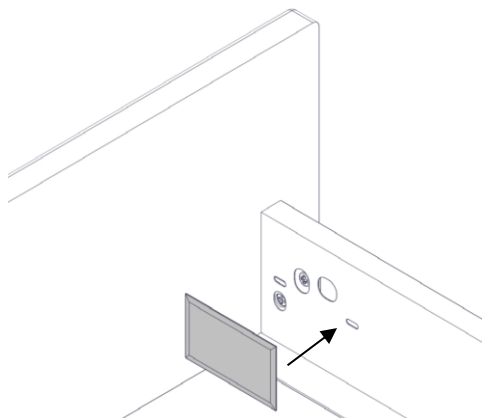


Diagram 14

Cover Cap Fitting

Fit the cover caps onto drawer side. Push fitting into slotted grooves in drawer side.

See Diagram 14.

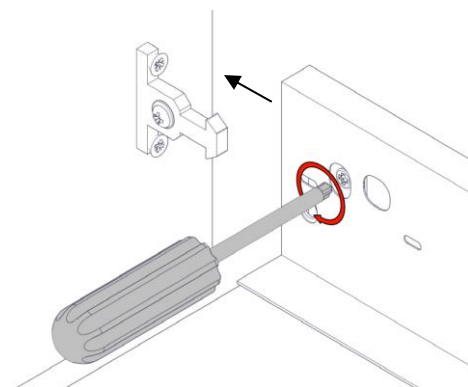


Diagram 15

Drawer Front Removal

Remove the cover caps **Diagram 14**.

Turn the screw anticlockwise indicated in **Diagram 15**.

This will remove the drawer front from the drawer box.

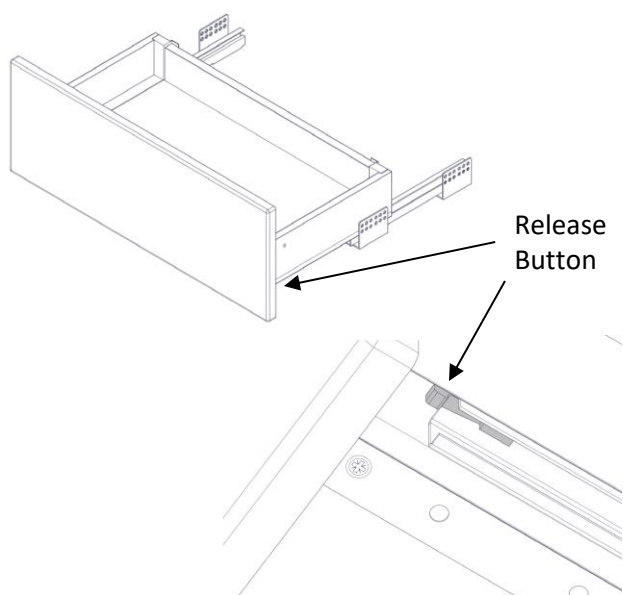


Diagram 16

Assembled Drawer Box Removal

To remove the drawer box including the drawer front, open fully and push button on the underside of the drawer as indicated (**Diagram 16**).

While keeping the button pressed in lift the drawer box upward to remove.

Installation

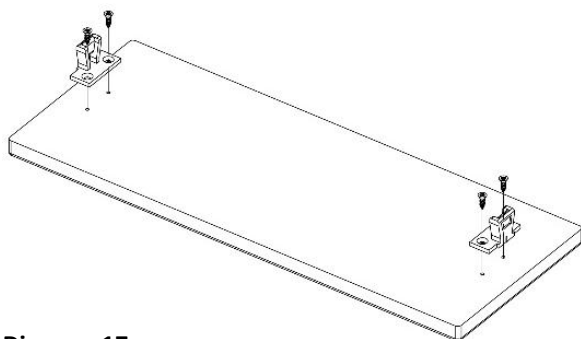


Diagram 17

Top Panel Fitting

Fit the Keku fittings onto the top panel, fixing the **6x5/8 screws** provided through the holes in the fittings and into the pre-drilled holes on the top panel.

Diagram 17.

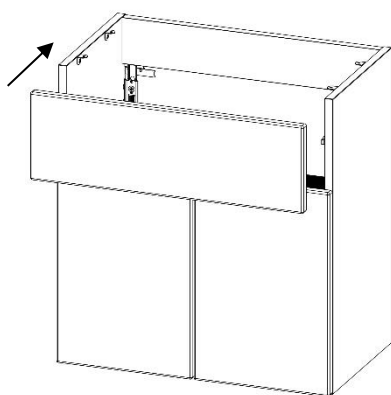


Diagram 18


Top Panel Fitting *Continued.....*

Once the Keku fittings are fitted to the front panel, push the panel onto pre-installed fixings on unit.



The top panel is now installed.

Diagram 18.


Installation Instruction Tall Unit

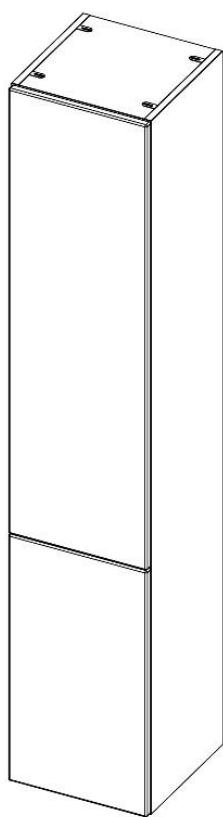

Tall Units – Standard Doors

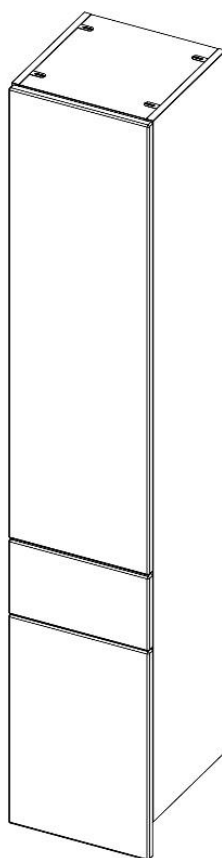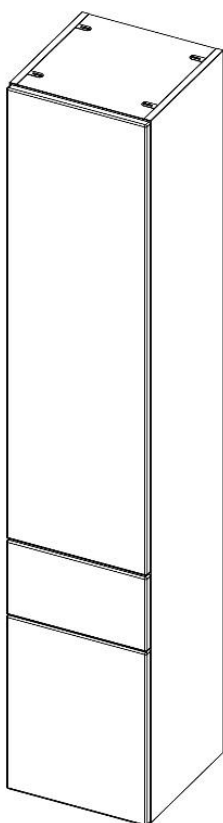

Tall Units – Long Door

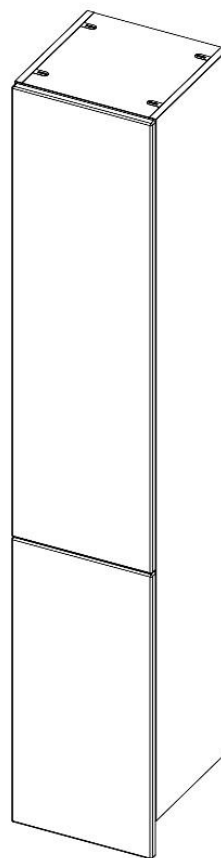

Installation

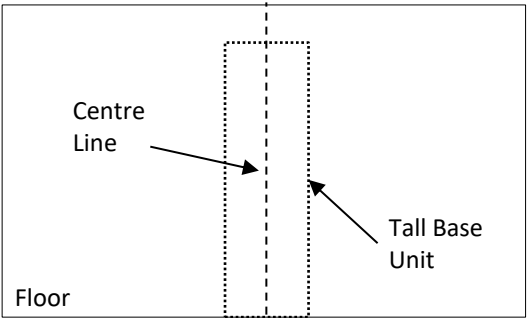


Diagram 1

Note: Consider where the pipes are located before beginning the installation.

To begin, place the Tall Base Unit into the desired installation position in the room.

Mark a centre line on the wall.

See Diagram 1.

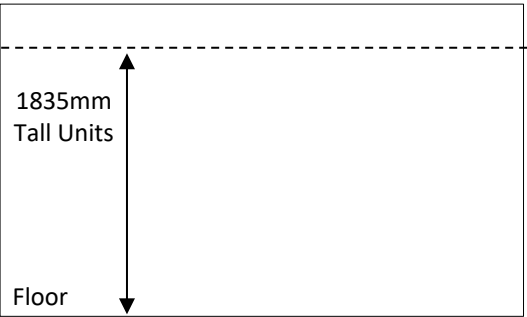


Diagram 2

Note: We recommend an installation height of 1972mm. (Height of the tall unit plus 180mm plinth.)

Draw a horizontal line **1835mm** from the floor, this is the height the **bottom edge** of the wall plates will be fitted at, so the unit has a finished height of 1972mm. For other installation heights, adjust accordingly.

See Diagram 2.

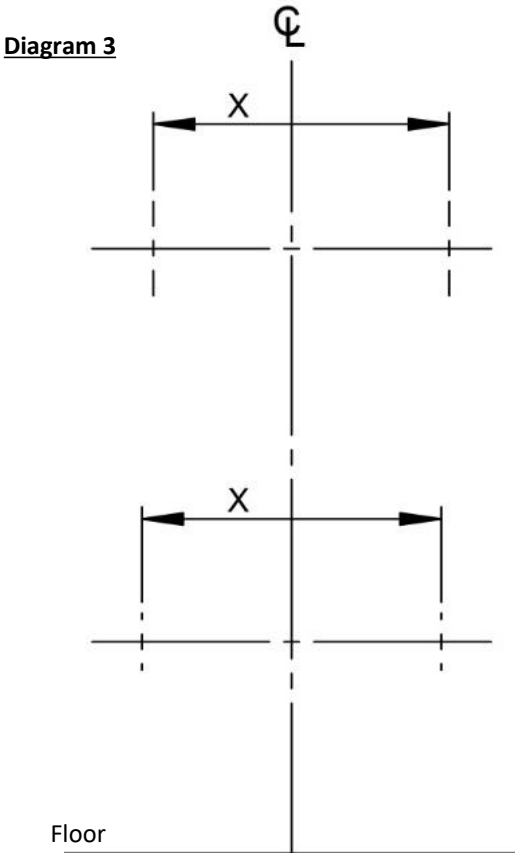



Diagram 3

Next mark the position of the outer edges of the Units = **X**

See Diagram 3.

Installation

Diagram 4

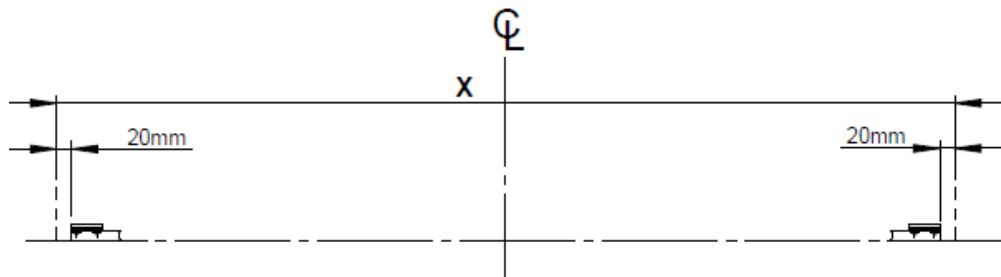

For all the units mark out the position of the wall plates (supplied as pairs) using the dimensions provided above.

Once marked, drill the fixing positions. Depending on the wall medium, it may be necessary to plug the drilled holes. See '**Important Note**' below.


Next screw and secure the wall plates to the wall using suitable screws. See '**Important Note**' below.

See Diagram 4

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the surround is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used according to the model to be installed as well as individual fitting situations and environments. All mechanical fixings, for holding the product in position, must be secured to a solid wall or structure.

Diagram 5

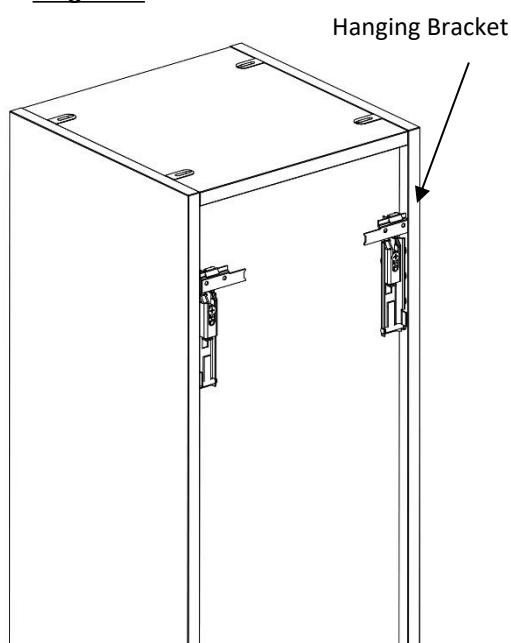

Hanging the Unit

Note: If floor standing the unit (i.e. using a plinth) you will be required to fit the legs to the cabinet prior to hanging. **Please see guidance on P3-6 & P92-93**

Hang the units, making sure the hanging brackets on the rear of the units, engage with the wall plates on the wall.

See Diagram 5.

Installation

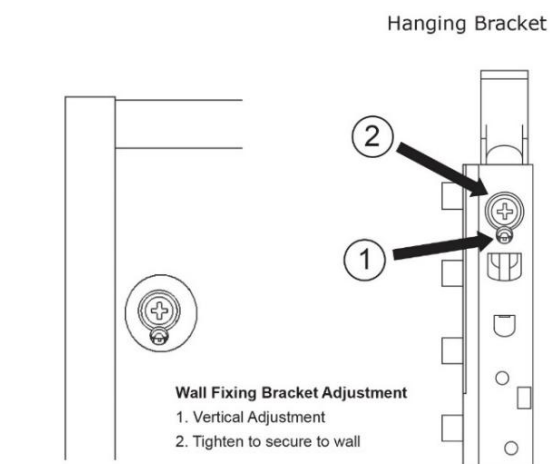


Diagram 6

Hanging Bracket Adjustment

Adjust the units so they sit level, using a Pozi screw driver. **(1)**

Finally fix the units in position by tightening screws, using a Pozi screw driver. **(2)**

See Diagram 6.

Note: For all tall units, once fully adjusted & tightened fit the supplied cover caps into holes on back panel.

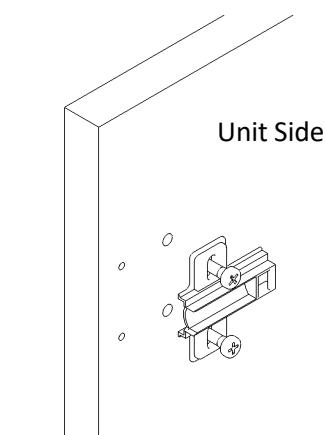


Diagram 7

Hanging the Doors

Tip: Lay the doors on a clean flat surface that will not damage or scratch the product.

Firstly screw the hinge plate into unit side, using the predrilled 5mm holes as indicated in **Diagram 7**.

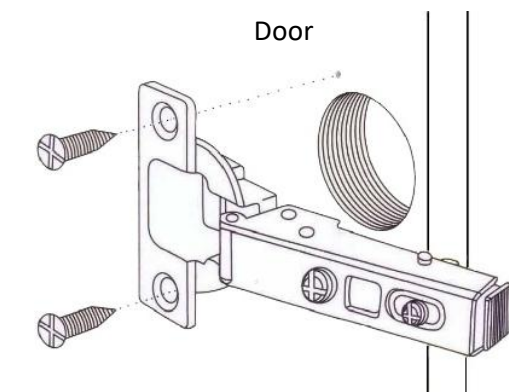


Diagram 8

Hanging the Doors Continued.....

Locate the hinge arm into predrilled 35mm hole on back of door and secure with **2No.6x5/8" countersunk screws** provided.

See Diagram 8.

Installation

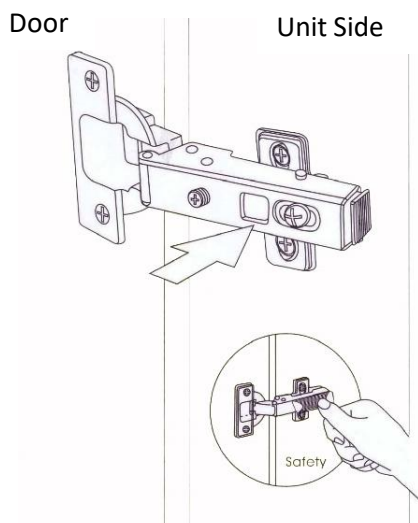


Diagram 9

Hanging the Doors Continued.....

To hang the door, locate the hinge arm over the hinge plate and **click** into position.

See Diagram 9.

Tip: Adjust the alignment of the door before final tightening.

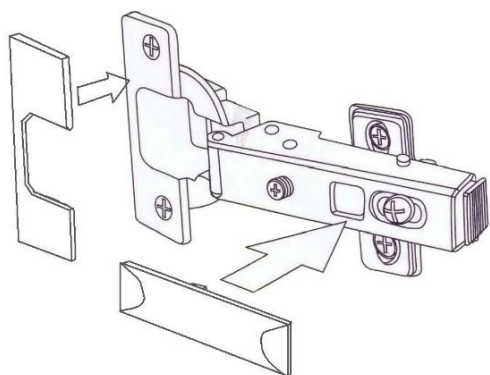


Diagram 10

Hanging the Doors Continued.....

Click the cover plates into position on the hinges.

See Diagram 10.

Adjustments

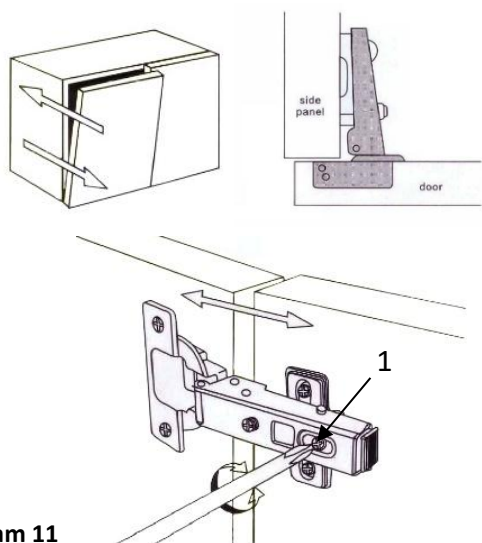


Diagram 11

Door Front adjustment

Set the distance between the back face of the door and the edge of the unit side panel.

Tip: Leave an approx. 2mm gap to help avoid binding.

To fix the hinge arm to the hinge plate, tighten screws **(1)** securely.

See **Diagram 11**.

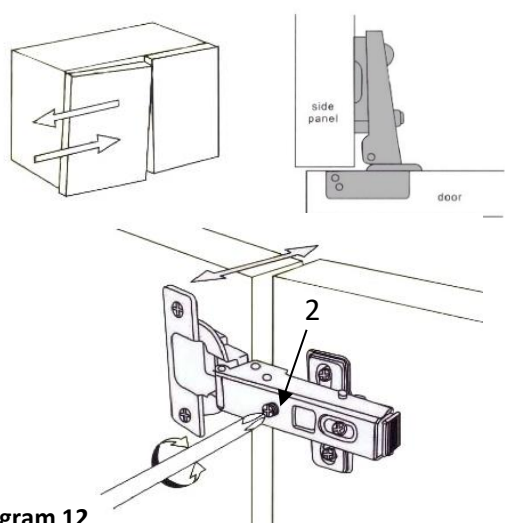


Diagram 12

Door Lateral overlay adjustment

Adjust screws **(2)** to adjust the edge of the door so it runs parallel with the outside face of the unit side panel.

Note: The edge of the door should be set back approx. 1.5mm from the edge of the unit.

Note: For the protection of the damper, it only allows a lateral adjustment. (left to right)

See **Diagram 12**.

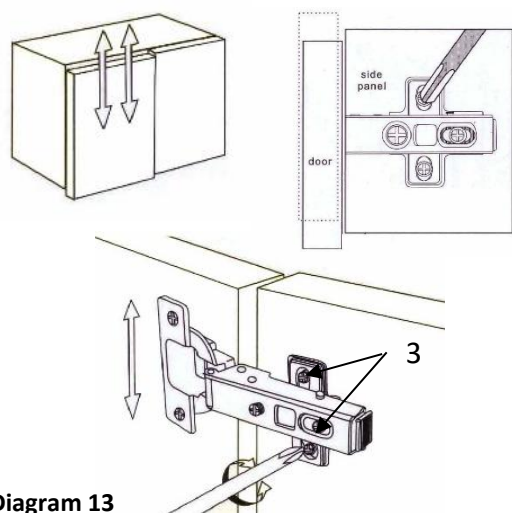


Diagram 13

Door Vertical adjustment

The door can be vertically adjusted by turning the plate screws up and down. **(3)**

The door can be vertically adjusted by loosening the screws **(3)** on all of the hinge plates on the door and carefully moving the door up or down as required.

Once in position re-tighten all the screws **(3)** to secure in place.

See **Diagram 13**.

Installation

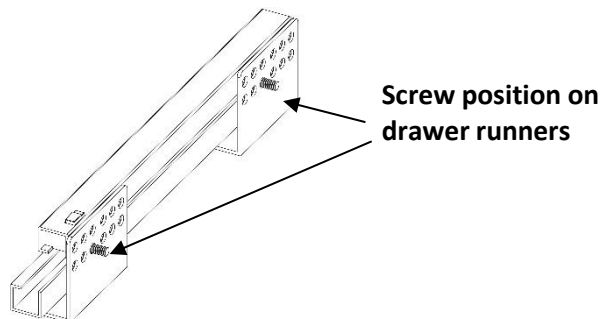


Diagram 14

Drawer Runner Preparation

When fitting runners to the unit use the bottom holes on the runner, as indicated in **Diagram 14**.

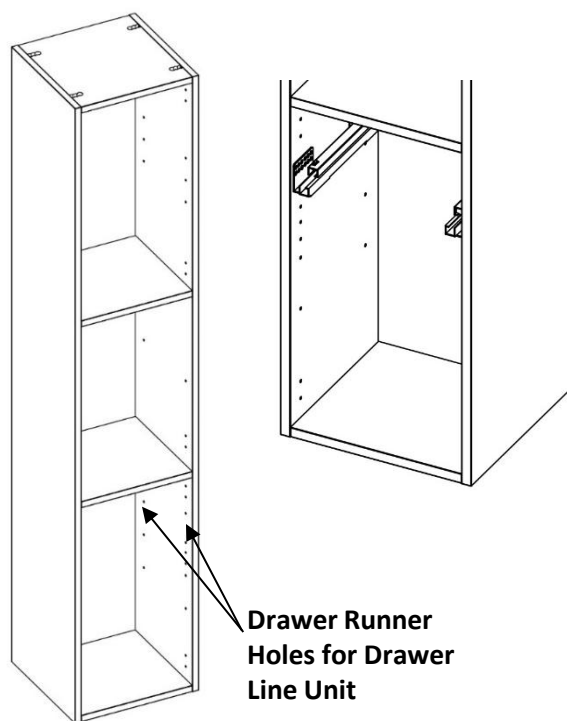


Diagram 15

Drawer Runner Fitting

Attach the runners to the unit using the hole positions indicated in **Diagram 15**.

Once the drawer runners are fitted proceed with assembling and installing the drawer box.

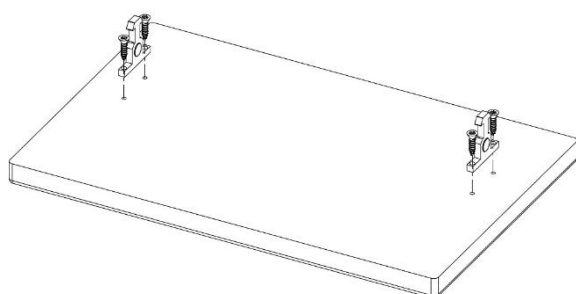


Diagram 16

Drawer Front Preparation

Fit the drawer front clip onto the back of the drawer front, fixing the **6x5/8 screws** provided through the holes in the clips and into the pre-drilled holes on the drawer front.

See Diagram 16.

Installation

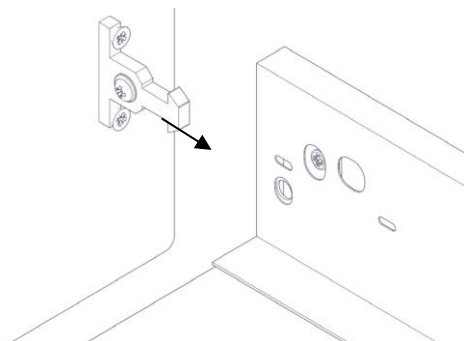


Diagram 17

Drawer Front Fitting

Align the clips on the drawer front with the opening in the sides on the pre- assembled drawer box.

Push the drawer front into the sides until they **click** into position.

See Diagram 17.

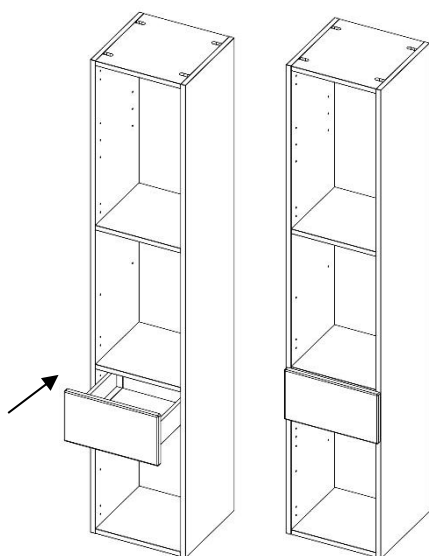


Diagram 18

Fitting the Assembled Drawer

To fit the assembled drawer in the unit, position the drawer box over the runners and push to close, you will hear a **click**, this indicates the drawer had engaged onto the runners and installation is complete.

See Diagram 18.

Drawer Left/Right Adjustment

Turn screw Clockwise to adjust drawer to the right.
Turn screw Anti-Clockwise to adjust drawer to the left.

See Diagram 19.

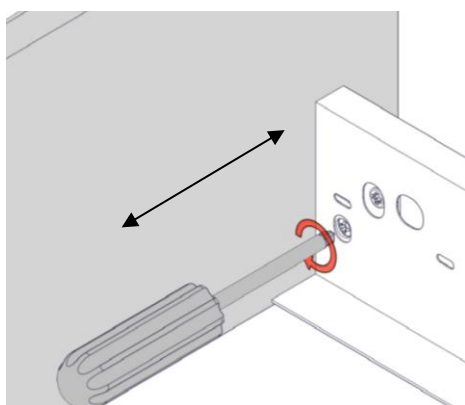


Diagram 20

Drawer Up/Down Adjustment

Turn screw Clockwise to adjust drawer upwards.
Turn screw Anti-Clockwise to adjust downwards.

See Diagram 20.

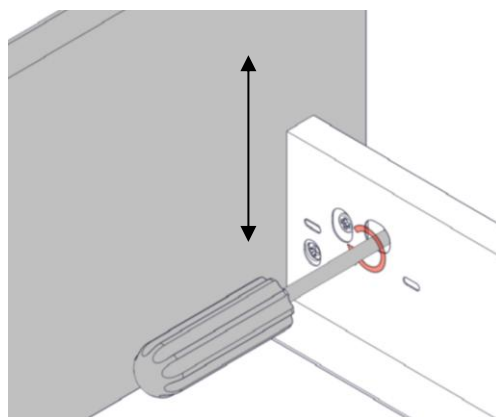


Diagram 21

Installation

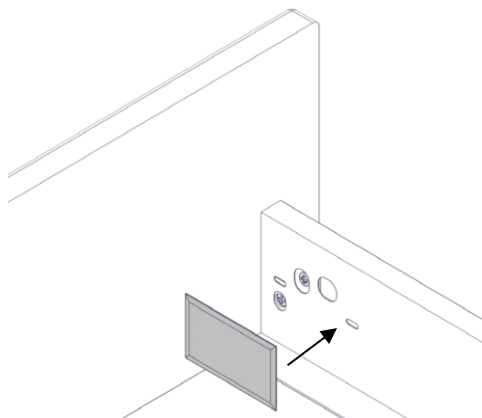


Diagram 21

Cover Cap Fitting

Fit the cover caps onto drawer side. Push fitting into slotted grooves in drawer side.

See Diagram 21.

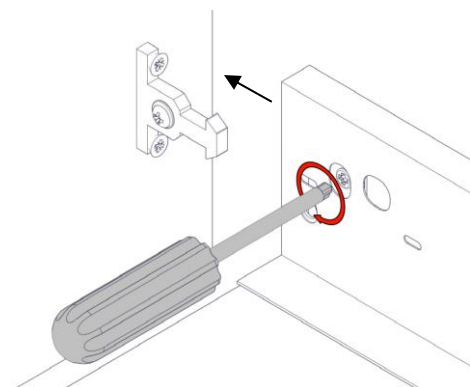


Diagram 23

Front Drawer Removal

Remove the cover caps **Diagram 21**.

Turn the screw anticlockwise indicated in **Diagram 22**.

This will remove the drawer front from the drawer box.


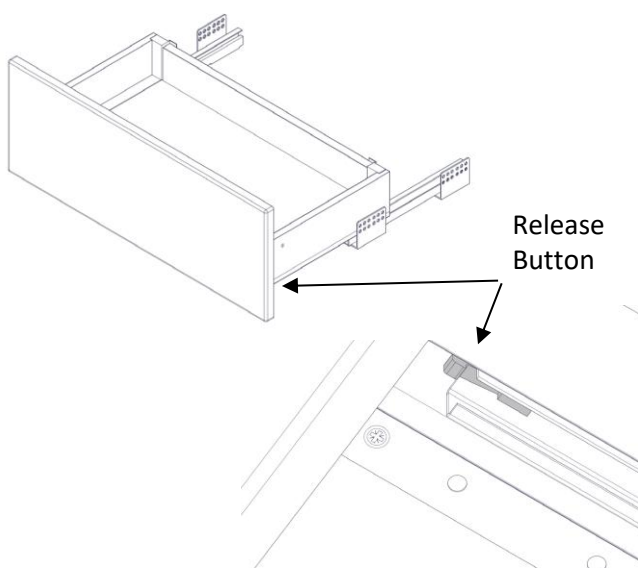


Diagram 23


Assembled Drawer Box Removal

To remove the drawer box including the drawer front, open fully and push button on underside of the drawer as indicated (**Diagram 23**). While keeping the button pressed in lift the drawer box upward to remove.

Installation Instruction WC Unit with legs

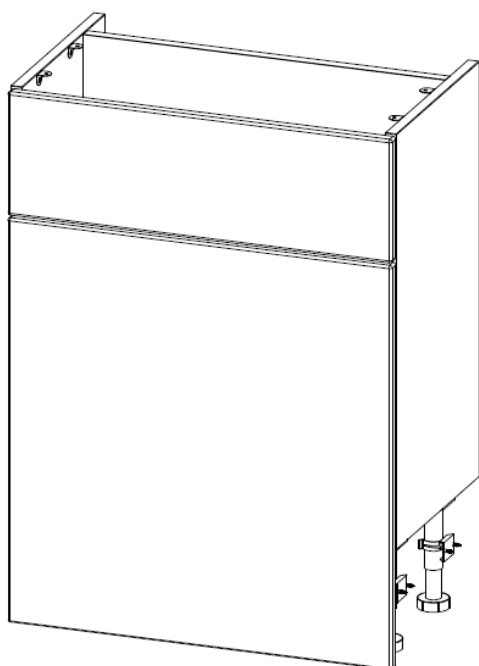


WC Unit with legs

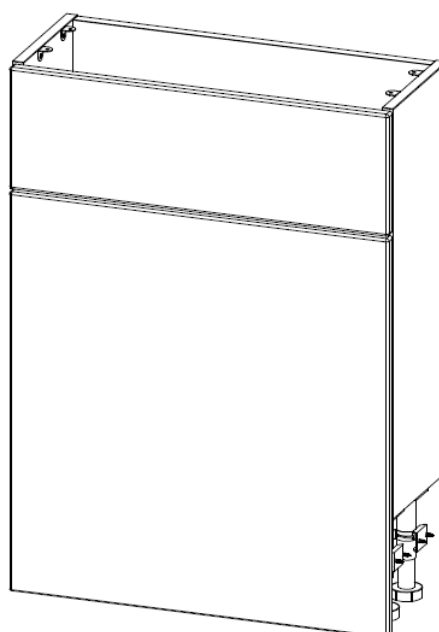

**Slimline WC Unit
with legs**

Installation

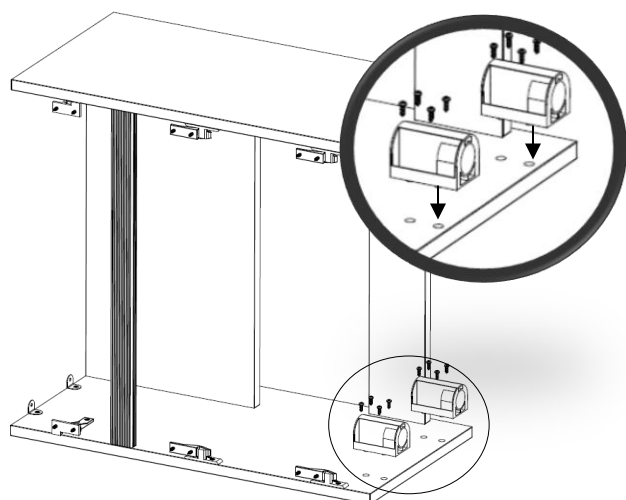


Note: Place unit on a clean flat surface that will not scratch the product.

To begin, lay the unit on its side and knock in the leg sockets as indicated in Diagram 1.


Then screw the sockets to the cabinet side using the 3.5 x 12mm Round head screws provided.

Diagram 1

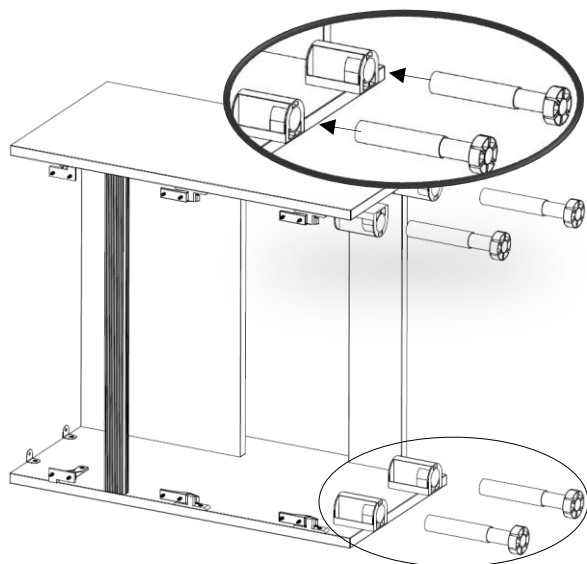

Push leg into the socket the stand the unit upright onto in feet. Diagram 2.


Diagram 2

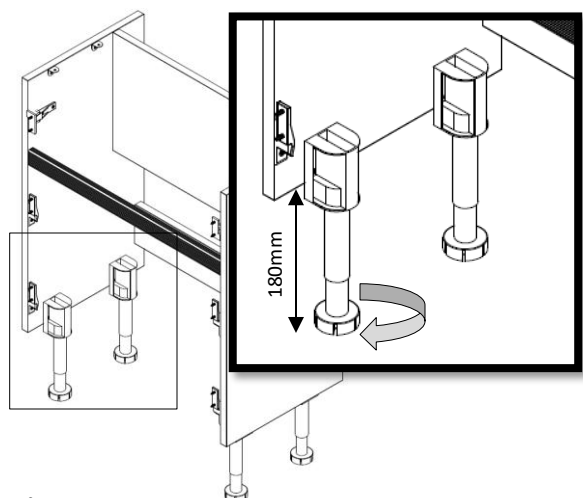

Turn to adjust the height of the leg so they measure 180mm from the bottom of the cabinet to the bottom of the legs as indicated in Diagram 3.

Diagram 3

Installation

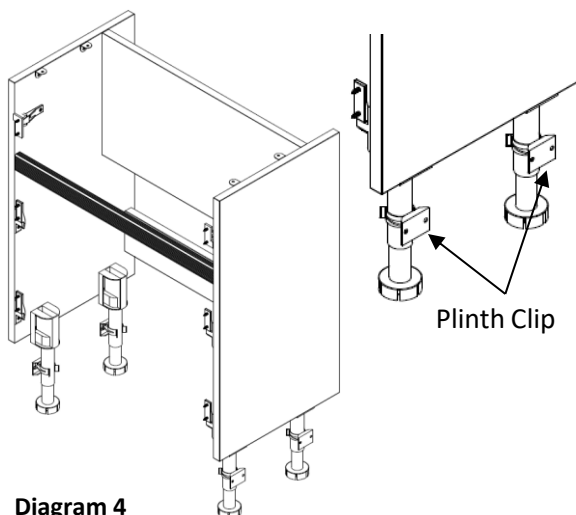


Note: A 700mm return plinth that has been edged all 4 sides can be purchased separately.

Alternatively a std plinth offcut can also be used, but note only the bottom edge will be finished/edged.

If an end panel is being used to clad the cabinet the return plinth/std plinth is not required.

Push fit the plinth clips onto the cabinet legs making sure the clip is parallel with the cabinet side.

Diagram 4.

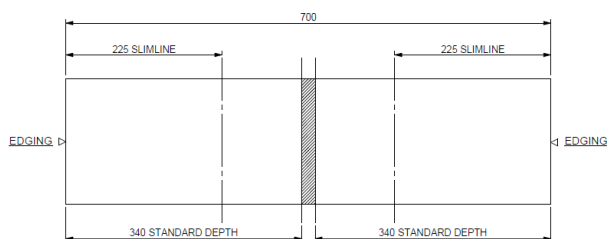


The 700mm plinth will require cutting to installation length.

Measure from the Edged side of the panel before cutting. This will enable a finished edge at the front of the cabinet.

Standard Depth 340mm
Slimline Depth 225mm

Note: If you have not purchased the 700mm plinth the lengths can be cut from offcuts of standard plinths, however the front, top and back edges will be unfinished.

Diagram 5

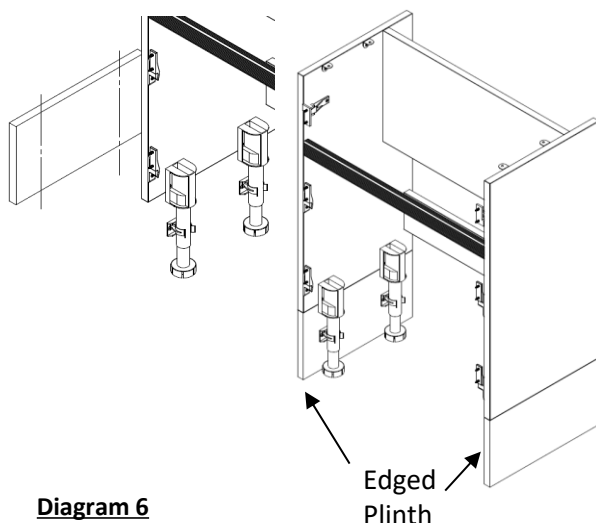


To fit the plinth, line the front edge of the plinth with the front edge of the cabinet and mark leg clip positions.

Once marked screw the leg clips onto position then clip the plinth into position.

Diagram 6.

Note: Were possible seal raw edges.

Installation

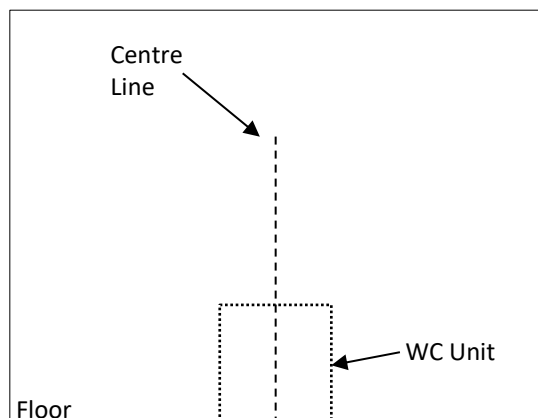

Note: Consider where the pipes are located before beginning the installation.

To begin, place the unit into the desired installation position in the room.

Mark a centerline on the wall.

See Diagram 7

Once the unit is in position, make sure unit is level. Secure the cabinet into position using appropriate fixings.

Note: Fixings are not supplied.

Diagram 7

WC Top Panel - Installation Preparation

Lay the doors, finished face down, on a clean flat surface that will not damage or scratch the product.

Fit the supplied Keku fittings to the top panel, fixing the **6x5/8 screws** provided into the pre-drilled holes.

See Diagram 8

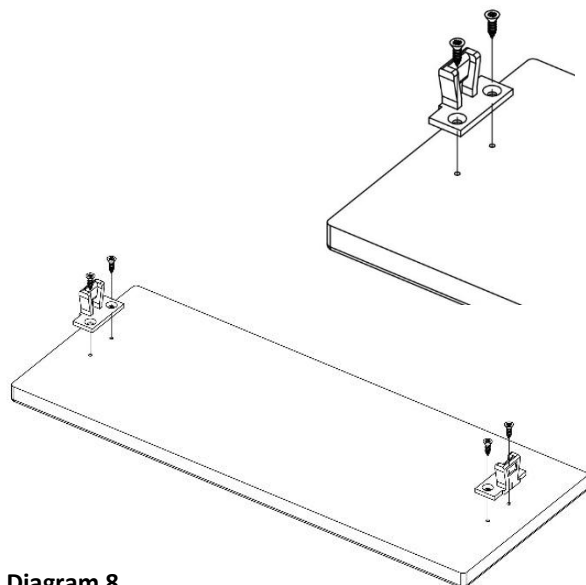


Diagram 8

WC Lower Panel - Installation Preparation

Lay the doors, finished face down, on a clean flat surface that will not damage or scratch the product.

Fit the supplied Keku fittings to the lower panel, fixing the **6x5/8 screws** provided into the pre-drilled holes.

See Diagram 9

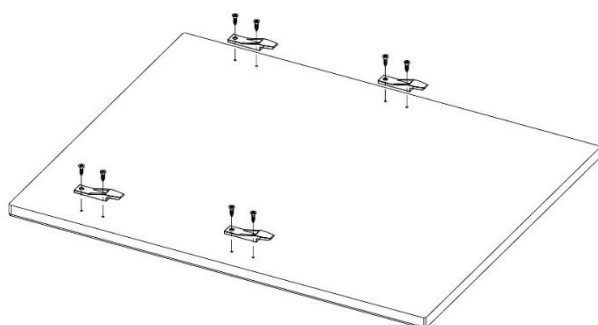


Diagram 9

Installation

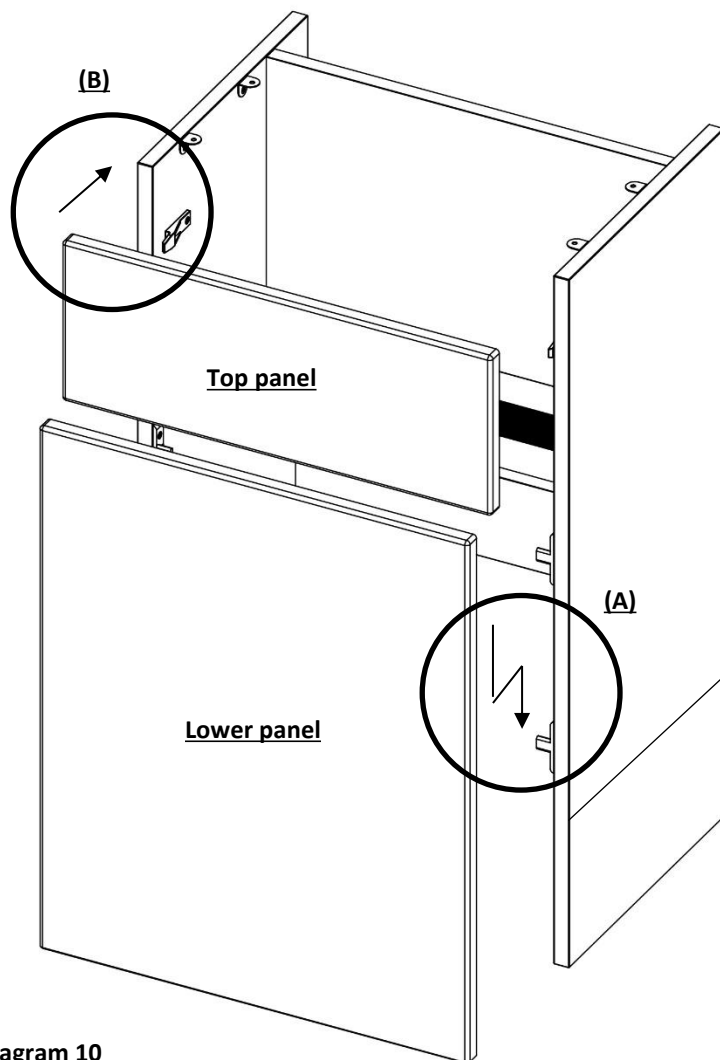


Diagram 10

Fitting the Frontage to the Unit.

WC Lower Panel Fitting

First fit the WC Lower Panel. Align the Keku fittings on the lower panel with the pre-fitted fittings on the unit. Once aligned push the lower panel downwards until fittings engage with each other.

Diagram 10 (A)

Note: The WC Lower Panel will require cutting to allow for pipes. Refer to WC & cistern specification before cutting.

WC Top Panel Fitting

Next fit the WC Top Panel. Align the Keku fittings on the top panel with the pre-fitted fittings on the unit. Once aligned push the top panel downwards until fittings engage with each other.

Diagram 10 (B)

Note: The WC Top Panel will require cutting for the cistern button. Please refer to the cistern instructions before cutting.

Note: Any cut edges should be sealed with appropriate waterproof sealant.

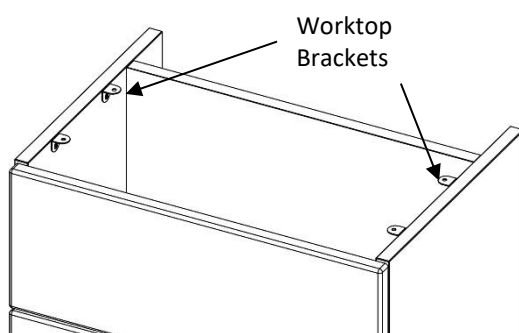


Diagram 11


Worktop Fitting

Worktops can be fitted to the units using the brackets pre-fitted to the units.


Note: Screws are not supplied as these are dependent on the worktop thickness.

Diagram 11

Installation Instruction WC Units-Pre 2026

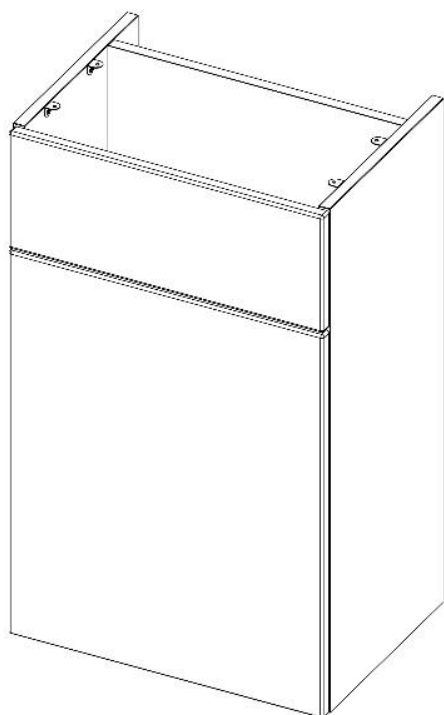


WC Unit

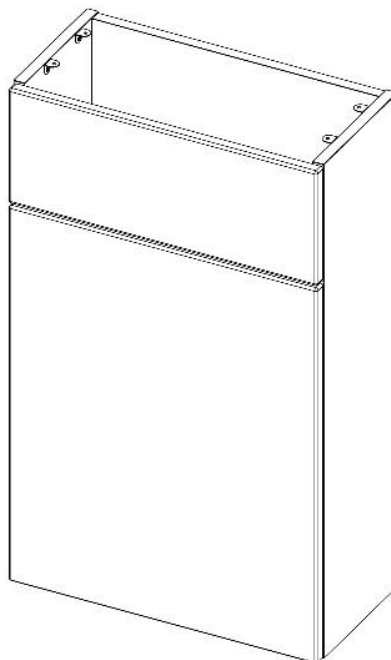

Slimline WC Unit

Installation

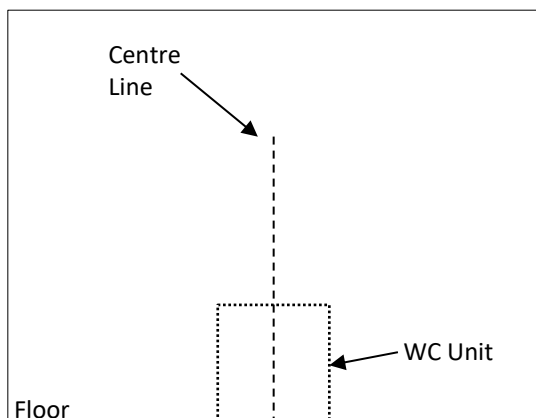

Note: Consider where the pipes are located before beginning the installation.

To begin, place the unit into the desired installation position in the room.


Mark a centerline on the wall.

See Diagram 1

Once the unit is in position, level the unit by either scribing or packing. Secure the cabinet into position using appropriate fixings.

Note: Fixings are not supplied.

Diagram 1

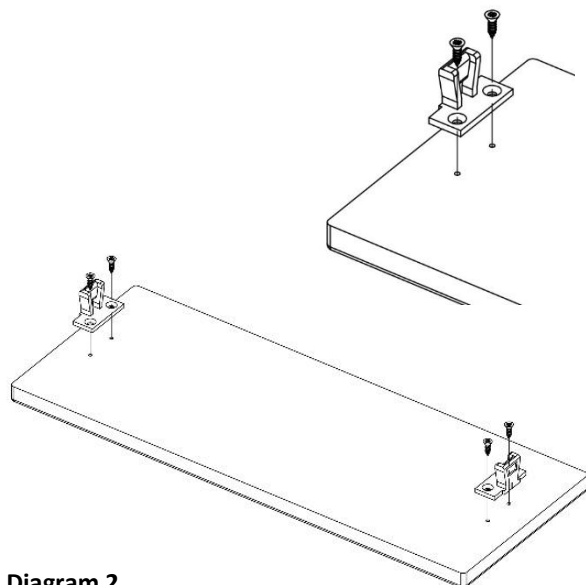


WC Top Panel - Installation Preparation

Lay the doors, finished face down, on a clean flat surface that will not damage or scratch the product.

Fit the supplied Keku fittings to the top panel, fixing the **6x5/8 screws** provided into the pre-drilled holes.

See Diagram 2

Diagram 2

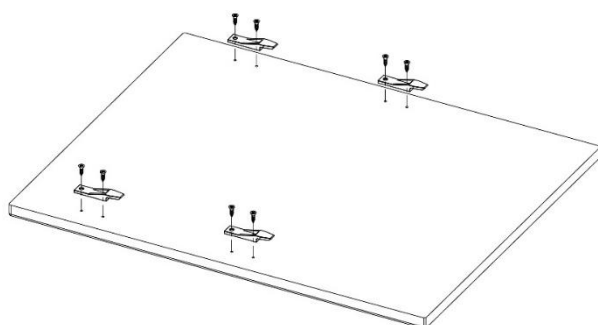

WC Lower Panel - Installation Preparation

Lay the doors, finished face down, on a clean flat surface that will not damage or scratch the product.

Fit the supplied Keku fittings to the lower panel, fixing the **6x5/8 screws** provided into the pre-drilled holes.

See Diagram 3

Diagram 3

Installation

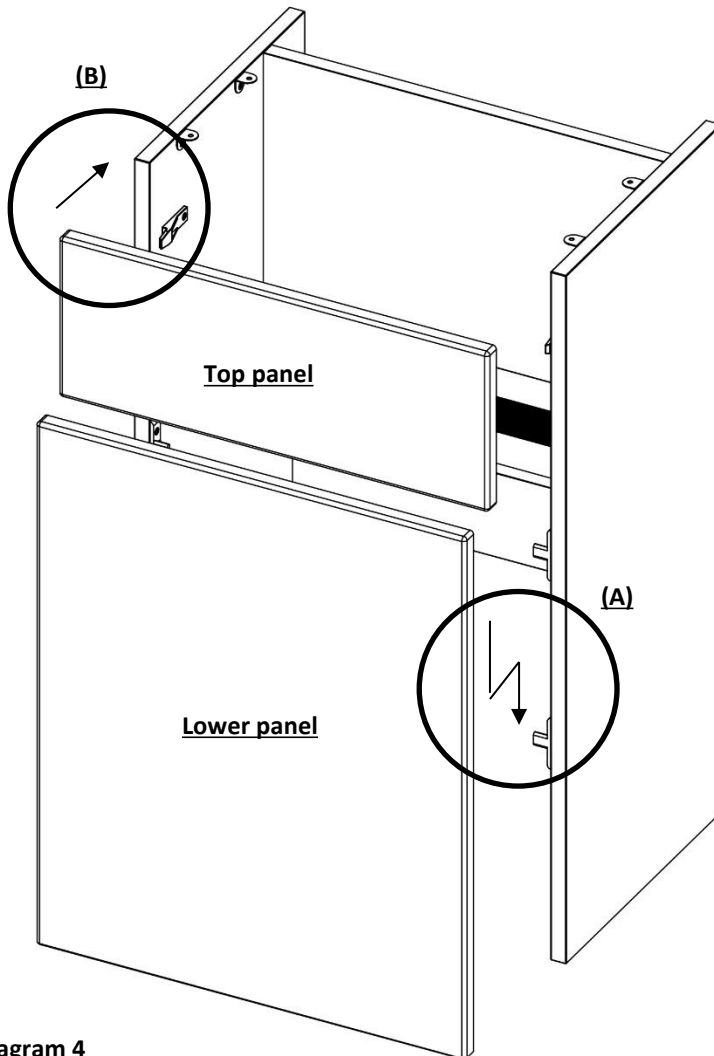


Diagram 4

Fitting the Frontage to the Unit.

WC Lower Panel Fitting

First fit the WC Lower Panel. Align the Keku fittings on the lower panel with the pre-fitted fittings on the unit. Once aligned push the lower panel downwards until fittings engage with each other.

Diagram 4 (A)

Note: The WC Lower Panel will require cutting to allow for pipes. Refer to WC & cistern specification before cutting.

WC Top Panel Fitting

Next fit the WC Top Panel. Align the Keku fittings on the top panel with the pre-fitted fittings on the unit. Once aligned push the top panel downwards until fittings engage with each other.

Diagram 4 (B)

Note: The WC Top Panel will require cutting for the cistern button. Please refer to the cistern instructions before cutting.

Note: Any cut edges should be sealed with appropriate waterproof sealant.

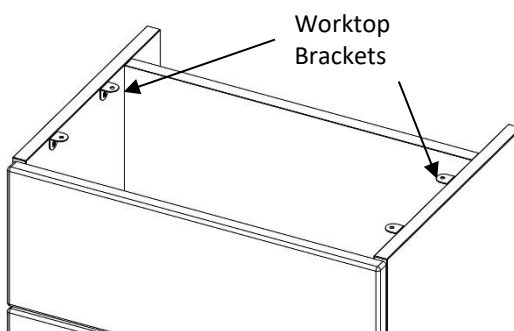


Diagram 5


Worktop Fitting

Worktops can be fitted to the units using the brackets pre-fitted to the units.

Note: Screws are not supplied as these are dependent on the worktop thickness.

Diagram 5

Installation Instruction 300 Slimline WC Tall Wall Unit

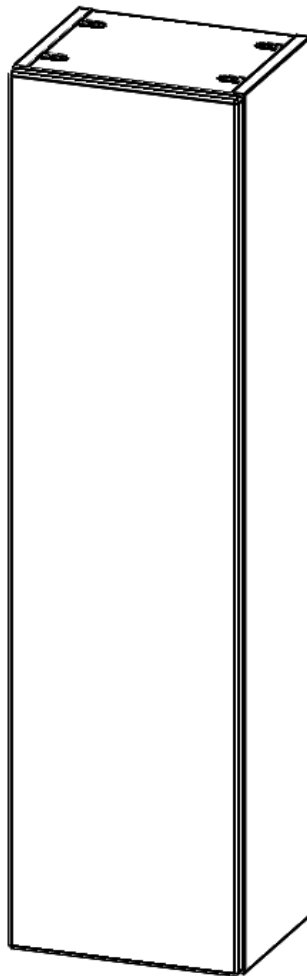

NOTE: Push to open pistons can be purchased separately to give a handleless look.


Installation-Introduction

Note: Before beginning the installation, please consider the following installation scenarios.

Option 1- Standalone Installation

If installing 2 X 300 Slimline WC Tall Wall Unit and a WC Unit & as a **standalone** installation. i.e. not in a fitted run. 2 x 250 x 1972 Tall Base Unit End Panels are required to be installed, either side of the unit.

Note: The Tall Base Unit End Panels will be required to cut to size and the raw edge sealed prior to installation.

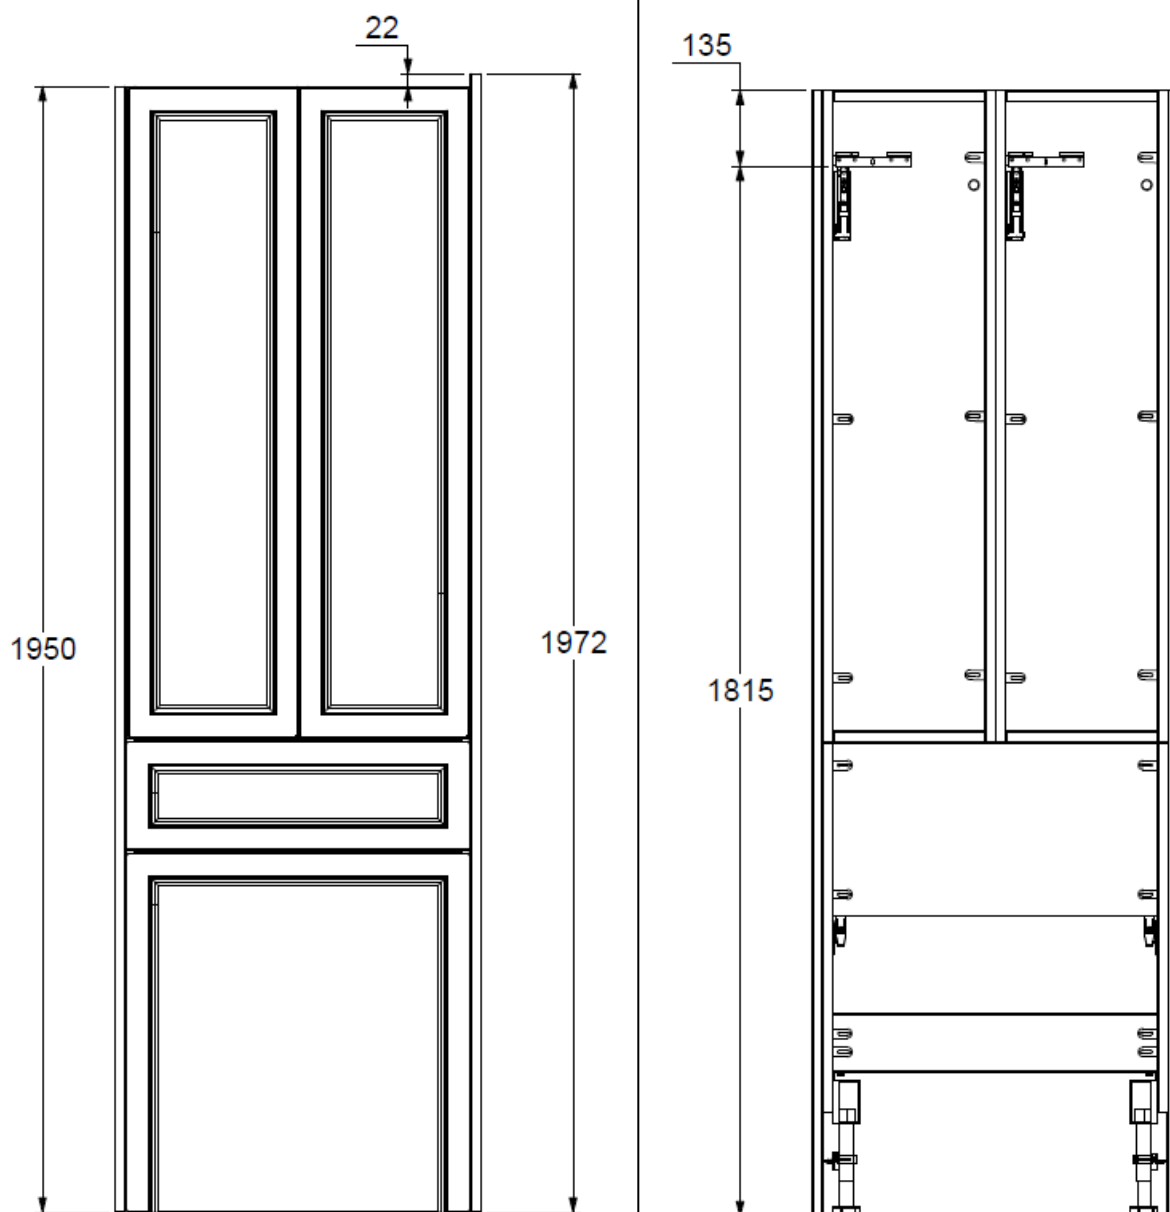


Installation-Introduction

Option 2- Fitted Run Installation without a 350 Tall unit

If installing one or multiple 300 Slimline WC Tall Wall Units and a WC Unit in a fitted type run installation **without** a 350 Tall Unit, the 300 Slimline WC Tall Wall Units are required to be installed on top of the worktop/basin with 2 x 245 x 1130 Above WC Unit End Panels installed, either side of the unit.

Note: We recommend fitting the WC Unit & 300 Slimline WC Tall Wall Unit first, **then** any accompanying H640mm wall units, as the installation height will vary depending on the worktop/basin thickness being installed.

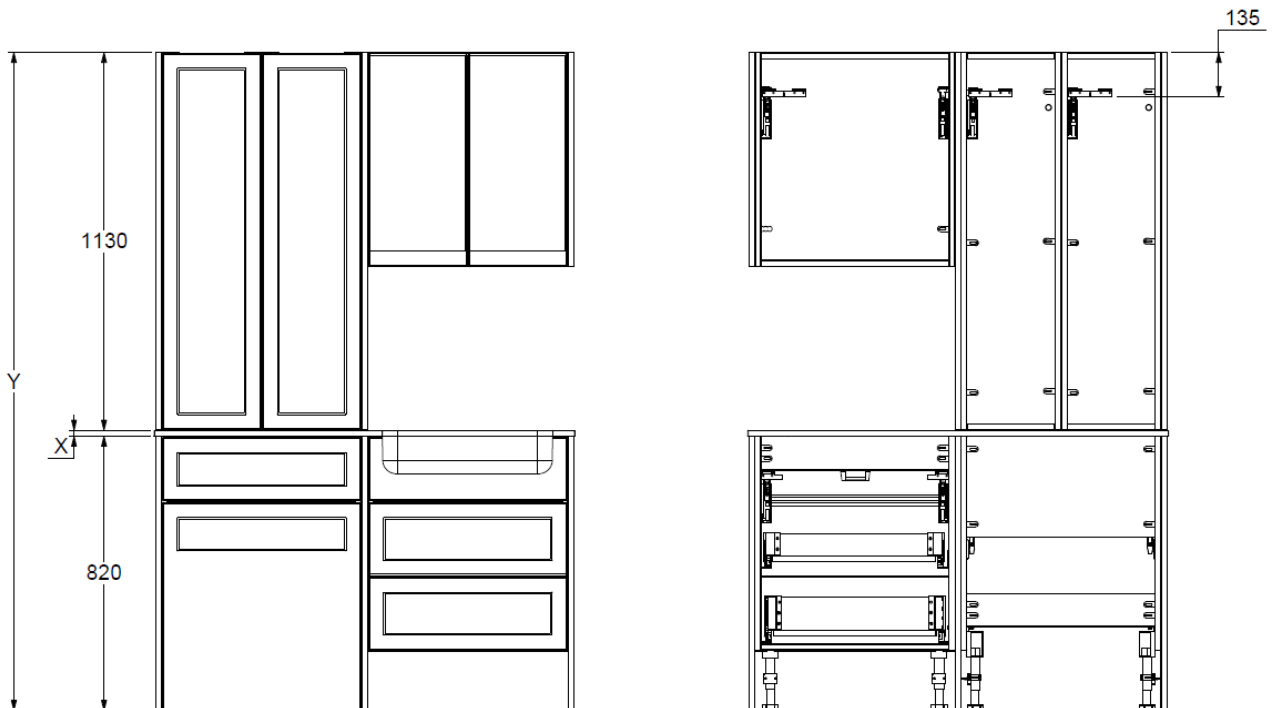

Y= The finished unit installation height

X= Worktop or Basin Thickness

$$820\text{mm} + X + 1130\text{mm} = Y$$

Bracket installation height = Y minus 135mm



Installation-Introduction

Option 3 - Fitted Run Installation including 350 Tall unit

If installing one or multiple 300 Slimline WC Tall Wall Units and a WC Unit in a fitted run type installation **including** a 350 Tall Unit, we recommend the 300 Slimline WC Tall Wall Units are installed on top of a **22mm worktop/basin** with 2 x 245 x 1130 Above WC Unit End Panels installed, either side of the unit.


Note: If a 22mm worktop/ basin is not used in the installation the 350mm Tall Unit and 300 Slimline WC Tall Wall Units will not line though at the top of the units.

Recommended

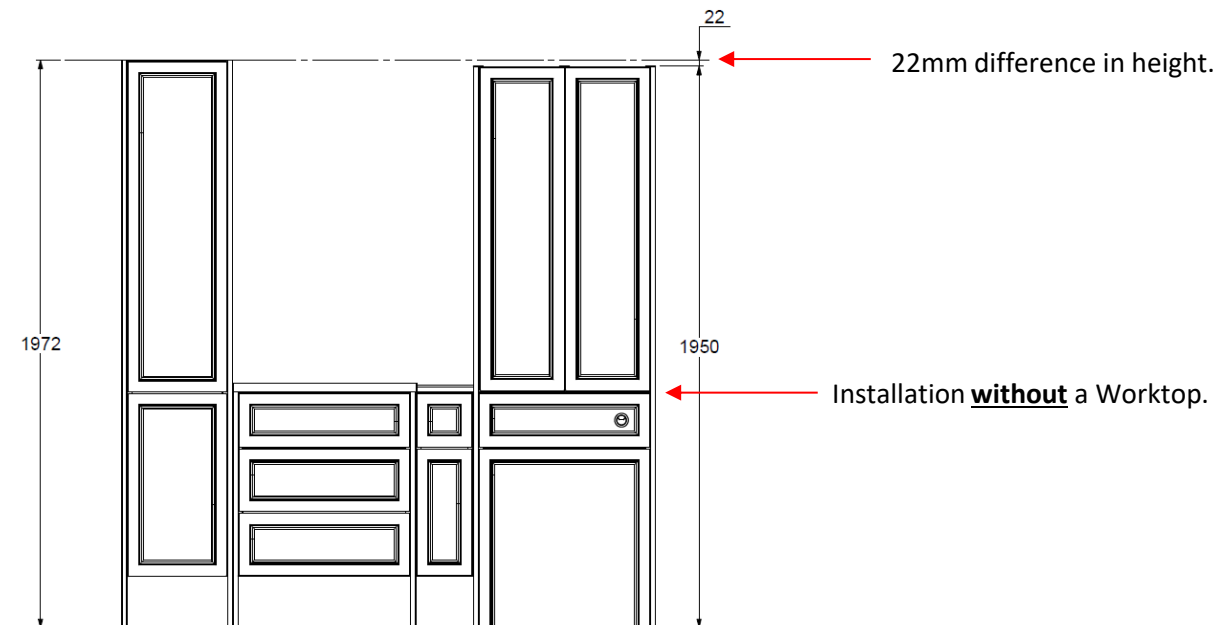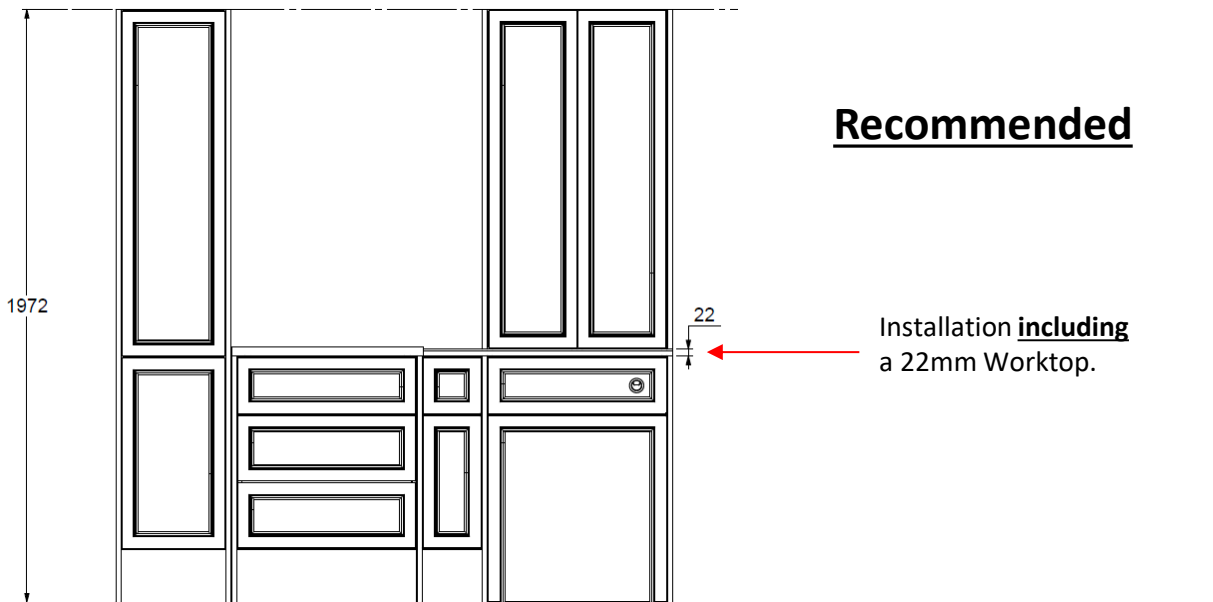


Installation-Introduction

Note: The cabinet can be set up as a single cabinet installation or multi cabinet installation.

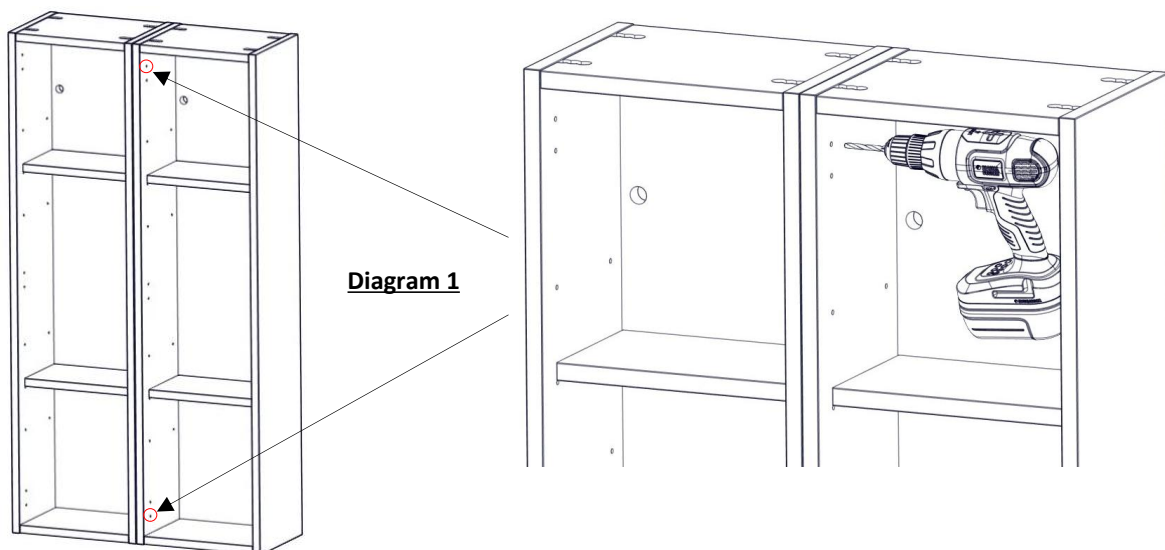

For multi cabinet installations line both units side by side, using a 5mm drill, drill through the pre-drilled holes indicted in **Diagram 1**.

Tip: Use a clamp to line both units together, this will ensure holes are drilled identically in both cabinets.

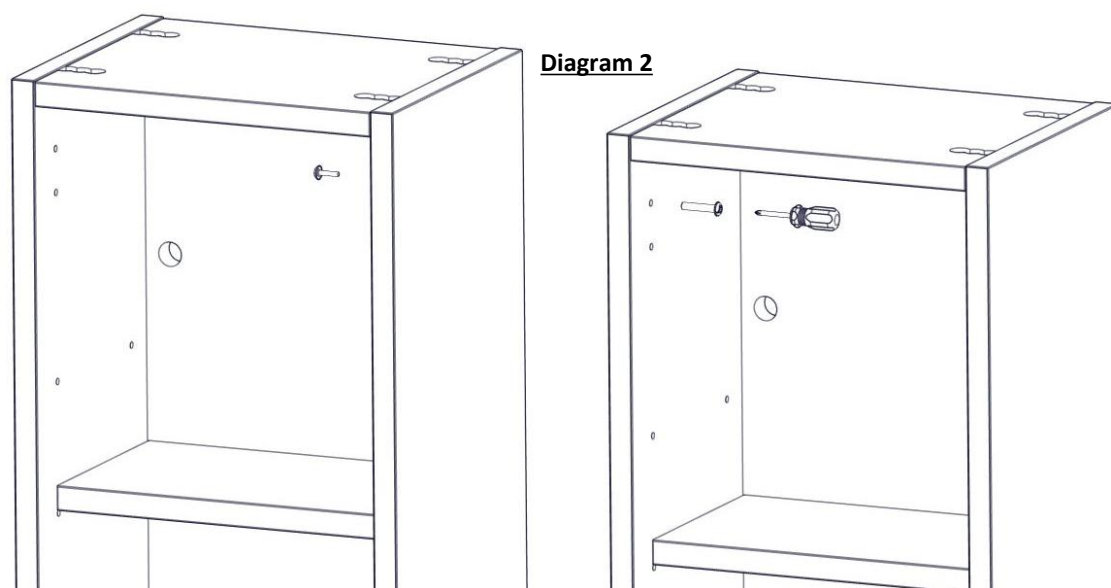

To joint the cabinets together use the supplied connecting bolts, Use the previously drilled holes to join the units together. **NOTE:** Hand-driver is recommended See **Diagram 2**.

Tip: Connect the units together before hanging onto the wall this will make it easier to line both unit together.

Installation

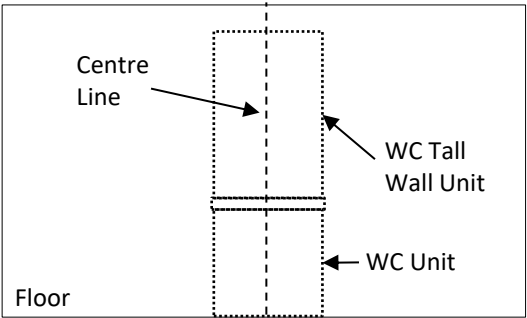


Diagram 3

Note: Before proceeding further, consider the different installation scenarios. **See P63-65.**

To begin, mark out the centre lines of the cabinet positions on the wall, dependent on the type of installation required. **See P63-65.**

See Diagram 3.

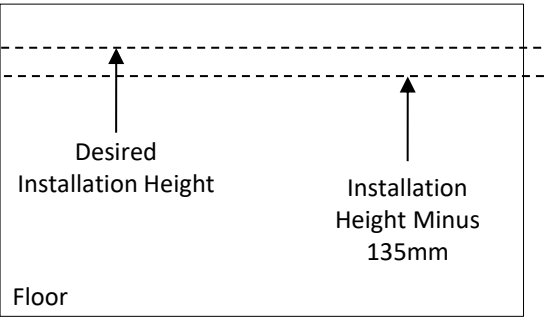


Diagram 4

Draw a horizontal line **135mm** from the finished height of the installation, this is the height the bottom edge of the wall plates will be fitted at.

See Diagram 4.

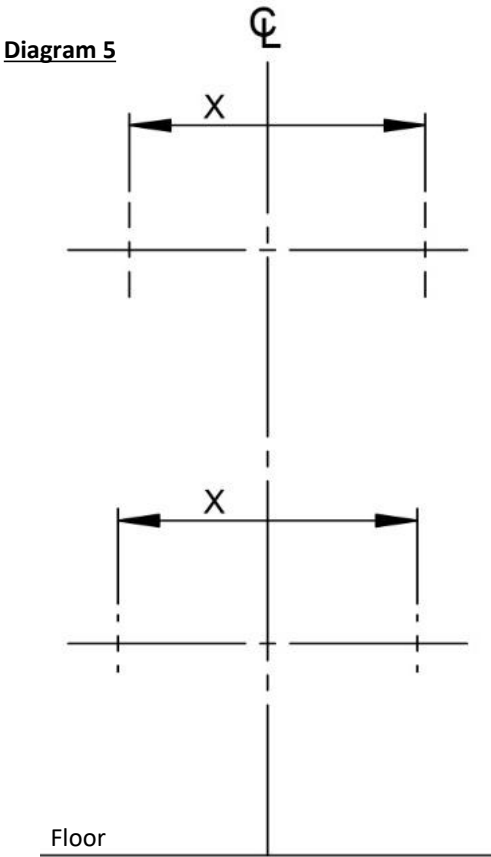



Diagram 5

Next mark the position of the outer edges of the Units = **X**

See Diagram 5.

Installation

Diagram 6

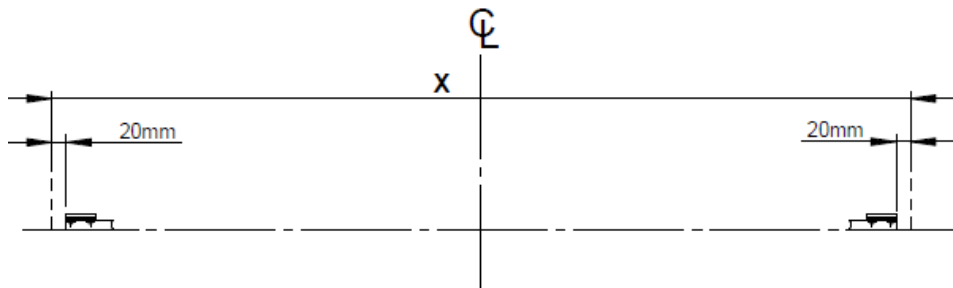

For all the units mark out the position of the wall plates (supplied as pairs) using the dimensions provided above.

Once marked, drill the fixing positions. Depending on the wall medium, it may be necessary to plug the drilled holes. See **'Important Note'** below.


Next screw and secure the wall plates to the wall using suitable screws. See **'Important Note'** below.

See Diagram 6

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the surround is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used according to the model to be installed as well as individual fitting situations and environments. All mechanical fixings, for holding the product in position, must be secured to a solid wall or structure.

Diagram 7

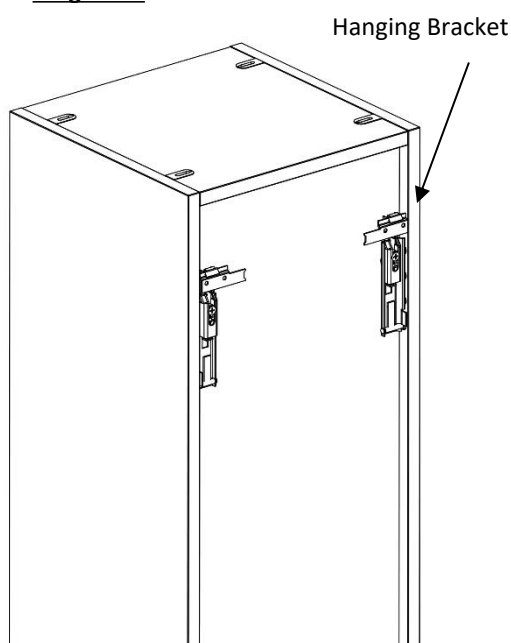

Hanging the Unit

Hang the units, making sure the hanging brackets on the rear of the units, engage with the wall plates on the wall.

See Diagram 7.

Installation

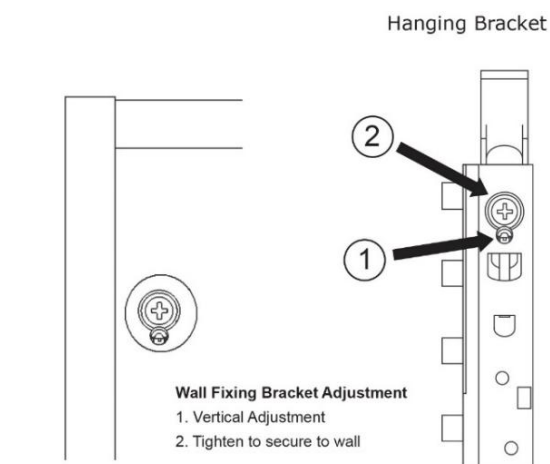


Diagram 8

Hanging Bracket Adjustment

Adjust the units so they sit level, using a Pozi screw driver. **(1)**

Finally fix the units in position by tightening screws, using a Pozi screw driver. **(2)**

See **Diagram 8**.

Note: For all tall units, once fully adjusted & tightened fit the supplied cover caps into holes on back panel.

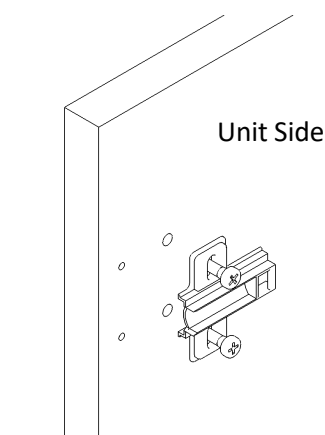


Diagram 9

Hanging the Doors

Tip: Lay the doors on a clean flat surface that will not damage or scratch the product.

Firstly screw the hinge plate into unit side, using the predrilled 5mm holes as indicated in **Diagram 9**.

Note: Make sure the hinges are fitted on the correct side of the unit depending on side the door opening required.

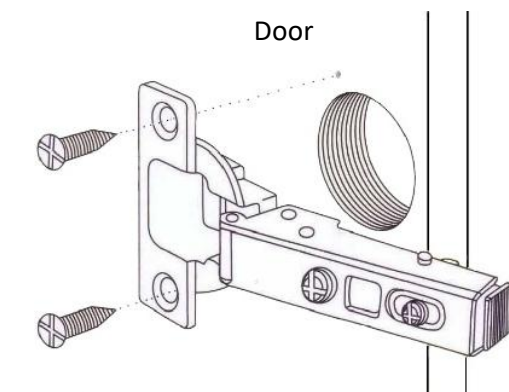


Diagram 10

Hanging the Doors Continued.....

Locate the hinge arm into predrilled 35mm hole on back of door and secure with **2No.6x5/8" countersunk screws** provided.

See **Diagram 10**.

Installation

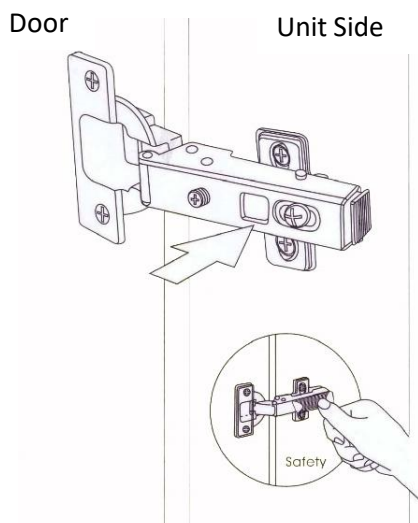


Diagram 11

Hanging the Doors Continued.....

To hang the door, locate the hinge arm over the hinge plate and **click** into position.

See Diagram 11.

Tip: Adjust the alignment of the door before final tightening.

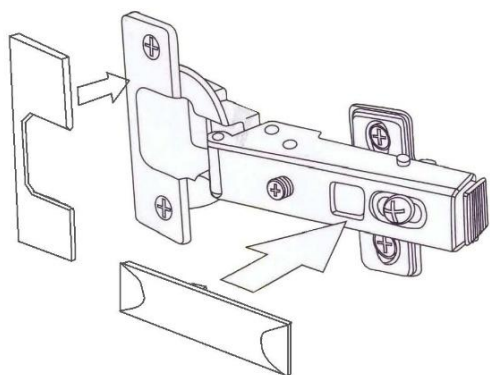


Diagram 12

Hanging the Doors Continued.....

Click the cover plates into position on the hinges.

See Diagram 12.

Adjustments

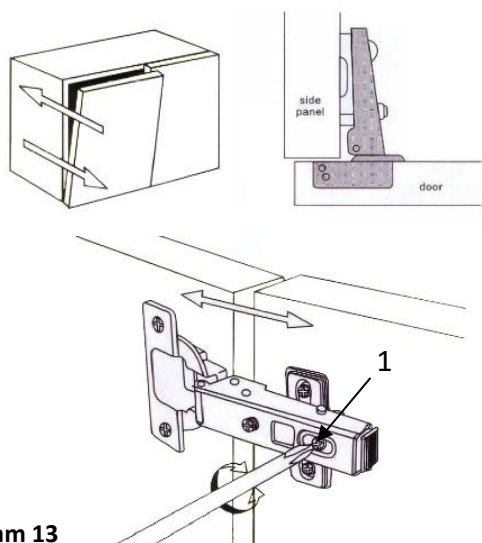


Diagram 13

Door Front adjustment

Set the distance between the back face of the door and the edge of the unit side panel.

Tip: Leave an approx. 2mm gap to help avoid binding.

To fix the hinge arm to the hinge plate, tighten screws **(1)** securely.

See **Diagram 13**.

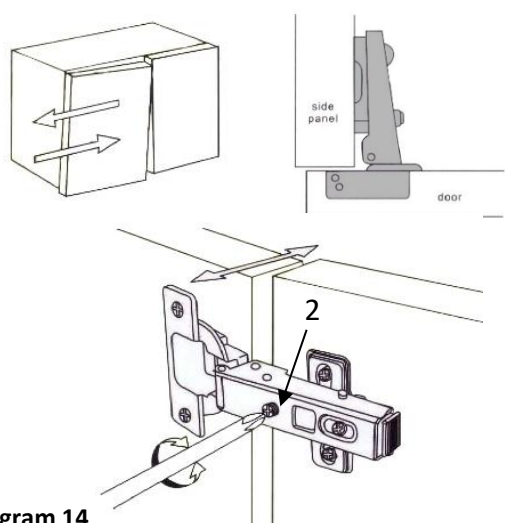


Diagram 14

Door Lateral overlay adjustment

Adjust screws **(2)** to adjust the edge of the door so it runs parallel with the outside face of the unit side panel.

Note: The edge of the door should be set back approx. 1.5mm from the edge of the unit.

Note: For the protection of the damper, it only allows a lateral adjustment. (left to right)

See **Diagram 14**.

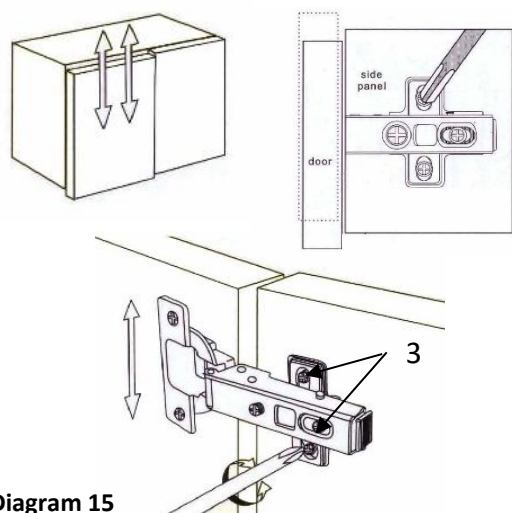


Diagram 15

Door Vertical adjustment

The door can be vertically adjusted by turning the plate screws up and down. **(3)**

The door can be vertically adjusted by loosening the screws **(3)** on all of the hinge plates on the door and carefully moving the door up or down as required.


Once in position re-tighten all the screws **(3)** to secure in place.

See **Diagram 15**.

Installation Instruction 200 Toilet Roll Base Unit



**Toilet Roll Base Unit
Standard Door**

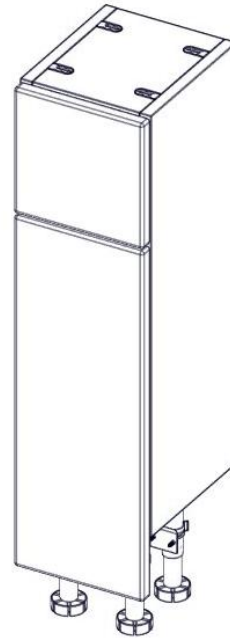

**Toilet Roll Base Unit
Long Door**

Installation

Note: All cabinets should be fastened to the wall before fixing the basin, after alignment we recommend additional wall fixings are made, then the final installation of the basin can be carried out.

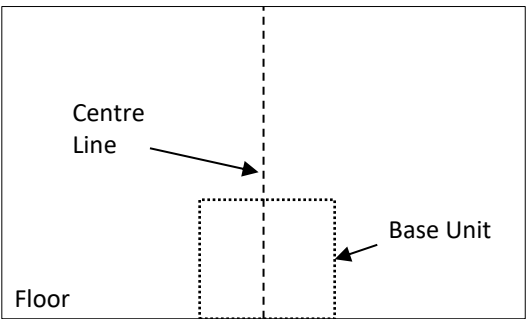


Diagram 1

Note: Consider where the pipes are located before beginning the installation.

To begin, place the Unit into the desired installation position in the room.

Mark a centre line on the wall.

See Diagram 1.

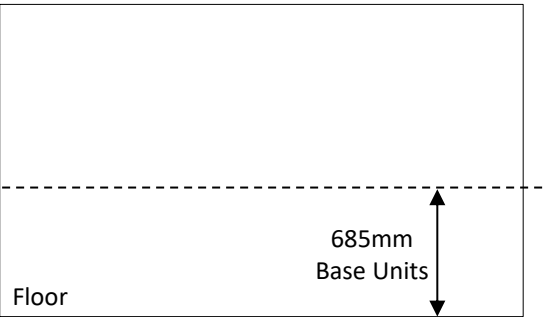


Diagram 2

Note: We recommend an installation height of 820mm. (Height of the unit plus 180mm plinth, this is also to match the height of the WC Unit.)

Draw a horizontal line **685mm** from the floor, this is the height the **bottom edge** of the hanging brackets will be fitted at, so the unit has a finished height of 820mm. For other installation heights, adjust accordingly.

See Diagram 2.

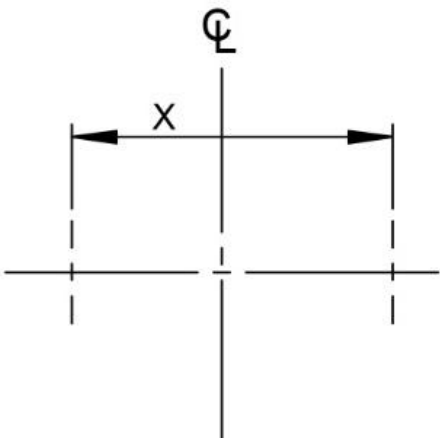


Diagram 3


Floor

Next mark the position of the outer edges of the Units = **X**, working from the centre line.

See Diagram 3.

Installation

Diagram 4

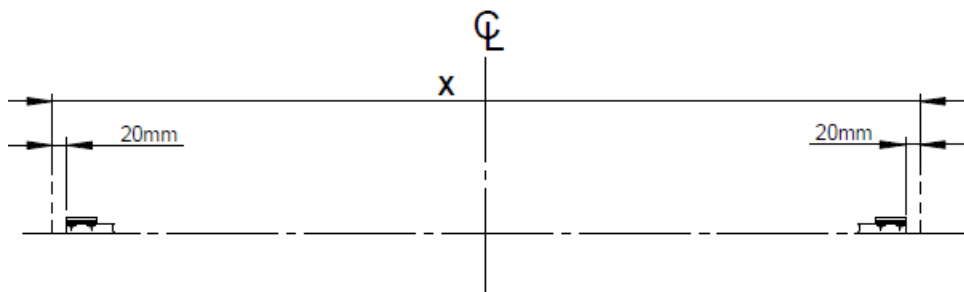

For all units mark out the position of the wall plates (supplied as pairs) using the dimensions provided above.

Once marked, drill the fixing positions. Depending on the wall medium, it may be necessary to plug the drilled holes. See **'Important Note'** below.


Next screw and secure the wall plates to the wall using suitable screws. See **'Important Note'** below.

See **Diagram 4**.

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the surround is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used according to the model to be installed as well as individual fitting situations and environments. All mechanical fixings, for holding the product in position, must be secured to a solid wall or structure.

Diagram 5

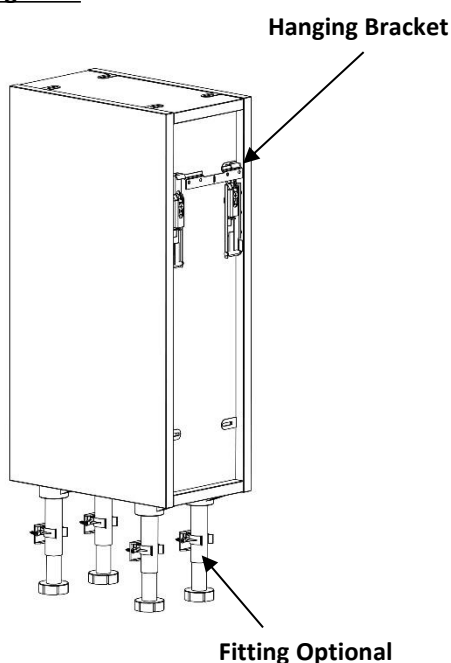

Hanging the Unit

Note: If floor standing the unit (i.e. using a plinth) you will be required to fit the legs to the cabinet prior to hanging. **Please see guidance on P3-6 & P92-93**

Hang the units, making sure the hanging brackets on the rear of the units, engage with the wall plates on the wall.

See **Diagram 5**.

Installation

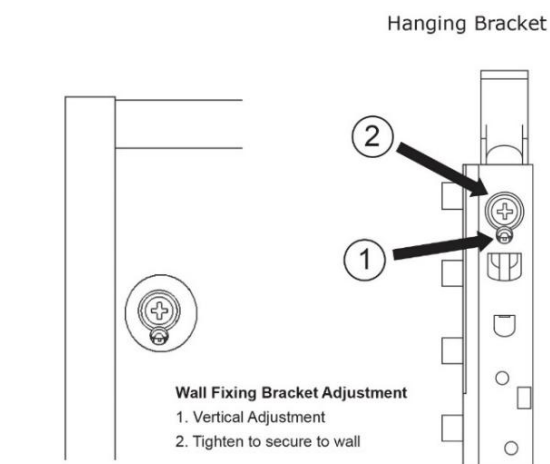


Diagram 6

Hanging Bracket Adjustment

Adjust the units so they sit level, using a Pozi screw driver. **(1)**

Finally fix the units in position by tightening screws, using a Pozi screw driver. **(2)**

See Diagram 6.

Note: For all **wall** units, once fully adjusted & tightened fit the supplied cover caps into holes on back panel.

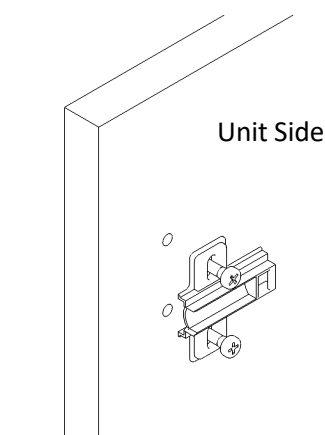


Diagram 7

Hanging the Doors

Firstly screw the hinge plate into unit side, using the predrilled 5mm holes as indicated in **Diagram 7**.

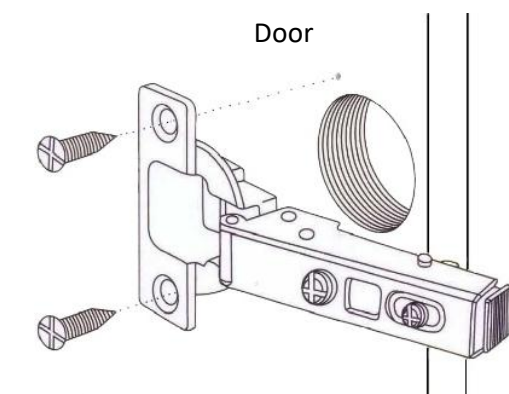


Diagram 8

Hanging the Doors Continued.....

Tip: Lay the doors on a clean flat surface that will not damage or scratch the product.

Locate the hinge arm into predrilled 35mm hole on back of door and secure with **2No.6x5/8" countersunk screws** provided.

See Diagram 8.

Installation

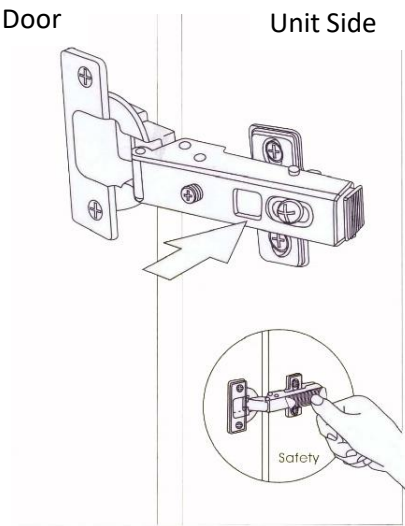


Diagram 9

Hanging the Doors Continued.....

To hang the door, locate the hinge arm over the hinge plate and **click** into position.

See Diagram 9.

Tip: Adjust the alignment of the door before final tightening.


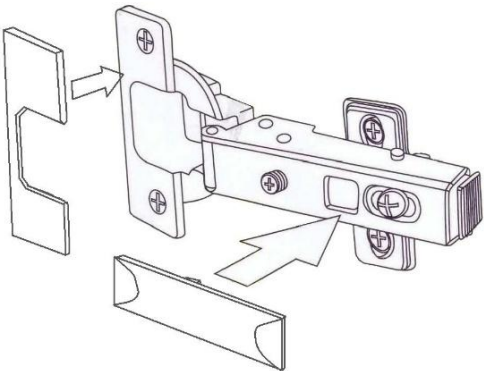


Diagram 10

Hanging the Doors Continued.....

Click the cover plates into position on the hinges.

See Diagram 10.

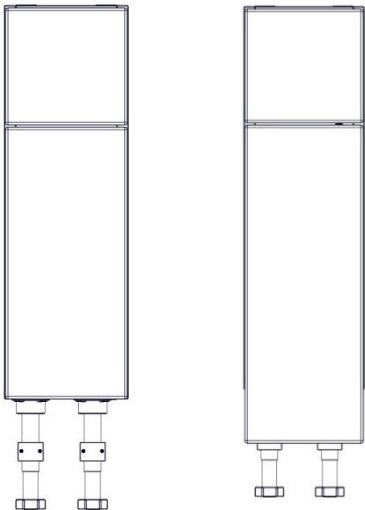

Adjustments

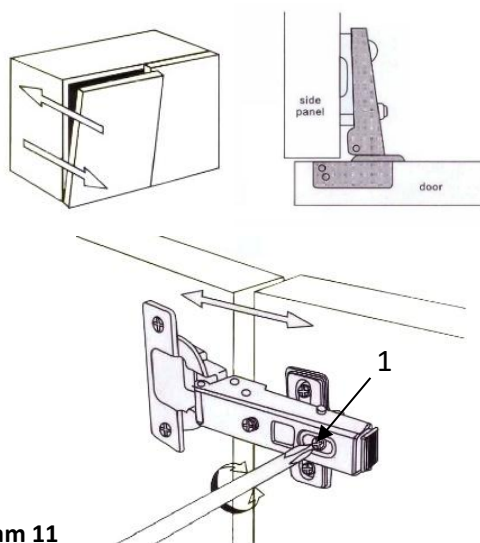


Diagram 11

Door Front adjustment

Set the distance between the back face of the door and the edge of the unit side panel.

Tip: Leave an approx. 2mm gap to help avoid binding.

To fix the hinge arm to the hinge plate, tighten screws **(1)** securely.

See **Diagram 11**.

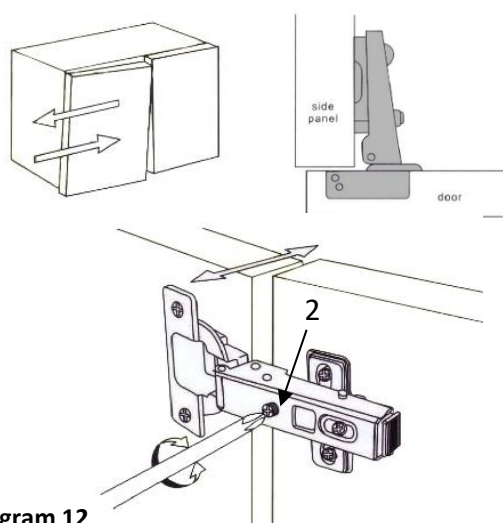


Diagram 12

Door Lateral overlay adjustment

Adjust screws **(2)** to adjust the edge of the door so it runs parallel with the outside face of the unit side panel.

Note: The edge of the door should be set back approx. 1.5mm from the edge of the unit.

Note: For the protection of the damper, it only allows a lateral adjustment. (left to right)

See **Diagram 12**.

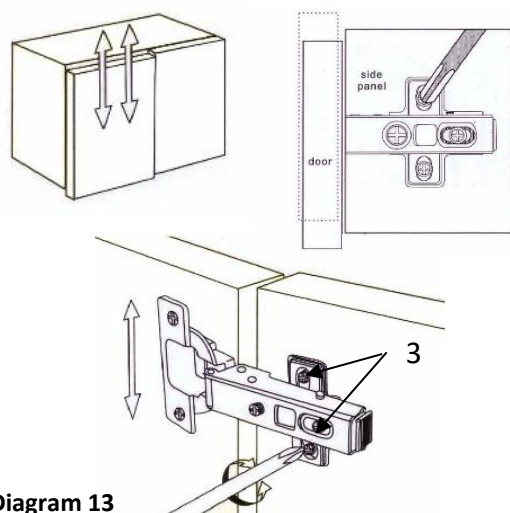


Diagram 13

Door Vertical adjustment

The door can be vertically adjusted by turning the plate screws up and down. **(3)**

The door can be vertically adjusted by loosening the screws **(3)** on all of the hinge plates on the door and carefully moving the door up or down as required.

Once in position re-tighten all the screws **(3)** to secure in place.

See **Diagram 13**.

Installation

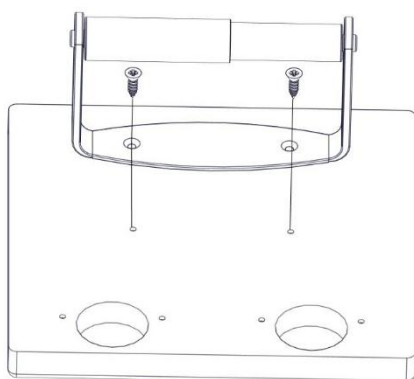


Diagram 14

Fitting The Toilet Roll Holder

To fit the toilet roll holder screw the holder to the door using the pre drilled holes on the back of the small door. Use 3.5mm x 12mm screws provided

See Diagram 14.

Note: Please use a hand screwdriver to fasten. Making sure the screw is not forced too deep causing it to project through the front panel.

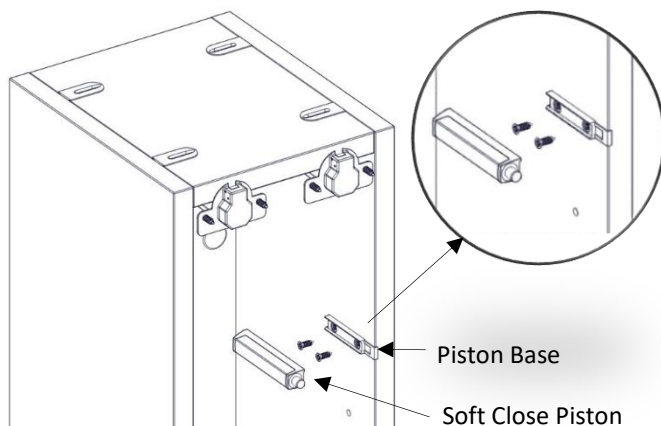


Diagram 15

Push to open fitting (Optional) If no handle being used.

To fit the soft close piston, position the piston base in location shown in Diagram 15. use the 3.5mm x 12mm screws provided through the holes in the base of the into the cabinet side. Once attached clip the push to open piston to the base by push fitting into position. You will hear this click into place.

See Diagram 15.

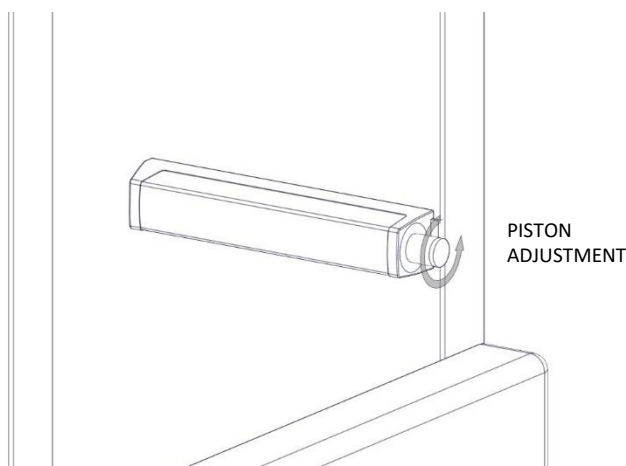


Diagram 16

Piston Adjustment

The Soft close piston can be adjusted by turning the piston.

Clockwise will decrease piston size.

Anti-Clockwise will increase size of piston.


This will need adjusting so the door sits around 2mm off the cabinet edge.

See Diagram 16.




— est. 1964 —

Installation Instruction Lomond

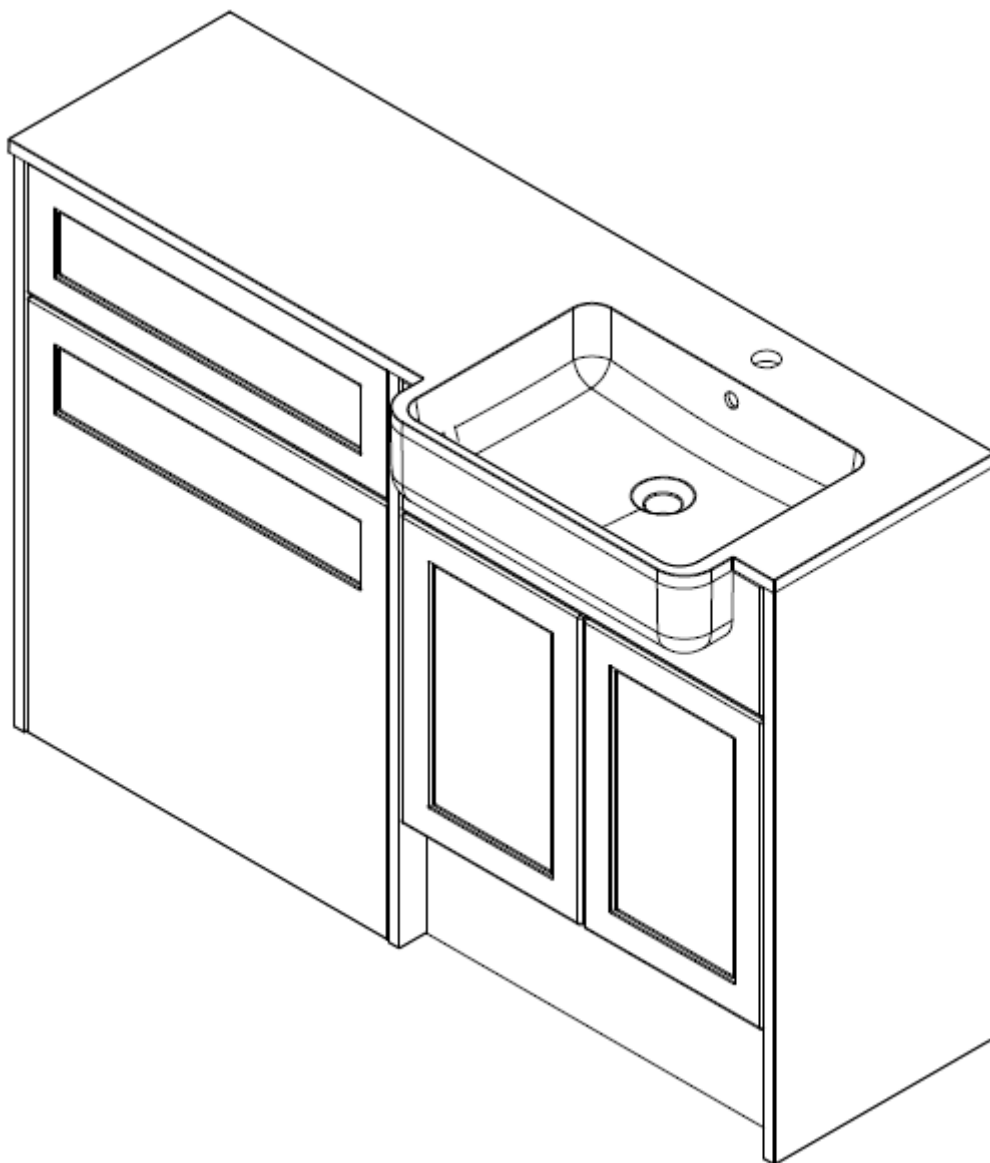


Installation Instruction

LOMOND 1045 365 Deep-LH/RH

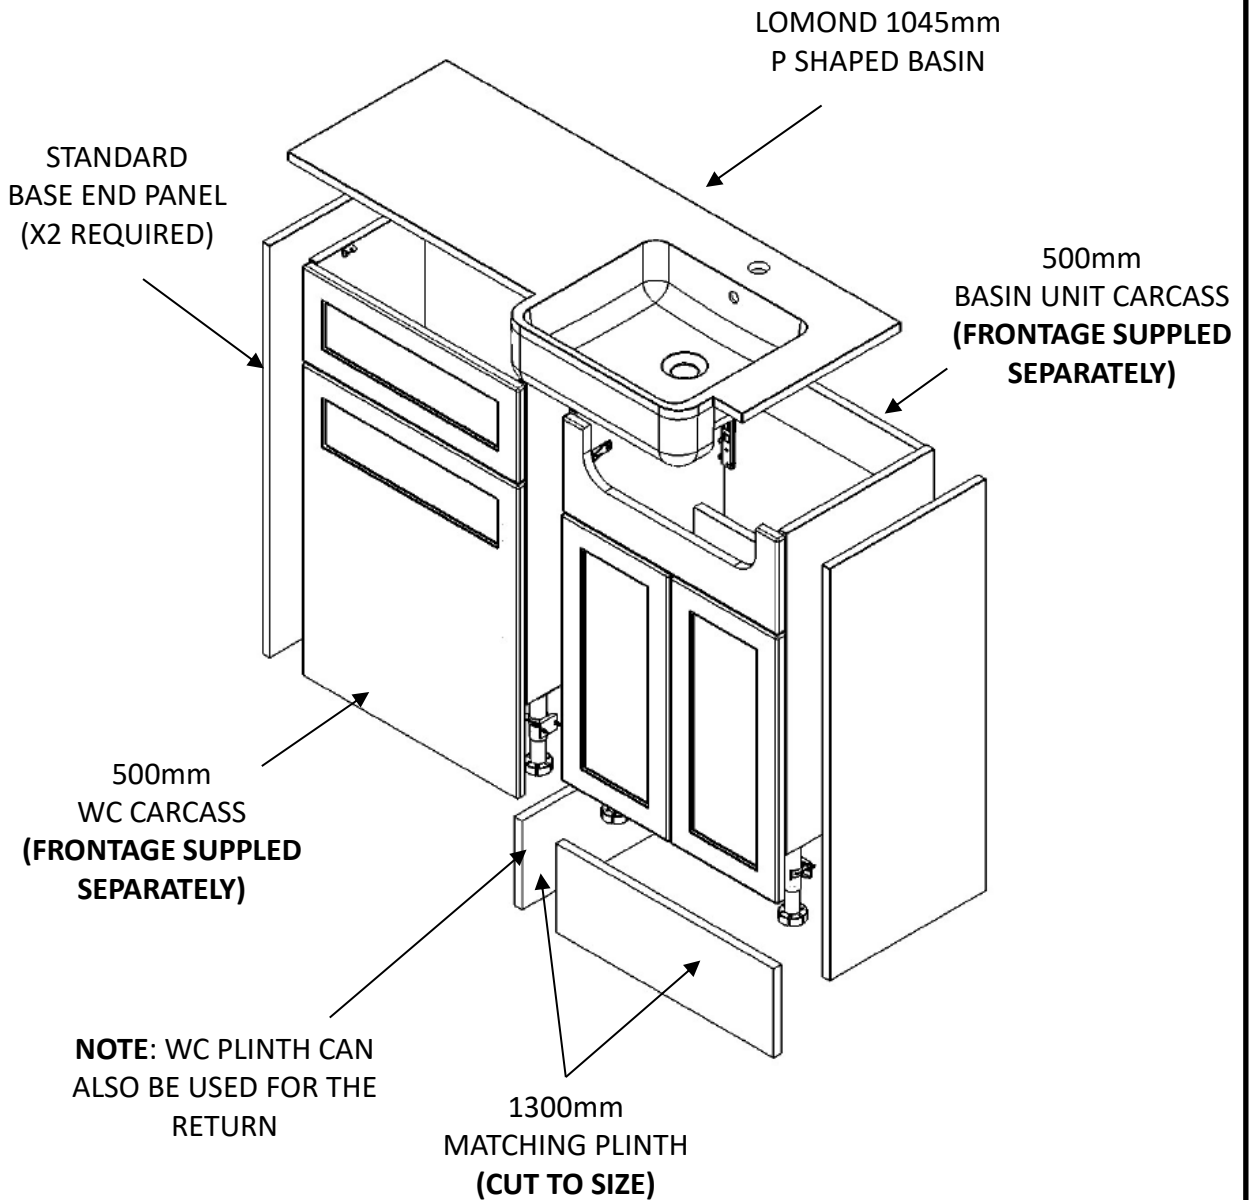

NOTE: RH INSTALLATION SHOWN


Installation Instruction
LOMOND 1260 250 Deep/365 Deep-LH/RH

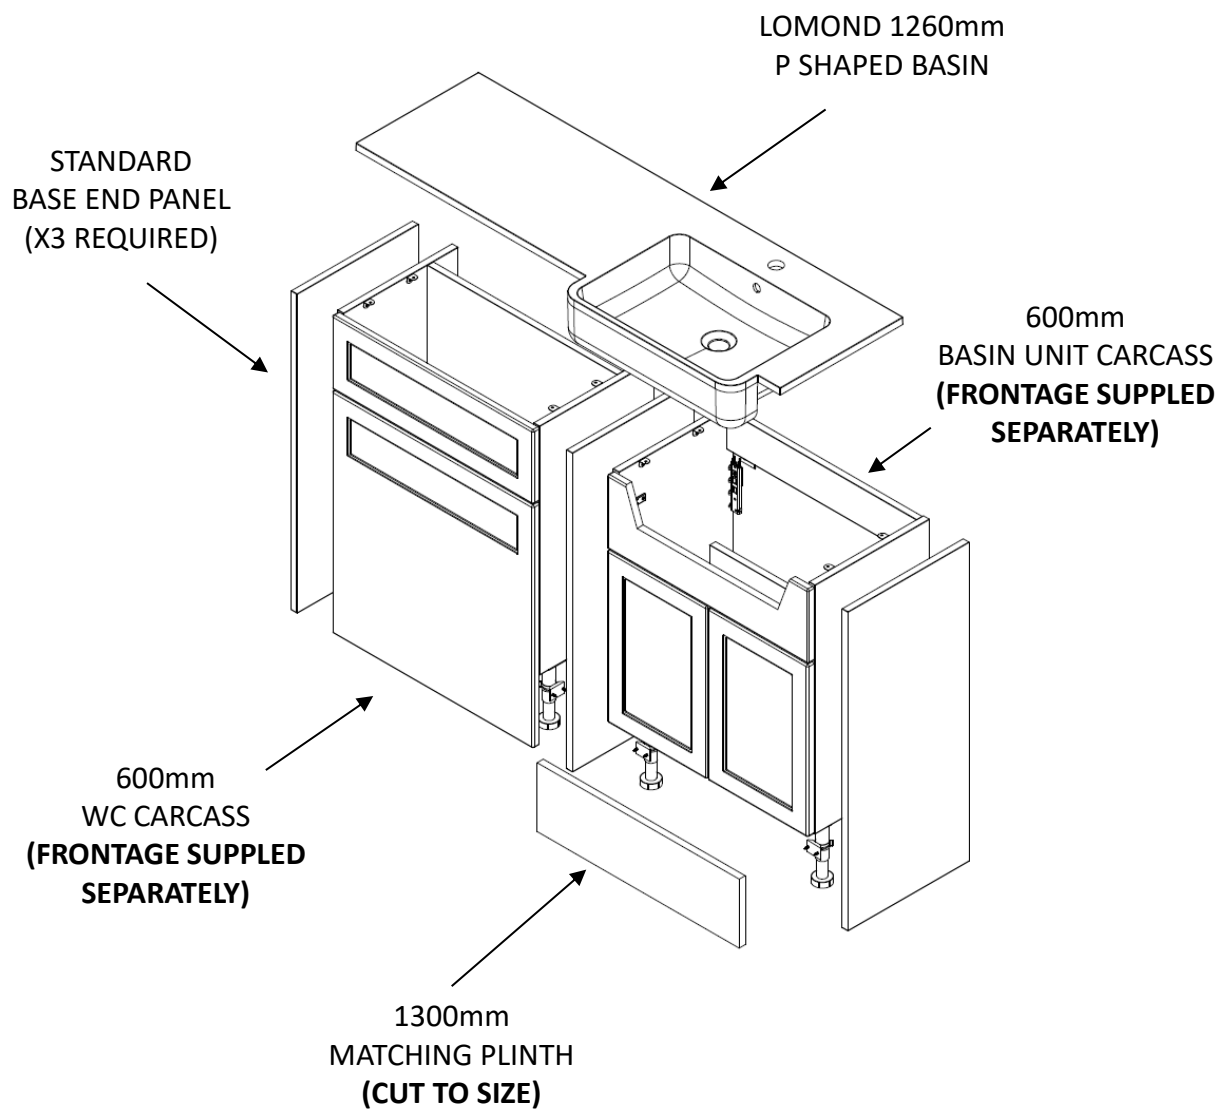

NOTE: RH INSTALLATION SHOWN

Installation Instruction

LOMOND 1580 250 Deep/365 Deep-LH/RH

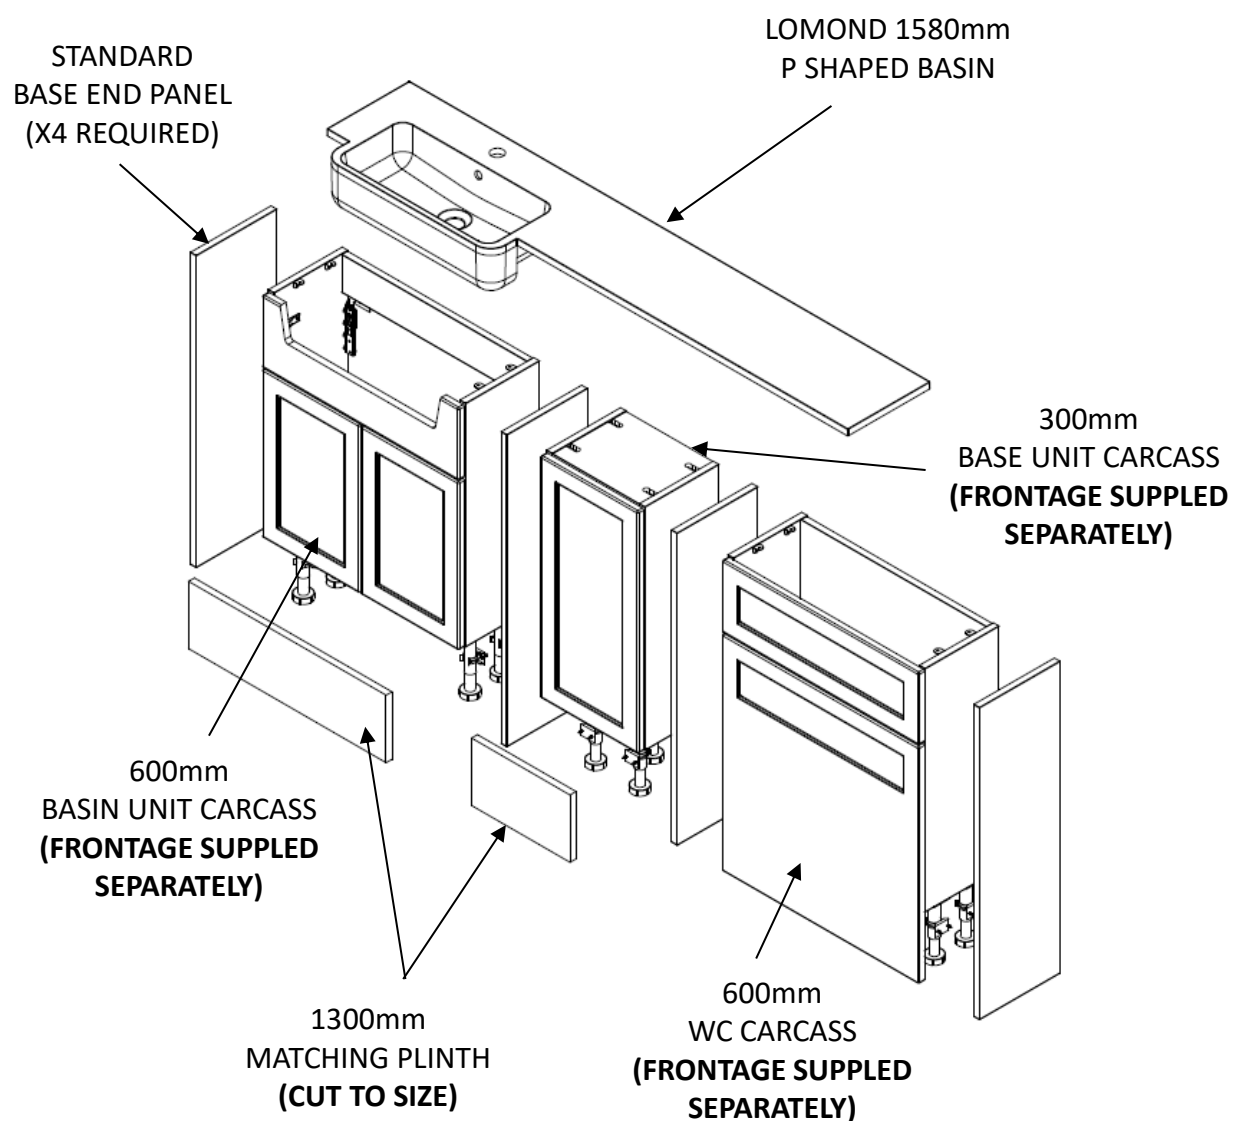

NOTE: LH INSTALLATION SHOWN

Installation- Units

Note: All cabinets should be fastened to the wall before fixing the basin, after alignment we recommend additional wall fixings are made, then the final installation of the basin can be carried out.

See page 78-80: How to prepare the units for installation

See Page 81-82: How to install the frontage panels.

See Page 83: How to make adjustments once the units and the frontage is installed.

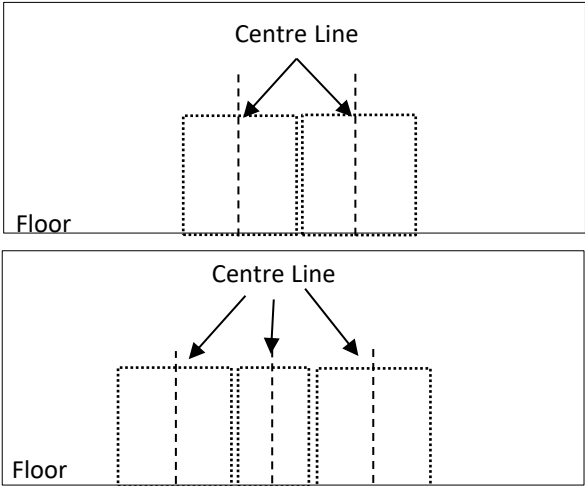


Diagram 1

Note: Consider where the pipes are located before beginning the installation.

To begin, familiarize yourself with the installation layouts as shown on **Pages 2 & 3**.

Note: RH&LH Installation shown- reverse the layout of the WC unit and Basin Unit for LH&RH Installation.

Place the Basin, Base & WC Units into the desired installation position in the room.

Mark a centre line on the wall for each unit.

See Diagram 1.

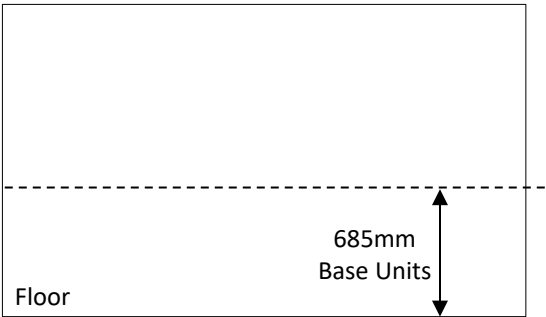


Diagram 2

Note: We recommend a finished installation height of 820mm for basin units. Basin Unit = Height of the unit plus 180mm plinth, this also matches the height of the WC Unit.

Draw a horizontal line 685mm from the floor for Base Units. This is the height the bottom edge of the wall plates will be fitted at to hang the unit.

See Diagram 2.

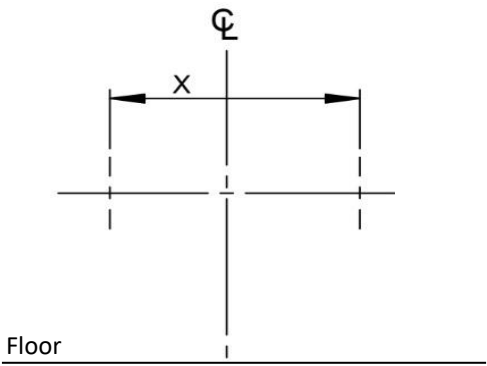



Diagram 3

Next measure the widths of the units and mark the position of the outer edges of each unit = **X**, working out from the centre line.

See Diagram 3.

Installation- Units

Diagram 4

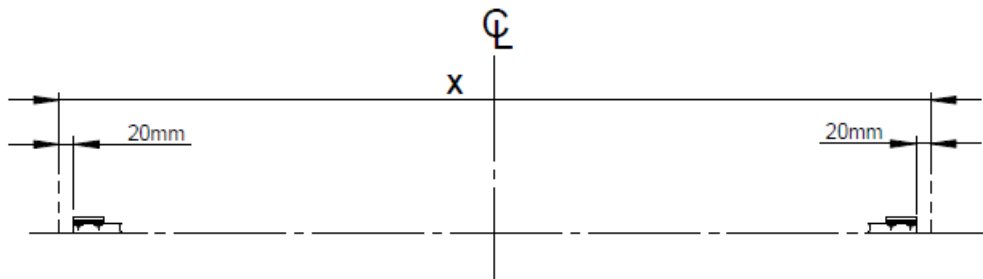

For all units mark out the position of the wall plates (supplied as pairs) using the dimensions provided above.

Once marked, drill the fixing positions. Depending on the wall medium, it may be necessary to plug the drilled holes. See **‘Important Note’** below.

Next screw and secure the wall plates to the wall using suitable screws. See **‘Important Note’** below.

See Diagram 4.

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the surround is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used according to the model to be installed as well as individual fitting situations and environments. All mechanical fixings, for holding the product in position, must be secured to a solid wall or structure.

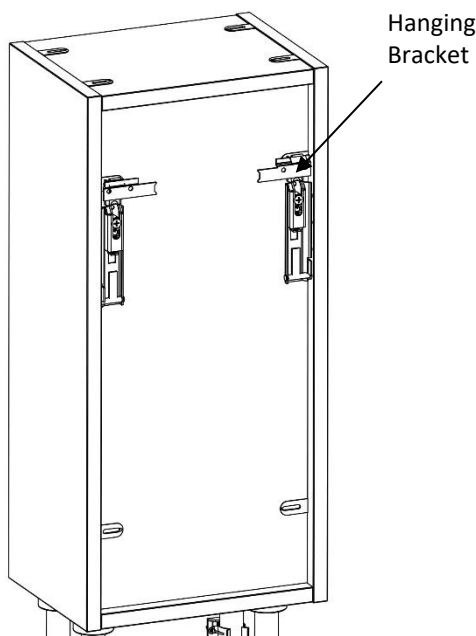


Diagram 5

Hanging the Unit

Note: For floor standing the units (i.e. using a plinth), you will be required to fit the legs to the cabinet prior to hanging. **Please see pages 85 & 87.**

Hang the units, making sure the hanging brackets on the rear of the units, engage with the wall plates on the wall.

Note: For adjustment guidance see **Page 91.**

See Diagram 5.

Preparing for Installation- WC Unit

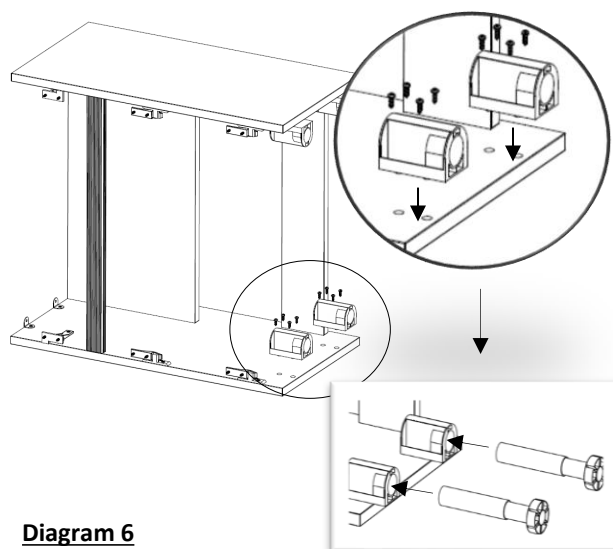


Diagram 6

Note: Place the unit on a clean flat surface that will not scratch the product.

To begin, lay the unit on its side and knock in the leg sockets as indicated in **Diagram 6**.

Then screw the sockets to the cabinet side using the 3.5 x 12mm Round head screws provided.

Push the leg/feet into the socket the stand the unit upright onto the feet.

Leg Height Adjustment

Turn the foot part of the leg to adjust the height of the leg so they measure 180mm from the bottom of the cabinet to the floor.

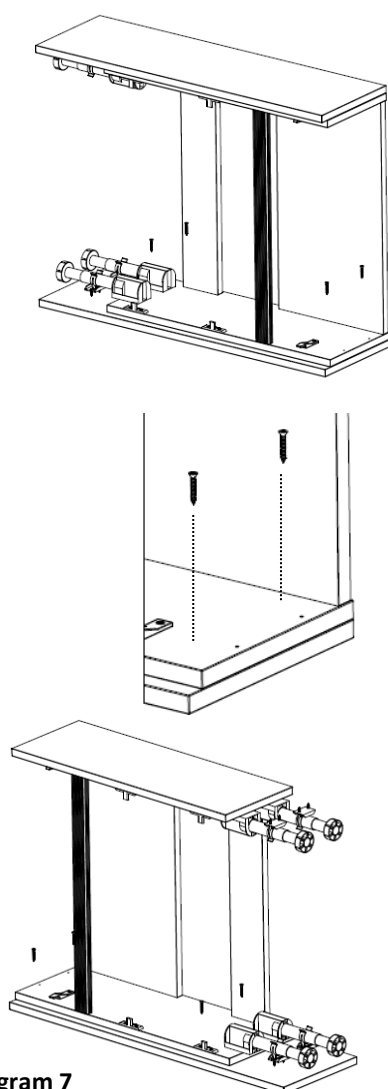


Diagram 7

Cabinet End Panels (CEP)

Tip: Whilst the units are uninstalled and without frontage we recommend to fit the cabinet end Panels (CEP) to the units, before installing the units in their final position.

We recommend fitting a CEP to either side of the WC Unit as any fixings will be hidden.

Note: Fixings are not supplied.

Note: No pre-drilled fixing points are provided, this up to the discretion of the installer.

Diagram 7.

Preparing for Installation- Base/Basin Units

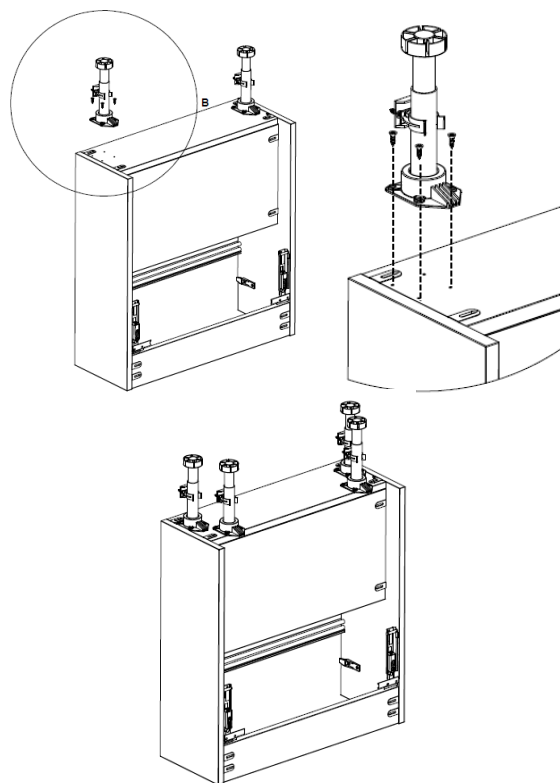


Diagram 8

Note: Place the unit on a clean flat surface that will not scratch the product.

Basin Units

The Basin Units are pre- drilled for fixing the legs- fix all **four legs** in the pre-determined positions using the **6x5/8 screws** supplied.

The Slimline Basin Units (**shown**) are only pre- drilled for fixing the **front** legs- fix the two front legs in the pre-determined position, using the **6x5/8 screws** supplied.

If required, the rear legs can installed in position at the installers discretion.

See Diagram 8.

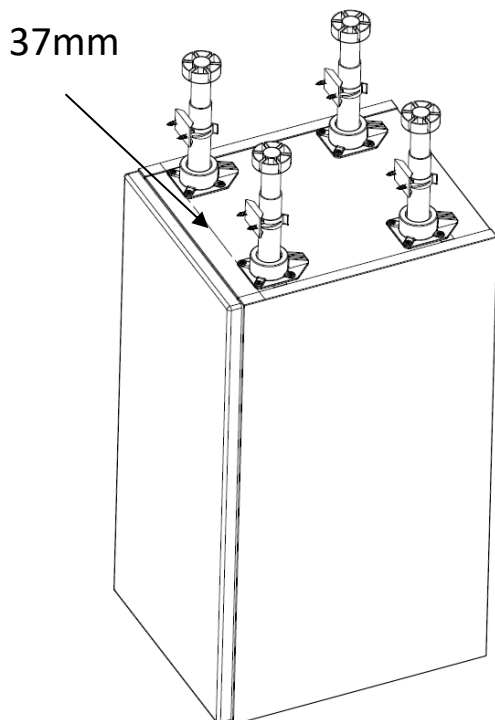


Diagram 9

Note: Place the unit on a clean flat surface that will not scratch the product.

Base Units

Note: The base units **are not** pre- drilled for fixing the legs.

The front legs need to be positioned 37mm from the front edge of unit, so the plinth can be installed at the same position as the basin units.

Fix using the **6x5/8 screws** supplied.

The rear legs can be installed in position at the installers discretion.

Diagram 9.

Preparing for Installation-Base/Basin Units

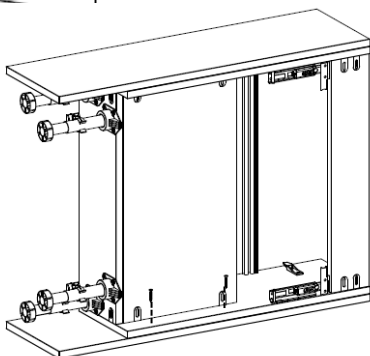
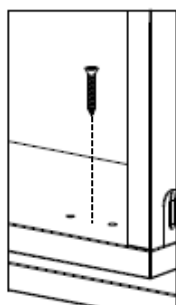
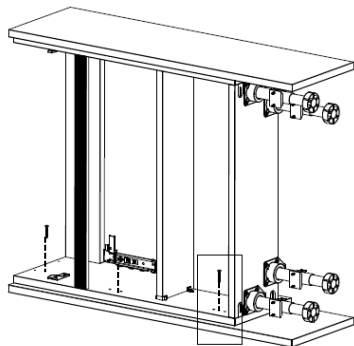


Diagram 10

Cabinet End Panels (CEP)

Tip: Whilst the units are uninstalled and without frontage, we recommend to fit the cabinet end Panels (CEP) to the units, before installing the units in their final position.

Consider placing the fixings in places where they can not be seen, once the doors are opened.

1. Behind the hinge plates (shown)
2. Behind the back panel (shown)

Note: Fixings are not supplied.

Note: No pre-drilled fixing points are provided, this up to the discretion of the installer.

Diagram 10.

Installation- Frontage

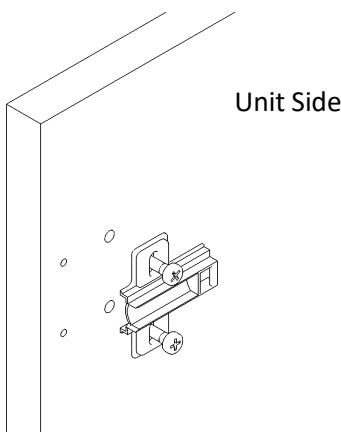


Diagram 11

Firstly screw the hinge plate into unit side, using the predrilled 5mm holes as indicated in **Diagram 11**.

Installation- Frontage

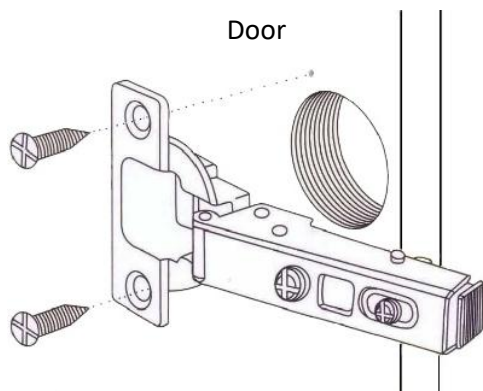


Diagram 12

Preparing the Doors

Tip: Lay the doors on a clean flat surface that will not damage or scratch the product.

Locate the hinge arm into predrilled 35mm hole on back of door and secure with **2No.6x5/8" countersunk screws** provided.

See Diagram 12.

Door **Unit Side**

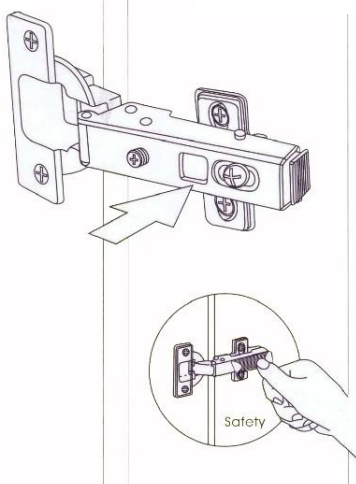


Diagram 13

Hanging the Doors

To hang the door, locate the hinge arm over the hinge plate and **click** into position.

See Diagram 13.

Tip: Adjust the alignment of the door before final tightening.

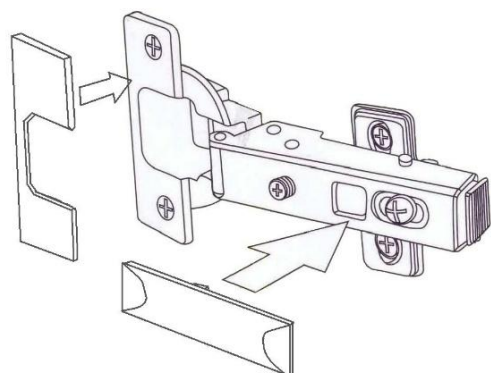


Diagram 14

Hanging the Doors Continued.....

Click the cover plates into position on the hinges.

See Diagram 14.

Note: All doors are supplied undrilled to allow customers to choose their preferred handle position.

Installation- Frontage

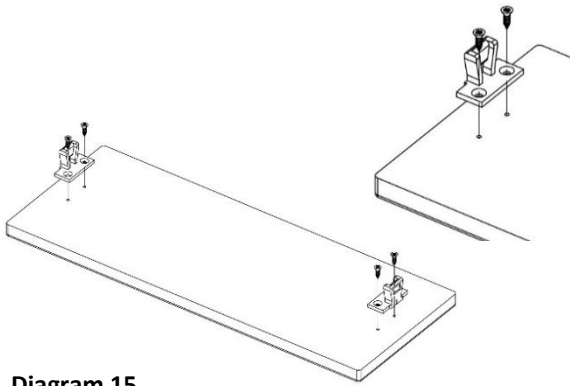


Diagram 15

WC Top Panel - Installation Preparation

Lay the frontage panels, finished face down, on a clean flat surface that will not damage or scratch the product.

Fit the supplied Keku fittings to the top panel, fixing the **6x5/8 screws** provided into the pre-drilled holes.

See Diagram 15.

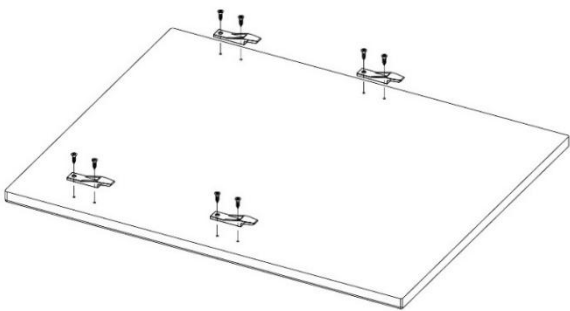


Diagram 16

WC Lower Panel - Installation Preparation

Lay the frontage panels, finished face down, on a clean flat surface that will not damage or scratch the product.

Fit the supplied Keku fittings to the lower panel, fixing the **6x5/8 screws** provided into the pre-drilled holes.

See Diagram 16.

Fitting the Frontage to the Unit.

WC Lower Panel Fitting

First fit the WC Lower Panel.

Align the Keku fittings on the lower panel with the pre-fitted fittings on the unit. Once aligned push the lower panel downwards until fittings engage with each other.

Diagram 17 (A)

Note: The WC Lower Panel will require cutting to allow for pipes. Refer to WC & cistern specification before cutting.

WC Top Panel Fitting

Next fit the WC Top Panel.

Align the Keku fittings on the top panel with the pre-fitted fittings on the unit. Once aligned push the top panel downwards until fittings engage with each other.

Diagram 17 (B)

Note: The WC Top Panel will require cutting for the cistern button. Please refer to the cistern instructions before cutting.

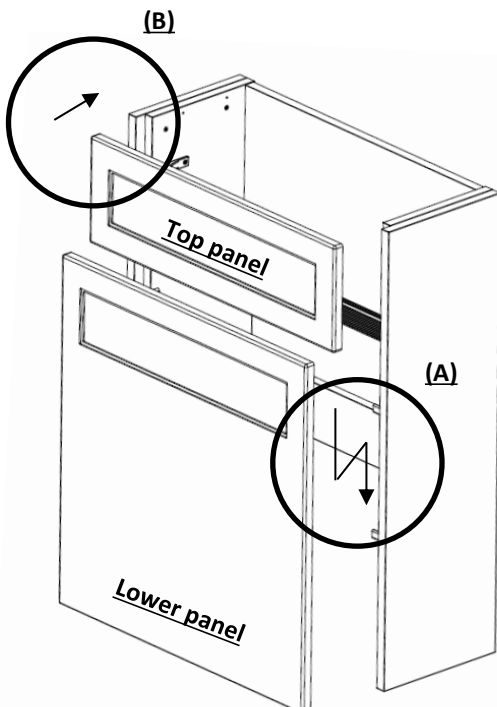


Diagram 17

Note: Any cut edges should be sealed with appropriate waterproof sealant.

Installation- Frontage

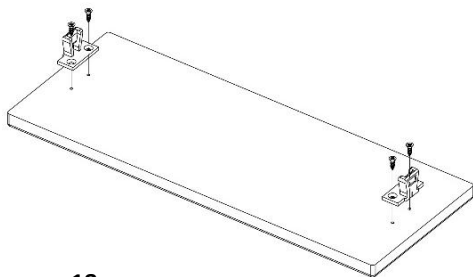


Diagram 18

Top Panel Fitting *Continued*.....

Fit the Keku fittings onto the top panel, fixing the **6x5/8 screws** provided through the holes in the fittings and into the pre-drilled holes on the top panel.

Diagram 18.

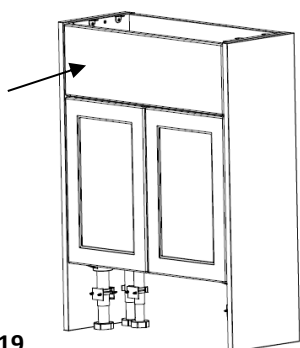


Diagram 19

Top Panel Fitting *Continued*.....

Once the Keku fittings are fitted to the front panel, push the panel onto pre-installed fixings on unit.

The top panel is now installed.

Diagram 19.

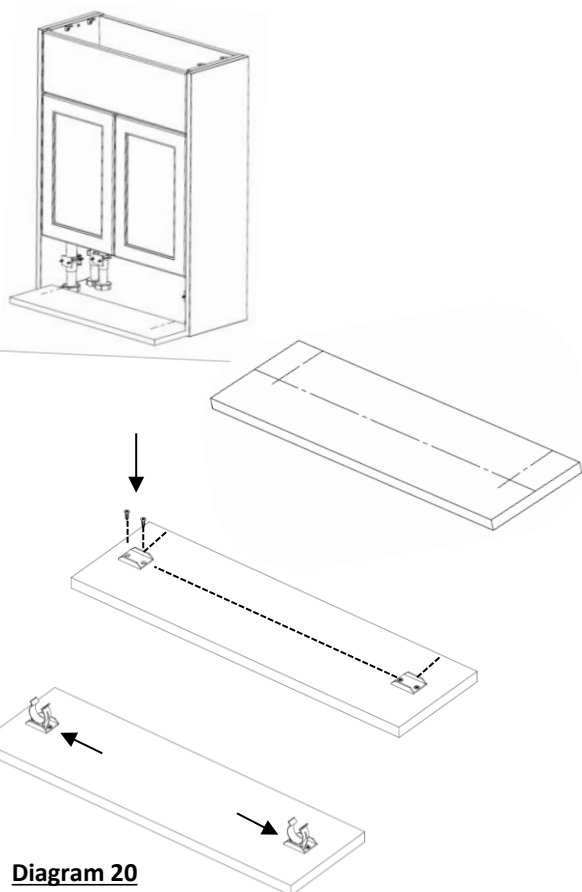


Diagram 20

Plinth Fitting

Position the plinth between the cabinet end panels and mark the centre of the legs on to the back of the plinth.


Mark a centre line parallel to the long edge of the plinth.

Screw the plinth brackets to the back of the plinth using the **6x5/8 screws** provided.

Slide the clips into position and fit the plinth to the unit, ensuring the clip engage with the leg.

See Diagram 20.

Hinge & Hanging Bracket Adjustment

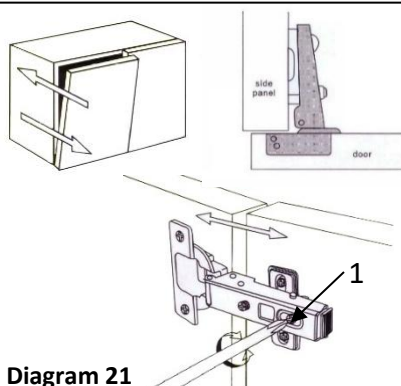


Door Front adjustment

Set the distance between the back face of the door and the edge of the unit side panel.

Tip: Leave an approx. 2mm gap to help avoid binding.

To fix the hinge arm to the hinge plate, tighten screws (1) securely.

See Diagram 21.

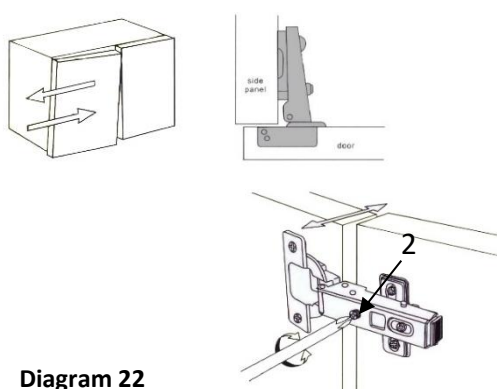


Door Lateral overlay adjustment

Adjust screws (2) to adjust the edge of the door so it is runs parallel with the outside face of the unit side panel.

Note: The edge of the door should be set back approx. 1.5mm from the edge of the unit.

Note: For the protection of the damper, it only allows a lateral adjustment. (left to right)

See Diagram 22.

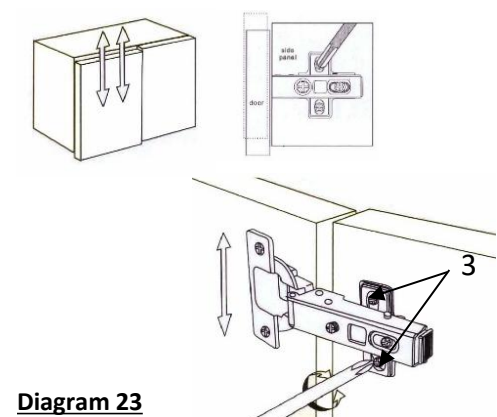


Door Vertical adjustment

The door can be vertically adjusted by turning the plate screws up and down. (3)

The door can be vertically adjusted by loosening the screws (3) on all of the hinge plates on the door and carefully moving the door up or down as required.

Once in position re-tighten all the screws (3) to secure in place.

See Diagram 23.

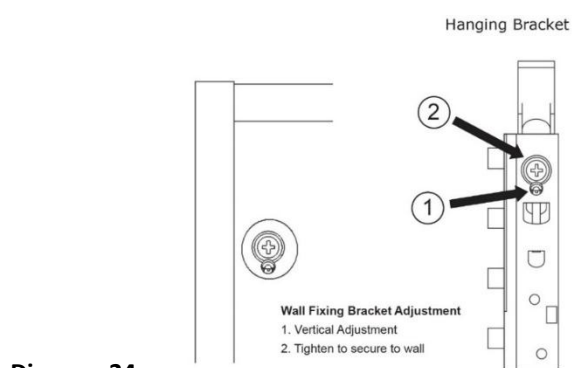

Hanging Bracket Adjustment

Adjust the units so they sit level, using a Pozidriv screw driver. (1)

Finally fix the units in position by tightening screws, using a Pozi screw driver. (2)

See Diagram 24.

Note: For all wall units, once fully adjusted & tightened fit the supplied cover caps into holes on back panel.

Diagram 24




— est. 1964 —

Installation Instruction

Plinth Fitting

Installation- Plinth Fitting

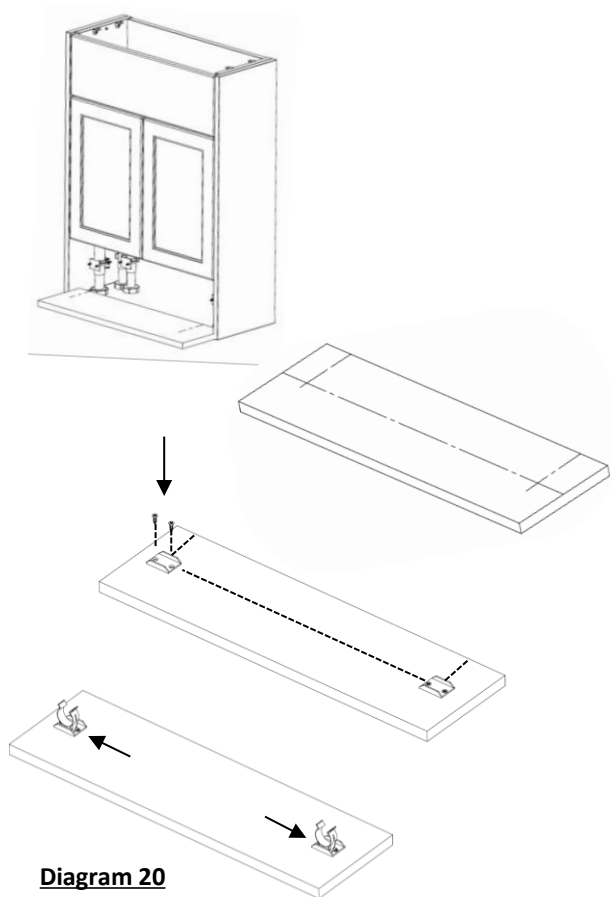

Plinth Fitting

Position the plinth between the cabinet end panels and mark the centre of the legs on to the back of the plinth.

Mark a centre line parallel to the long edge of the plinth.

Screw the plinth brackets to the back of the plinth using the **6x5/8 screws** provided.

Slide the clips into position and fit the plinth to the unit, ensuring the clip engage with the leg.

See Diagram 20.



— est. 1964 —

Installation Instruction

White High Gloss Cabinet End Panel

MATT
EDGING

GLOSS
EDGING

MATT
EDGING

White Gloss - This Side
(Remove Protective Film)

← **Gloss Edge**

Matt White - Reverse
Matt Edge →

MATT
EDGING

200927



— est. 1964 —



REGISTER YOUR GUARANTEE CLICK OR SCAN THE ABOVE QR CODE
OR VISIT – <https://www.bemodern.com/atlanta-bathrooms/support/guarantee/>

Customer Services

Tel: 0191 428 0444

Fax: 0191 489 0620