



FIREPLACES & STOVES | BATHROOM FURNITURE

**Four-Sided Extruded Trim
Instructions For Installation**

(Surround & Fire Supplied Separately)



Models Covered:



Four-Sided Extruded Trim

Contents

	Page
Parts, Fittings Supplied & Important Note	2
Trim Installation	3-5
Maintenance / Important Note	6

Parts & Fittings Supplied.

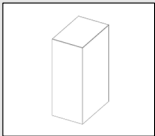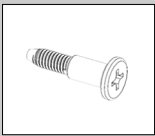REF	PARTS	DIAGRAM	QTY
A BOX-1	Trim		1
B BOX-1	Magnet		4
C BOX-1	Screw		1

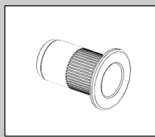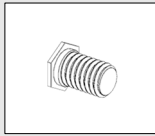REF	PARTS	DIAGRAM	QTY
D BOX-1	Rivnut		2
E BOX-1	Rivnut Bolt		2
F BOX-1			

Before you start

DO NOT dispose of the packaging until you have checked and made sure you have all the parts and fittings listed above. If not, contact: **BE MODERN - HELPLINE 0191 430 0901** who will be able to assist you with this and any other problems you may encounter.

When you are ready to start, make sure that you have the right tools to hand, plenty of space and a clean dry working area.

NOTE: Protect the surface you are working on to prevent any possible damage to the fire surround or floor.

Fire Instructions

For fire operating instructions please refer to the separate instructions supplied with the fire.

Care

To maintain the appearance of your new trim we recommend that it is dusted using a lint free cloth. Never use any form of abrasive cleaning products.

IMPORTANT NOTE:


Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the Suite is going to be fixed too.

The installer is therefore responsible for ensuring that suitable fittings are used as well as individual fitting situations and environments. All mechanical fixings, for holding the Suite in position, must be secured to a solid wall or structure.


Assembly & Installation Instructions

Trim Installation





Important: Before the fire is installed. The trim mounting kit must be fitted to the fire. For the fire installation, follow the installation instruction supplied with the fire.

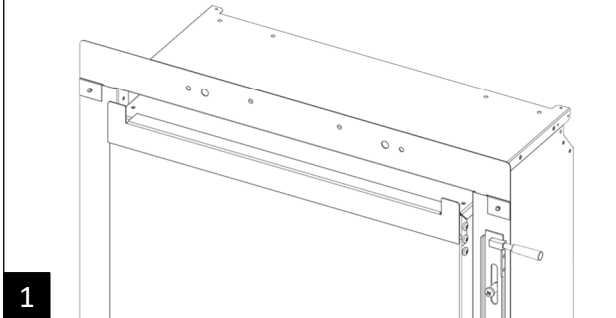

Place the supplied rivnut bolts through the hole in the fire from the rear. Holding the rivnut bolts in place. Securely tread the supplied rivnuts on to the bolts.

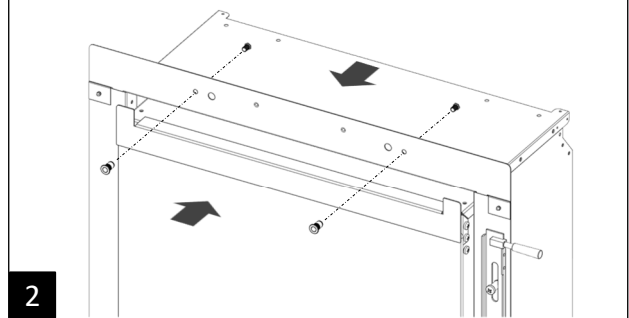


Rivnuts and bolts secured in place.

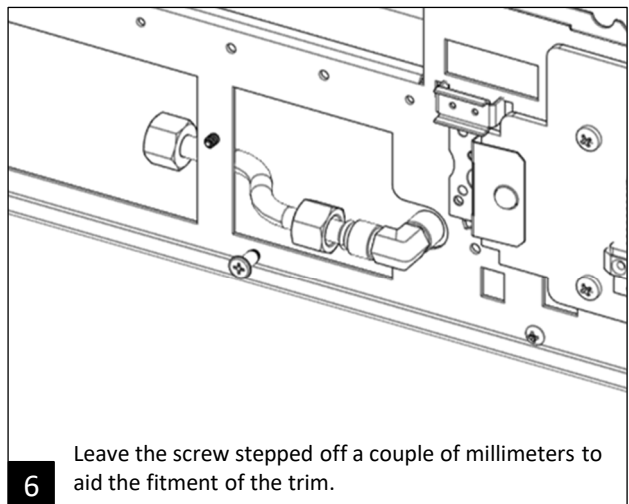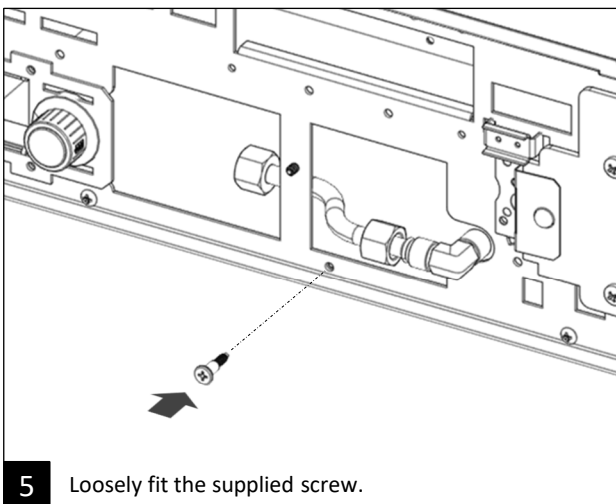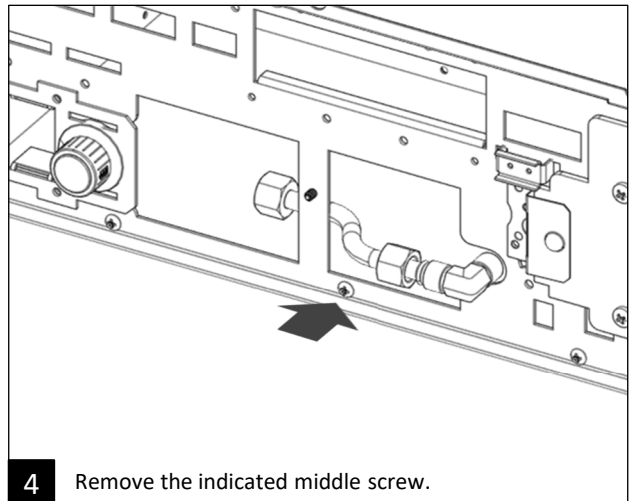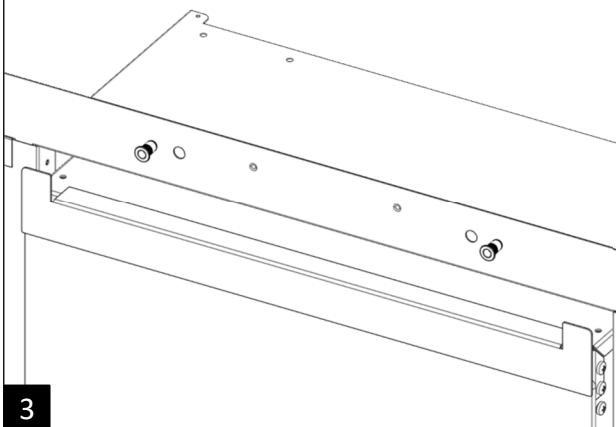


Assembly & Installation Instructions

Fit the fire in place as detailed in the fire instructions.
Note: This should be undertaken by a Qualified Gas Fitter.

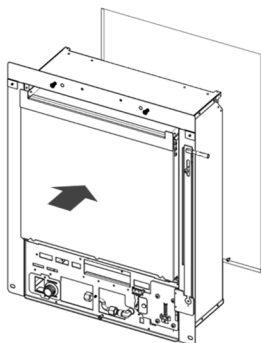


7

Fit the 4 supplied magnet to the rear of the trim. The magnets should be placed on each of the rear corner brackets

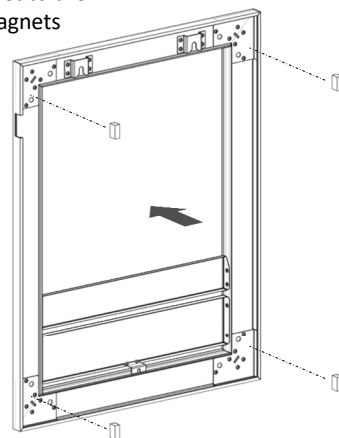


8

Magnets need to be position to stand off 15mm.

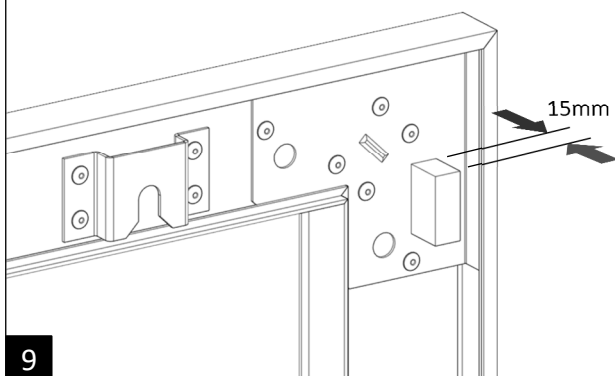


9

Magnets in place.

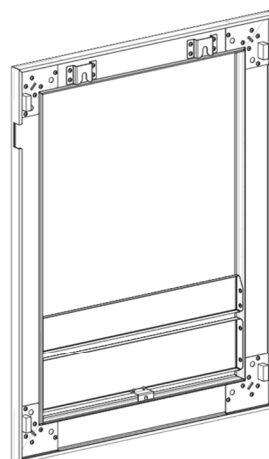


10

Lift the trim centrally over the fire and lower the trim on to the pre-installed mounting kit.

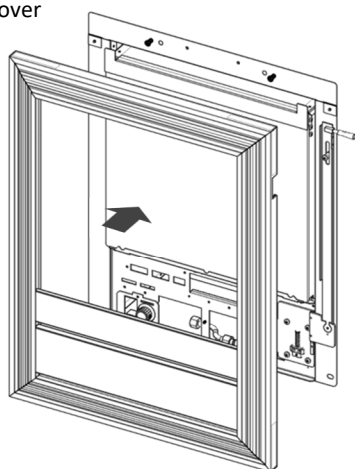


11


Trim lowered down on to the mount kit fittings

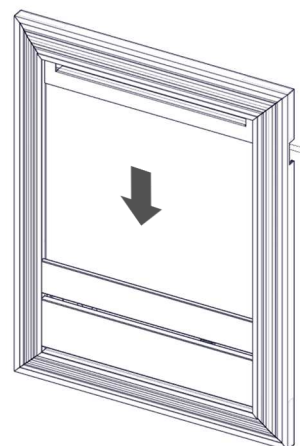

12

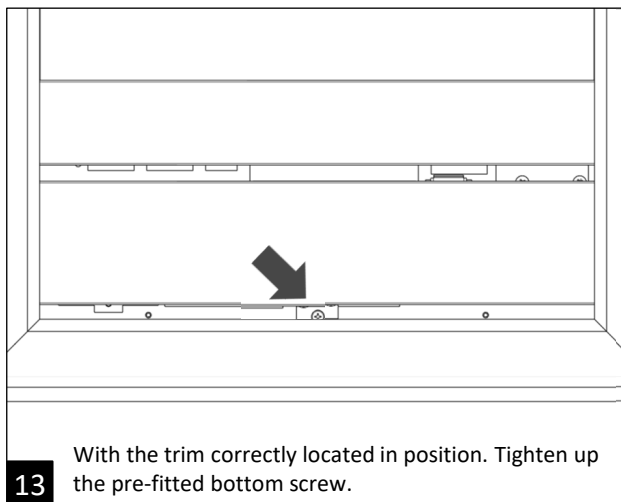

This completes the trim installation on the fire.

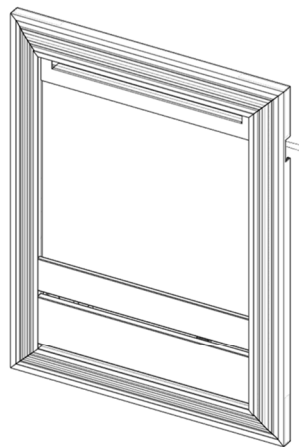

Maintenance

WARNING: Before any maintenance or whilst cleaning the exterior of the trim, the fire should be allowed to cooled down fully.

Cleaning the Fire Glass

To maintain the appearance of your new trim we recommend that it is dusted using a lint free cloth. Never use any form of abrasive cleaning products.

Cleaning the Fire Glass

Cleaning or polishing products are not recommended. Fingerprints or other marks on the front glass panel can be removed by a piece of soft, damp, lint-free cloth with a good quality household glass cleaner. The front glass panel should always be completely dried with a clean, lint-free cloth or paper towel.

CAUTION: Abrasive cleaners should not be used on the glass panel. Liquids should not be sprayed directly onto any surface of the unit.

Troubleshooting

Should you have any queries regarding this product please contact Customer Services on 0191 4300901 (option 4) or email us at customerservices@bemodern.co.uk

Recycling

All cardboard packing is recyclable

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the Suite is going to be fixed too.

The installer is therefore responsible for ensuring that suitable fittings are used as well as individual fitting situations and environments. All mechanical fixings, for holding the Suite in position, must be secured to a solid wall or structure.

Where appropriate please recycle packaging responsibly.
